

[Manuals.plus](#) /

› [CIRCLE JOY](#) /

› CIRCLE JOY Handheld Milk Frother with Stand Instruction Manual (Model EMF)

CIRCLE JOY EMF

CIRCLE JOY Handheld Milk Frother with Stand Instruction Manual

Model: EMF (KJBQ-21-BS)

1. PRODUCT OVERVIEW

The CIRCLE JOY Handheld Milk Frother is a battery-operated device designed to create creamy, velvety froth for various beverages. Its compact and ergonomic design makes it easy to use and store, enhancing your coffee and drink preparation experience.



Image 1: CIRCLE JOY Handheld Milk Frother with Stand.

2. PACKAGE CONTENTS

Your CIRCLE JOY Milk Frother package includes the following items:

- 1 x CIRCLE JOY Handheld Milk Frother
- 1 x Storage Stand

STORAGE BRACKET

Keep dry and more hygienic



Image 2: Milk Frother with its dedicated storage stand.

3. KEY FEATURES

- **Powerful Motor:** Quickly whisks and creates foam within 20 seconds.
- **Battery Operated:** Powered by 2 x AA batteries (not included).

- **Practical Storage Stand:** Keeps the frother organized and within reach.
- **Easy to Use:** Simple one-touch button operation.
- **Easy to Clean:** Designed for quick cleaning without disassembly.
- **Reliable Quality:** Features a food-grade 304 stainless steel rod and a durable, non-removable mixing head.
- **Versatile:** Suitable for frothing milk, mixing powdered drinks, and blending various liquids.

MILK FROTHER HANDHELD WITH STAND



Image 3: Overview of the frother's main features.



ERGONOMIC GRIP

Comfortable top operating buttons for easy one-handed operation

Image 4: Ergonomic design for comfortable handling.

4. SETUP

The CIRCLE JOY Milk Frother requires 2 x AA batteries for operation. Batteries are not included in the package.

1. Twist and remove the top cap of the frother.
2. Insert 2 x AA batteries according to the polarity markings inside the battery compartment.
3. Replace the top cap by twisting it back into place until secure.

POWERFUL MOTOR

Faster and richer foam



Requires 2AA batteries
(not included)



Image 5: Battery installation guide.

5. OPERATING INSTRUCTIONS

Follow these steps to use your CIRCLE JOY Milk Frother:

1. Pour your desired liquid (e.g., milk, coffee, protein shake) into a cup or pitcher. Ensure there is enough space for the liquid to expand as it froths.
2. Submerge the whisk head of the frother completely into the liquid.
3. Press and hold the power button located on the top of the frother. The whisk will begin to spin, creating froth.
4. Continue frothing for approximately 15-20 seconds, or until the desired consistency is achieved.
5. Release the button to stop the frother. Carefully remove the frother from the liquid.

HOW TO USE

Step 1 Bury the head of the whisk completely in the milk
▼



Step 2 Press and hold the button
Whip up a rich froth within a few seconds
▼



Step 3 Release the button and stop working
▼



Image 6: Step-by-step guide for frother operation.

Official Product Video: How to Use

Video 1: Official demonstration of the CIRCLE JOY Milk Frother in use, showing its frothing capabilities.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your frother. The frother is designed for easy cleaning without disassembly.

1. After each use, rinse the whisk head under running water immediately.
2. For a more thorough clean, immerse the whisk head in a glass of warm, soapy water and briefly turn on the frother to clean the whisk.
3. Rinse the whisk head again with clean water.
4. Wipe the frother body with a damp cloth. Do not submerge the main body of the frother in water.
5. Store the frother in its stand in a dry place.

Product Care Instructions: Hand Wash Only.



EASY TO CLEAN

No disassembly required



Image 7: Cleaning the frother's whisk head.

7. TROUBLESHOOTING

If you encounter any issues with your frother, please refer to the following common solutions:

Problem	Possible Cause	Solution
Frother does not turn on.	Batteries are dead or incorrectly inserted.	Replace with new AA batteries, ensuring correct polarity.
Weak frothing power.	Low battery power.	Replace with new AA batteries.
Liquid does not froth well.	Insufficient liquid volume or type of milk.	Ensure adequate liquid volume. Some milk types (e.g., skim milk) froth better than others.

8. SPECIFICATIONS

Feature	Detail
Brand	CIRCLE JOY
Model Name	KJBQ-21-BS
Item Model Number	EMF
Color	Black
Material	Stainless Steel
Power Source	Battery Powered (2 x AA batteries, not included)
Wattage	6 watts
Special Feature	Compact Design, Cordless, Lightweight
Included Components	Battery Operated Milk Frother with Stand
Product Care Instructions	Hand Wash Only
Item Weight	7.4 ounces
Package Dimensions	10.12 x 2.91 x 2.87 inches

9. WARRANTY AND SUPPORT

CIRCLE JOY offers a 1-year after-sale service and a 60-day satisfaction guarantee. If you encounter any issues with your product, please contact customer support for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question