

[Manuals.plus](#) /

› [uehba](#) /

› uehba P3700 Voice Universal Replacement Remote Control User Manual

uehba P3700

uehba P3700 Voice Universal Replacement Remote Control User Manual

Model: P3700 | Brand: uehba

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your uehba P3700 Voice Universal Replacement Remote Control. This remote is designed to be compatible with NVIDIA Shield TV Pro and NVIDIA Shield 4K TV models from 2015, 2017, and 2019, serving as a direct replacement for your original remote.



Figure 1: uehba P3700 Remote Control

SETUP

1. Battery Installation

The uehba P3700 remote control requires two (2) 1.5V AAA Alkaline batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.

- Slide the battery compartment cover back into place until it clicks securely.



Batteries needed:
2X AAA batteries
(not included)

Figure 2: Battery Compartment and Installation

2. Pairing the Remote Control

Pairing is required for the remote control to function with your NVIDIA Shield TV device. The remote is designed for easy pairing.

1. Ensure your NVIDIA Shield TV is powered on and accessible.
2. On your NVIDIA Shield TV, navigate to **Settings > Remote & Accessories**.
3. Select **Add Accessory** or **Pair a new accessory**.
4. While the Shield TV is searching, press and hold the **Select** button (center of the directional pad) and the **Back** button simultaneously on the uehba P3700 remote for approximately 5-7 seconds until the remote's indicator light begins to flash, indicating it is in pairing mode.
5. Once the remote appears in the list of available devices on your Shield TV screen, select it to complete the pairing process.
6. A confirmation message will appear on your screen once pairing is successful.

Note: If pairing fails, ensure the remote is within range of the Shield TV and try the pairing steps again. Refer to your NVIDIA Shield TV's user manual for specific pairing instructions if needed.

OPERATING THE REMOTE CONTROL

Button Functions

The uehba P3700 remote control features a standard layout for intuitive navigation and control of your NVIDIA Shield TV.



Figure 3: Remote Control Button Layout with Voice Function Highlight

- **Power Button** (⏻): Turns the NVIDIA Shield TV on or off.
- **Menu Button** (≡): Accesses context-sensitive menus or options.
- **Directional Pad (D-Pad)**: Navigates through menus and content (Up, Down, Left, Right).
- **Select/OK Button (Center of D-Pad)**: Confirms selections or plays/pauses content.
- **Back Button** (◀): Returns to the previous screen or menu.
- **Home Button** (●): Returns to the NVIDIA Shield TV home screen.
- **Voice Button (Microphone Icon)**: Activates the voice search or voice assistant function.
- **Volume Up/Down Buttons** (▲ / ▼): Adjusts the volume level.
- **Mute Button (Speaker with X)**: Mutes or unmutes the audio.
- **Play/Pause Button** (▶ ||): Plays or pauses media playback.

- **Fast Forward Button** (▶ ▶): Skips forward in media playback.
- **Rewind Button** (◀ ◀): Skips backward in media playback.
- **Netflix Button (Red Netflix Logo)**: Provides direct access to the Netflix application.

Voice Function

The uehba P3700 remote includes a voice function for convenient control and search. To use this feature:

1. Press and hold the **Voice Button** (microphone icon).
2. Speak clearly into the microphone located at the top of the remote.
3. Release the button when you have finished speaking.

Your NVIDIA Shield TV will process your voice command for search queries, app launching, or other supported voice commands.

Strong Singnal

Soft Plastic Buttions

ABS Matterial

Long lifespan



Voice Function

Figure 4: Key Features of the Remote Control

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.
- Avoid getting moisture into the button crevices or battery compartment.

Battery Replacement

Replace the batteries when the remote's performance degrades, such as reduced range, unresponsive buttons, or inconsistent backlight operation. Always replace both AAA batteries simultaneously with new alkaline batteries. Do not mix old and new batteries or different battery types.

TROUBLESHOOTING

If you encounter issues with your uehba P3700 remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is unresponsive or intermittent.	Low or dead batteries; remote is not paired; interference.	Replace batteries with new AAA alkaline batteries. Re-pair the remote with your NVIDIA Shield TV. Ensure no obstructions between the remote and the Shield TV.
Voice function is not working.	Remote not properly paired for voice; microphone obstructed; software glitch.	Ensure the remote is correctly paired (re-pair if necessary). Check that nothing is covering the microphone hole at the top of the remote. Restart your NVIDIA Shield TV.
Backlight is dim or not working.	Low batteries.	Replace batteries with new AAA alkaline batteries.
Remote does not control the NVIDIA Shield TV.	Not paired; incorrect model compatibility.	Follow the pairing instructions in the 'Setup' section. Confirm your NVIDIA Shield TV model is compatible (2015/2017/2019 4K TV or Pro models).

SPECIFICATIONS

Model Number	P3700
Brand	uehba
Product Dimensions	5.57 x 1.51 x 0.68 inches
Item Weight	1.62 ounces
Batteries Required	2 x 1.5V AAA Alkaline Batteries
Special Feature	Voice Search, Backlit Buttons
Color	Black
Max Number of Supported Devices	1
Compatible Devices	NVIDIA Shield TV Pro, NVIDIA Shield 4K TV (2015/2017/2019 All Models)

WARRANTY AND SUPPORT

For warranty information or technical support regarding your uehba P3700 remote control, please refer to the product packaging or contact the seller directly through your purchase platform. Keep your proof of purchase for any warranty claims.

Manufacturer: uehba

© 2024 uehba. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question