

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Dyson](#) /
- › [Dyson Wash G1™ Wet Floor Vacuum Cleaner WR01 User Manual](#)

Dyson WR01

Dyson Wash G1™ Wet Floor Vacuum Cleaner WR01 International Version - User Manual

Model: WR01 | Brand: Dyson

INTRODUCTION

The Dyson Wash G1™ is engineered to powerfully tackle spills, debris, and tough stains on hard floors. It features two counter-rotating motorized rollers covered in highly absorbent microfibre, designed to remove both wet and dry debris in a single pass, leaving hard floors sparkling clean. This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Dyson Wash G1™.

SETUP

1. Unpacking and Assembly

Carefully remove all components from the packaging. The Dyson Wash G1™ typically includes the main body, handle, cleaning head with rollers, clean water tank, dirty water tank, and charging dock with cable. Assemble the handle to the main body until it clicks securely into place.

2. Initial Charging

Before first use, fully charge the appliance. Place the Dyson Wash G1™ on its charging dock. Ensure the charging cable is securely connected to the dock and a power outlet. The battery indicator lights will show charging progress. A full charge can take several hours.

3. Filling the Clean Water Tank

Locate the clean water tank, usually positioned on the upper part of the main body. Remove the tank and fill it with clean tap water up to the indicated maximum fill line. For optimal cleaning, use only water or Dyson-approved cleaning solutions. Reattach the tank securely.

washG1

Powerful, hygienic floor washing.

Rapidly removes wet and dry dirt, and tough stains.

Covers up to 290m².¹

dyson



Image: The Dyson Wash G1 in action, demonstrating its ability to clean spills on hard floors. This image highlights the powerful and hygienic floor washing capabilities of the device.

OPERATING INSTRUCTIONS

1. Powering On and Off

Press the power button, typically located on the handle, to turn the appliance on. Press it again to turn off. The machine will begin dispensing water and rotating the rollers once powered on.

2. Cleaning Modes

The Dyson Wash G1™ offers three cleaning modes to suit different cleaning needs:

- **Level 1:** For light spills and general maintenance cleaning.
- **Level 2:** For everyday dirt and moderately soiled areas.
- **Level 3:** For tough, sticky liquids and dried-on stains.

Select the desired mode using the mode selection button on the handle. The hydration level will adjust accordingly, ensuring optimal water distribution across the rollers.



Image: A detailed view of the Dyson Wash G1's cleaning head, showing the counter-rotating rollers actively cleaning a spill. This illustrates the advanced technology designed for effective hard floor washing.

3. Maneuvering and Coverage

The double rollers spin in opposite directions, making the Dyson Wash G1™ easy to maneuver. It is designed to reach low under furniture and into awkward spaces. The appliance can wash up to 290 square meters of hard flooring on a single tank of water, with a battery life of up to 35 minutes.

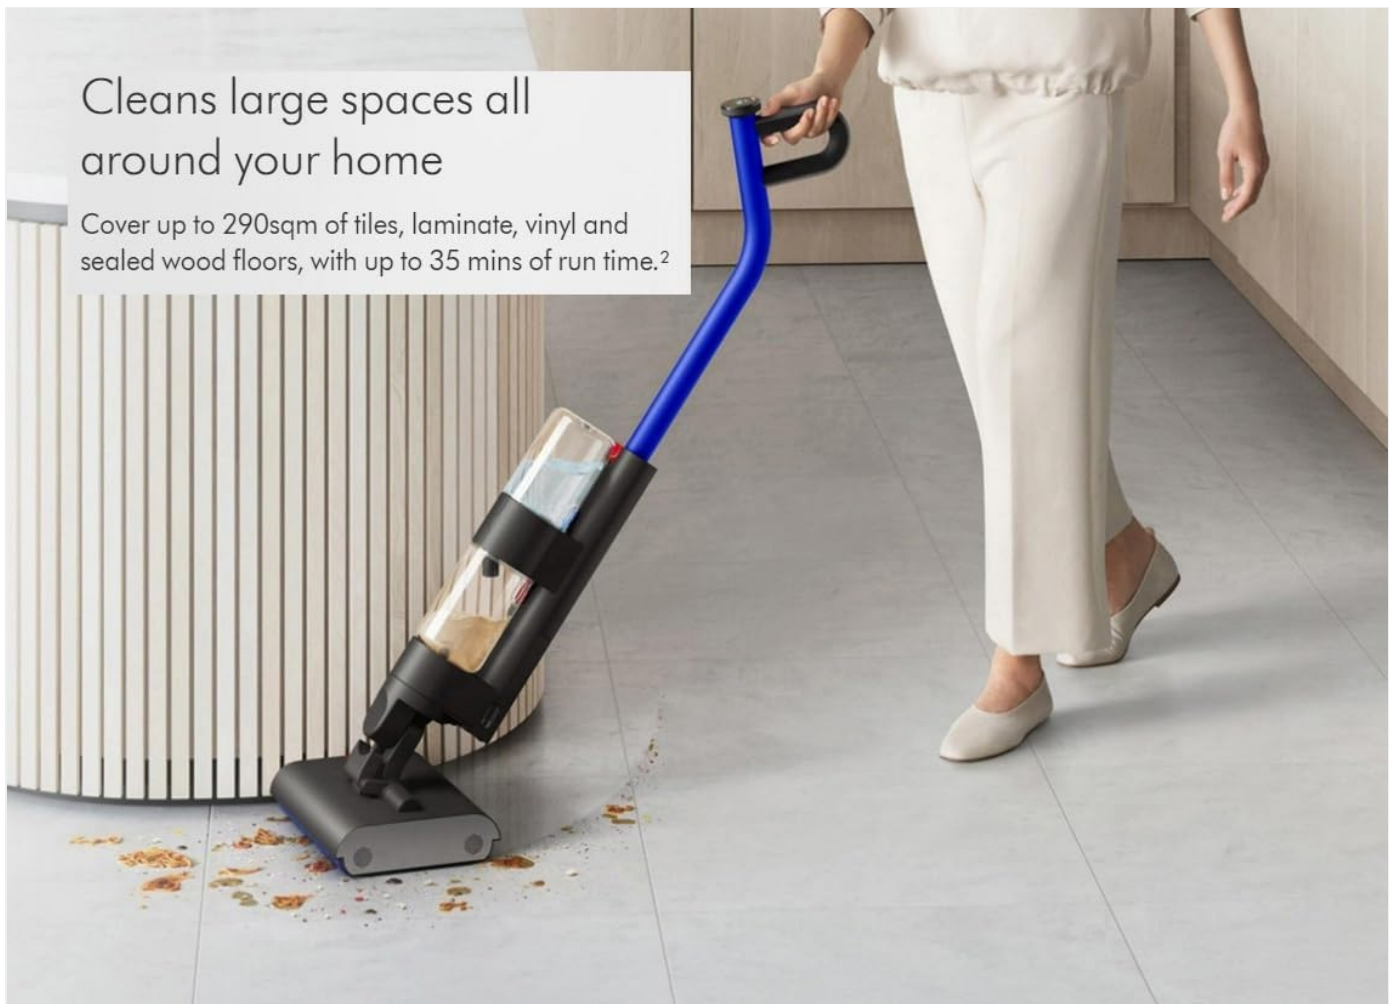


Image: A user operating the Dyson Wash G1 on a large tiled floor, demonstrating its capability to clean extensive areas efficiently. The image emphasizes the product's suitability for covering large spaces.

MAINTENANCE

1. Emptying the Dirty Water Tank

After each use, or when the dirty water tank is full, remove it from the appliance and empty its contents. The Dyson Wash G1™ separates dirty water from dry debris for hygienic disposal. Rinse the tank with clean water and allow it to air dry before reattaching.

2. Cleaning the Rollers and Debris Tray

The microfibre rollers and debris tray should be cleaned regularly. Secondary brush bars with nylon bristles strip dry debris from the rollers, and extraction plates squeeze off dirty water. Remove the rollers and debris tray, rinse them thoroughly under running water, and ensure all debris is removed. Allow them to dry completely before reinstallation.

Cleaning performance

Removes wet and dry dirt. In one go.

Dyson's motorised rollers are engineered to agitate stains twice with each pass, for rapid stain removal.



Image: An illustrative diagram detailing the internal mechanism of the Dyson Wash G1, specifically how it separates wet and dry dirt during the cleaning process. This highlights the efficient debris management system.

3. Self-Clean Cycle

The Dyson Wash G1™ features a self-clean cycle. Place the appliance on its charging dock and activate the self-clean function (refer to your quick start guide for specific button location). This cycle flushes the entire system in approximately 140 seconds, preparing it for the next use while charging.

And even cleans itself

Set the Self-clean cycle to flush the system while the machine charges on the dock.

In as little as 140 seconds it's ready for your next clean.



Image: The Dyson Wash G1 positioned on its charging dock, accompanied by a diagram illustrating the self-clean cycle. This visual explains how the machine cleans itself automatically.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance not turning on	Battery is depleted.	Place the appliance on the charging dock and ensure it is fully charged.
Poor cleaning performance	Dirty rollers or full dirty water tank.	Clean the rollers and empty the dirty water tank. Run the self-clean cycle.
Water not dispensing	Clean water tank is empty or not properly installed.	Refill the clean water tank and ensure it is securely clicked into place.
Unpleasant odor from appliance	Buildup of debris or dirty water inside the machine.	Perform a thorough self-clean cycle. Ensure dirty water tank and rollers are cleaned after each use.

SPECIFICATIONS

Brand: Dyson

Model: WR01

Color: Blue Black

Product Dimensions: 22.5 x 30 x 114 cm

Noise Level: 82 dB

Runtime: Up to 35 minutes

Special Features: Wet/Dry, Self-Cleaning, Long Battery Life, Large Coverage Area

Filter Type: Cartridge

Surface Recommendation: Hard Floor

Power Source: Battery Powered

WARRANTY AND SUPPORT

This Dyson Wash G1™ WR01 International Version comes with a **1-Year Seller Warranty** for manufacturing defects and damage. For warranty claims or technical support, please contact the seller, Capital.Trading, directly through your purchase platform or refer to the contact information provided with your purchase documentation.

For additional information and support, you may also visit the official Dyson website or contact their customer service for general product inquiries.

