

Narcissus S867-2

Narcissus S867-2 Electric Diamond Abrasives Knife Sharpener User Manual

INTRODUCTION

Thank you for choosing the Narcissus S867-2 Electric Diamond Abrasives Knife Sharpener. This manual provides essential information for the safe and effective use of your new sharpener. Please read all instructions carefully before operation and retain this manual for future reference.

The Narcissus S867-2 is designed for quick and efficient sharpening of various knife types, including stainless steel and ceramic, as well as scissors. It features a dual-stage sharpening system with diamond abrasives for optimal results.

SAFETY INSTRUCTIONS

- Always keep hands clear of the sharpening slots during operation.
- Ensure the sharpener is placed on a stable, flat surface before use.
- Do not immerse the sharpener in water or any other liquid.
- Unplug the sharpener from the power outlet when not in use or before cleaning.
- Keep out of reach of children. This appliance is not a toy.
- Do not attempt to sharpen blades that are excessively thick or damaged, as this may damage the sharpener or the blade.
- Use only with the provided power adapter.
- Avoid applying excessive pressure when sharpening, as this can damage the blade or the sharpener.

PRODUCT COMPONENTS

The Narcissus S867-2 Electric Knife Sharpener includes the following key components:

- **Crude Sharpening Slot:** For initial sharpening of dull blades (360# diamond abrasives).
- **Fine Sharpening Slot:** For polishing and refining the blade edge (600# diamond abrasives).

- **Scissors Sharpening Slot:** Dedicated slot for sharpening scissors (600# diamond abrasives).
- **Power Switch:** To turn the unit on and off.
- **Metal Dust Collection Box:** Collects metal shavings during sharpening for easy disposal.
- **Anti-slip Foot Pads:** For enhanced stability during use.



Image: Internal view of the sharpener, highlighting the 360# and 600# diamond abrasive wheels for different sharpening stages and scissors.

SETUP

1. Unpack the Narcissus S867-2 Electric Knife Sharpener and ensure all components are present.
2. Place the sharpener on a clean, dry, and stable countertop or table. Ensure the logo faces towards you for correct orientation of the sharpening slots.
3. Plug the power adapter into the sharpener's power port, then plug the adapter into a standard 100-240V AC electrical outlet.



Image: The sharpener connected to its power adapter and plugged into an electrical outlet.

OPERATING INSTRUCTIONS

Sharpening Knives (Stainless Steel & Ceramic)

1. Turn on the sharpener using the power switch. The indicator light will illuminate.
2. **Stage 1: Crude Sharpening (for dull blades):** Insert the knife blade into the 'Crude' slot at an angle, ensuring it stays in close contact with the outer wall of the slot. Pull the knife slowly and steadily from the heel to the tip, applying light, consistent downward pressure. Repeat this 2-5 times, alternating sides if necessary, until the blade feels sharper.
3. **Stage 2: Fine Polishing (for refining and finishing):** Move the knife to the 'Fine' slot. Insert the blade at an angle, maintaining contact with the outer wall. Pull the knife slowly and steadily from heel to tip, applying very light pressure. Repeat this 2-5 times to polish the edge and remove any burrs.
4. After sharpening, carefully wipe the blade with a damp cloth to remove any metal dust.

2-Stage Knife Sharpener



Image: Visual guide for the two-stage knife sharpening process, illustrating crude and fine slots.

Using Tips



1

Place the machine facing to you



2

Crude Sharpening for quick sharpening. Place the blade in the groove, pulling repeatedly



3

Fine Sharpening for Polishing

Image: Step-by-step instructions for knife sharpening, showing proper knife placement and pulling direction.

Sharpening Scissors

1. Turn on the sharpener using the power switch.
2. Open the scissors and insert one blade into the dedicated 'Scissors' slot.
3. Pull the scissor blade through the slot from the pivot to the tip, applying light, consistent pressure.
4. Repeat for the other scissor blade. Sharpen each blade 2-3 times.
5. After sharpening, carefully wipe the scissor blades with a damp cloth.

Special Function for Sharpening Scissors



Image: Instructions for sharpening scissors, showing the correct insertion and pulling motion.

MAINTENANCE

1. **Cleaning the Dust Collection Box:** Regularly empty the metal dust collection box located at the bottom of the sharpener. To do this, unplug the unit, slide out the box, empty the metal shavings, and reinsert it securely.
2. **Exterior Cleaning:** Wipe the exterior of the sharpener with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
3. **Storage:** Store the sharpener in a dry place, away from direct sunlight and moisture, when not in use.



Image: Removing the metal dust collection box for cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sharpener does not turn on.	Not plugged in correctly; Power outlet malfunction; Power switch off.	Ensure the power adapter is securely plugged into both the sharpener and a working electrical outlet. Check the power switch is in the 'ON' position.
Knives are not sharpening effectively.	Incorrect sharpening technique; Blade is severely damaged; Abrasive wheels are worn.	Review the 'Operating Instructions' for proper technique. Ensure light, consistent pressure and correct angle. Severely damaged blades may require professional sharpening. If abrasive wheels are worn, contact customer support.
Excessive vibration or noise.	Unit not on a stable surface; Internal component issue.	Ensure the sharpener is on a flat, stable surface. Check that the anti-slip foot pads are clean and intact. If the issue persists, discontinue use and contact customer support.

SPECIFICATIONS

- **Model Number:** S867-2
- **Material:** Diamond Abrasives
- **Product Dimensions:** 8.2"L x 2.9"W x 2.7"H
- **Item Weight:** 1.74 Pounds
- **Motor:** 30-watt DC motor
- **Voltage:** 100-240V (Wide Voltage Design)
- **Included Components:** Knife sharpener, Power Adapter

WARRANTY AND SUPPORT

Narcissus is committed to providing exceptional customer service. Your Narcissus S867-2 Electric Knife Sharpener comes with:

- A **12-month free replacement or refund policy** from the date of purchase.
- An extended **24-month after-sales service**.

Should you encounter any quality issues or require assistance, please contact Narcissus customer support

immediately. We recommend reading this instruction manual thoroughly before the first use to ensure proper operation and to maximize the lifespan of your sharpener.