

[Manuals.plus](#) /

› [FunFanso](#) /

› FunFanso 9 FT Gingerbread House Inflatable Archway Instruction Manual

FunFanso CH23196-270

FunFanso 9 FT Gingerbread House Inflatable Archway Instruction Manual

Model: CH23196-270

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your FunFanso 9 FT Gingerbread House Inflatable Archway. This product is designed to enhance your outdoor holiday decorations with its festive gingerbread house design, complete with a gingerbread man, colorful gift boxes, and built-in LED lights. Please read these instructions carefully before use to ensure safe and proper operation.

PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present in your package:

- 1 x FunFanso 9 FT Gingerbread House Inflatable Archway
- 1 x Power Adapter (with 10 FT Cable)
- 4 x Grounding Ropes
- 6 x Grounding Stakes



Figure 1: All items included in the package: the Gingerbread House Inflatable Arch, power adapter with 10ft cable, four grounding ropes, and six grounding stakes.

SETUP INSTRUCTIONS

1. **Unpack and Position:** Carefully remove the inflatable archway from its packaging. Choose a flat, clear outdoor location for placement, away from sharp objects, heat sources, and overhead obstructions.
2. **Close Zipper:** Locate the zipper at the bottom of the inflatable and ensure it is completely closed. This is crucial for proper inflation.
3. **Connect Power:** Plug the power adapter into a standard outdoor electrical outlet. The built-in blower will automatically begin to inflate the archway. Full inflation typically occurs within approximately 3 minutes.
4. **Secure the Inflatable:** Once fully inflated, use the provided grounding ropes and stakes to secure the archway. Attach the ropes to the designated loops on the inflatable and firmly insert the stakes into the ground. This prevents the inflatable from being displaced by wind.



Installation Steps



1 Zip up the bottom zipper



2 Plug in power adapter



3 Hook the inflatable with ropes



4 Secure the stakes to the ground

Figure 2: A visual guide detailing the four installation steps: zipping up the bottom, plugging in the power adapter, hooking the inflatable with ropes, and securing stakes to the ground.

Your browser does not support the video tag.

Video 1: This video provides a visual demonstration of the 9-foot Christmas Inflatable Gingerbread House Archway, showcasing its appearance and features when set up outdoors.



Figure 3: This image emphasizes the ease of setup for the Gingerbread House Archway, showing it illuminated at night with text indicating a powerful blower for quick inflation.

OPERATING INSTRUCTIONS

Operation of your inflatable archway is straightforward:

- **Power On:** Once the power adapter is plugged into an electrical outlet, the built-in blower will activate, inflating the archway and illuminating the internal LED lights.
- **Power Off:** To deflate and turn off the archway, simply unplug the power adapter from the electrical outlet.



Figure 4: This image shows the fully inflated 9-foot Gingerbread House Archway at night, featuring a gingerbread man and gift boxes, with two children standing in front, highlighting its festive appearance and scale.



Figure 5: A daytime view of the 9-foot Gingerbread House Inflatable Archway, illustrating its impressive height and the 'Merry Christmas' banner, suitable for yard decoration.

MAINTENANCE

- **Cleaning:** To clean the inflatable, gently wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners, as these can damage the material.
- **Material Durability:** The archway is crafted from high-quality, IP44 waterproof 190T polyester, designed to resist rain and snow.
- **Storage:** After the holiday season, unplug the unit and open the bottom zipper to allow for quick deflation. Once deflated, fold the archway compactly and store it in a dry, cool place, away from direct sunlight and pests, to ensure its longevity.





Ip44 Waterproof



Windproof



Anti-snow



Wear-resistant

Figure 6: The image showcases the weatherproof design of the inflatable archway, made from durable 190T polyester, with icons indicating its IP44 waterproof, windproof, anti-snow, and wear-resistant properties.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable not fully inflating	Power not connected, zipper open, blower obstructed, or weak blower.	Ensure power adapter is securely plugged in. Check that the bottom zipper is completely closed. Clear any obstructions from the blower intake. If the blower seems weak, gently assist the inflatable by lifting it during initial inflation.
Lights are not working	Power connection issue or individual LED lights have failed.	Verify the power adapter is plugged in. Note that individual LED lights may have a limited lifespan and can burn out over time.

Problem	Possible Cause	Solution
Inflatable falls over easily	Improper anchoring or strong winds.	Ensure all grounding stakes and ropes are properly installed and securely fastened. Re-anchor the inflatable if strong winds are anticipated.

Safety Information

Always ensure the inflatable is properly anchored using the provided stakes and ropes to prevent it from becoming a projectile in high winds. Keep the inflatable away from heat sources and provide adequate ventilation.

Specifications

Feature	Detail
Brand	FunFanso
Model Number	CH23196-270
Dimensions (L x W x H)	60 x 36 x 108 inches (5 ft x 3 ft x 9 ft)
Item Weight	4 Pounds
Material	190T Polyester
Special Features	Easy Deflate, Fade Resistant, Foldable, Long Lasting, Wear Resistant, IP44 Waterproof
Light Color	Bright White
Power Cord Length	10 feet

Warranty and Support

Specific warranty details are not provided in this manual. For any product-related inquiries, technical assistance, or customer support, please refer to the contact information provided with your purchase or visit the official FunFanso website. FunFanso is committed to providing dedicated customer support to ensure your complete satisfaction.