

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN VSQS1559 Replacement Remote Control Instruction Manual for Panasonic VCR Combo

PERFASCIN VSQS1559

PERFASCIN VSQS1559 Replacement Remote Control

Instruction Manual for Panasonic VCR Combo Models

INTRODUCTION

This manual provides instructions for the PERFASCIN VSQS1559 replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various Panasonic VCR Combo models, requiring no programming for immediate use.

Please review this manual thoroughly to ensure proper setup and operation of your new remote control.

COMPATIBILITY

The VSQS1559 replacement remote control is compatible with the following Panasonic VCR Combo models:

- PV8450U
- PV8550
- PV8451
- VHQ860
- PV8451K
- PV-8450
- PV-8451
- PV-8453

If your specific model is not listed, please verify compatibility before use. This remote is a direct replacement and does not require programming.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the

compartment.

4. Slide the battery cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

Initial Use

This replacement remote control is pre-programmed and ready to use with compatible Panasonic VCR Combo models immediately after battery installation. No additional programming or pairing is required.

OPERATING INSTRUCTIONS

The remote control features a standard layout for VCR and TV functions. Refer to the image below for button identification and their primary functions.



Image: Front view of the PERFASCIN VSQS1559 remote control, displaying the button layout.

Key Functions:

- **POWER:** Turns the VCR Combo unit on or off.
- **VCR / TV:** Toggles between VCR and TV control modes.
- **INPUT:** Selects the input source on the connected device.
- **PLAY (▶):** Starts playback of a tape.
- **STOP (■):** Stops playback or recording.
- **REW (◀◀):** Rewinds the tape.
- **FF (▶▶):** Fast forwards the tape.
- **PAUSE (■ ■):** Pauses playback or recording.
- **REC / TIME (●):** Initiates recording or sets recording time.
- **Number Buttons (0-9, 100, ADD/DEL):** Used for direct channel selection, time input, or menu navigation.

- **VOL (+/-):** Adjusts the volume level.
- **CH / TRACKING (▲/▼):** Changes channels or adjusts tracking during VCR playback.
- **DISPLAY / ENTER:** Displays on-screen information or confirms selections.
- **SAP/HI-FI, INDEX, SPEED, COUNTER, RESET, ZERO/1MIN:** Specific VCR functions for audio, indexing, playback speed, tape counter, and reset.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or chemical solvents, as these can damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the VCR Combo unit's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the VCR Combo unit.
- **Specific buttons not working:**
 - Verify that the remote is in the correct mode (e.g., VCR mode for VCR functions, TV mode for TV functions).
 - If only a few buttons are unresponsive, try replacing the batteries.

If issues persist after following these steps, please refer to the support section.

SPECIFICATIONS

Feature	Detail
Model Number	VSQS1559
Product Dimensions	5 x 2 x 0.6 inches (approximately 12.7 x 5.1 x 1.5 cm)
Item Weight	1 ounce (approximately 28 grams)
Power Source	2 x AAA Batteries (not included)
Special Feature	No Programming Required
Color	Black

4.7 cm / 1.85 in



19.2 cm / 7.56 in





Image: Remote control with overlaid measurements indicating its dimensions.

WARRANTY AND SUPPORT

This replacement remote control is designed for reliable performance. In the event of any issues or if you require assistance, please contact the seller or manufacturer for support.

For specific warranty details, please refer to the purchase documentation or contact the point of sale. If you have questions regarding compatibility or functionality, customer service is available to assist you.

© 2024 PERFASCIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0D9JW89KD>

More documents and user manuals: <https://manuals.plus/>