

[Manuals.plus](#) /

› [maysida](#) /

› Maysida Dance Mat TW821-1 Instruction Manual

maysida TW821-1

Maysida Dance Mat TW821-1 Instruction Manual

Model: TW821-1

1. INTRODUCTION

The Maysida Dance Mat TW821-1 is an interactive 4-in-1 musical playmat designed for children aged 3 and up. This extra-large mat (38*59 inches) supports single or double-player modes, offering various engaging activities including dancing, memory challenges, and instrument play. It features 12 light-up buttons, adjustable volume, and multiple difficulty levels to enhance coordination, memory, and physical activity.



Image 1: The Maysida Dance Mat highlighting its four versatile play modes.

2. SETUP

2.1 Battery Installation

The dance mat requires batteries (not included). Locate the battery compartment on the control console. Use a screwdriver to open the compartment, insert the required batteries according to the polarity indicators, and securely close the compartment.

2.2 Initial Power On

After installing batteries, press the power button on the control console to turn on the dance mat. The LED display will illuminate, and a welcome sound may play.

3. OPERATING MODES

The Maysida Dance Mat offers multiple modes for varied play experiences. Use the buttons on the central console to select and adjust modes, volume, and difficulty levels.

3.1 Dance Mode (1-Player & 2-Player)

In Dance Mode, players follow the light-up arrows on the mat, stepping on them in sequence to the music. The mat supports both single and double-player gameplay, allowing for solo practice or friendly competitions. There are 9 difficulty levels to challenge players as their skills improve.



Image 2: Children engaging in the double-player dance mode, promoting interaction and coordination.

3.2 Memory Mode

This mode challenges cognitive skills by requiring players to remember and replicate sequences of light-up buttons. It features 10 levels of increasing difficulty, aiding in memory retention and reaction time.

3.3 Instrument Mode

Transform the dance mat into a musical instrument. This mode includes an 8-note piano keyboard and percussion instrument effects (cymbal, toms, snare, bass drum), encouraging musical exploration and rhythm development.



Image 3: A child and adult interacting with the mat's instrument mode, simulating piano and drum sounds.

3.4 Free Challenge Dance Mode

This mode allows players to dance freely without specific instructions, promoting creativity and self-expression. It's ideal for casual play and exploring different movements.

3.5 Volume and Levels Adjustment

The mat features adjustable volume with 5 speed settings and 9 difficulty levels across various modes, allowing customization for different ages and skill sets.

3.6 Bluetooth Connectivity

Connect your device via Bluetooth to play your own music through the mat's speakers, enhancing the dance experience with personalized soundtracks.

Your browser does not support the video tag.

Video 1: An overview of the Maysida 4-in-1 Dance Mat, demonstrating its various features and modes.

4. MAINTENANCE & CARE

The Maysida Dance Mat is made from non-toxic vinyl and non-slip backing premium PEVA quality material, designed for durability and safety.

- **Cleaning:** To clean the mat, simply wipe it with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** The mat is easy to fold and store. Fold it neatly and place it in a toy box, closet, or bag to protect it from damage.
- **Handling:** Avoid sharp objects that could puncture or tear the mat.



Image 4: The dance mat can be easily folded for compact storage.

5. TROUBLESHOOTING

- **No Power:** Ensure batteries are correctly installed with the correct polarity. Replace old batteries with new ones if necessary.
- **Unresponsive Buttons:** Check for any debris or obstruction under the mat's surface. Ensure the mat is laid flat on an even surface.
- **Sound Issues:** Adjust the volume using the dedicated buttons. If using Bluetooth, ensure your device's volume is also up and it's properly connected.
- **Bluetooth Connection Failure:** Ensure the mat's Bluetooth mode is active and your device's Bluetooth is turned on. Try restarting both the mat and your device.

6. SPECIFICATIONS

- **Model Number:** TW821-1
- **Product Dimensions:** 38.18 x 57.99 x 0.15 inches
- **Item Weight:** 2.29 pounds
- **Manufacturer Recommended Age:** 3 years and up
- **Material:** Non-toxic vinyl & non-slip backing PEVA
- **Features:** 4-in-1 modes (Dance, Memory, Instrument, Free Challenge), 12 buttons (6x6 keys), 9 difficulty levels, 5 adjustable volumes, 1-player & 2-player modes, Bluetooth connectivity.

7. SAFETY INFORMATION

- **CPSIA Warning:** Choking Hazard Small Parts. Not for children under 3 years.
- Always supervise children during play.
- Ensure the mat is placed on a flat, stable surface to prevent falls.
- Keep away from water and moisture to prevent electrical damage.

8. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries, please refer to the documentation included with your product packaging or visit the official Maysida website. Specific warranty terms and contact details are typically provided by the manufacturer.