

[Manuals.plus](#) /

> [JmGO](#) /

> JMGO PicoFlix Bottle Rotating Gimbal Projector User Manual

JmGO J61-7K5

JMGO PicoFlix Bottle Rotating Gimbal Projector User Manual

Model: J61-7K5

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your JMGO PicoFlix Bottle Rotating Gimbal Projector. Please read this manual thoroughly before using the product to ensure safe and optimal performance. The PicoFlix is a portable smart projector designed for versatile entertainment, featuring high-quality visuals, integrated smart TV capabilities, and a flexible gimbal for easy projection.



Image: The JMGO PicoFlix projector, a compact, cylindrical device with a lens on one side and a speaker grille on the other, designed for portability.

WHAT'S IN THE BOX

- Remote Control (Battery Included)
- Multi-language User Manual

- Type-C Power Cord + US Adaptor
- Eco-friendly EPP Carrying Bag
- PicoFlix Portable Projector (Built-in Battery)

KEY FEATURES

- **Stunning Visual Brilliance:** 420 ISO Lumens brightness, 1080P FHD resolution, HDR10 support, 124% Rec.709 color gamut, and 400:1 FOFO contrast ratio for vivid and clear images.
 - **Portable and Long-lasting:** Built-in 10,000mAh battery providing up to 4.5 hours of movie watching (eco mode) or 7 hours of music playback. Type-C PD3.0 charging for convenience.
 - **Integrated Smart Entertainment:** Features Google TV with native Netflix support, access to over 10,000 apps via Google Play, Google Assistant AI for voice control, and built-in Google Cast.
 - **Flexible Viewing with Gimbal:** Integrated 127° rotating gimbal allows projection at any angle. Real-time auto screen correction ensures sharp, flawless frames.
 - **Immersive Surround Sound:** Built-in 10W dual speakers with Dolby Audio for rich, clear sound. Functions as a Bluetooth speaker.
 - **Connectivity:** Wi-Fi, Bluetooth, HDMI (ARC), USB, Type-C (PD3.0).
 - **Eye Protection:** Smart Eye Protection feature for comfortable viewing.
-

Brilliant Viewing, On the Go

420 ISO
Lumens

 124%
Rec.709

1080P

HDR 10



Image: The JMGO PicoFlix projector highlighting its compatibility with Google TV and Netflix, indicating a wide range of streaming options.

SETUP

1. Initial Power On and Charging

1. Unpack the PicoFlix projector and all accessories from the box.

2. Connect the Type-C power cord to the projector's Type-C port and the US adaptor to a power outlet. Allow the projector to charge fully before first use. The charging indicator light will show the charging status.
3. Press and hold the power button on the projector to turn it on.

2. Remote Control Setup

1. Ensure the batteries are correctly inserted into the remote control.
2. Follow the on-screen prompts to pair the remote control with the projector via Bluetooth.

3. Network Connection

1. Once powered on, navigate to the settings menu using the remote control.
2. Select "Network & Internet" and choose your Wi-Fi network.
3. Enter the Wi-Fi password to connect the projector to the internet.

4. Google TV Setup

1. Follow the on-screen instructions to set up Google TV. This typically involves signing in with your Google account.
 2. Allow the system to download and install any necessary updates.
-

Long-lasting Batteries for Enduring Happiness

4.5H
ECO Mode

7.0H
Music Mode

10000mAh



Image: The JMGO PicoFlix projector demonstrating its automatic screen fitting and image correction capabilities, projecting a clear image onto a wall.

OPERATING INSTRUCTIONS

1. Projection Adjustment

- **Gimbal Rotation:** The integrated gimbal allows you to rotate the projector up to 127 degrees to project onto walls,

ceilings, or floors. Simply adjust the projector's body to the desired angle.

- **Auto Focus & Keystone Correction:** The PicoFlix features real-time auto focus and keystone correction. The image will automatically adjust for clarity and shape when the projector is moved or repositioned.
- **Manual Adjustment (if needed):** If automatic correction is not perfect, you can fine-tune focus and keystone settings in the projector's display settings menu.



Image: The JMGO PicoFlix projector demonstrating its flexible gimbal, projecting an image onto the ceiling for comfortable viewing.

2. Content Playback

- **Streaming Apps:** Use the Google TV interface to access pre-installed apps like Netflix, YouTube, and other streaming services. Download additional apps from the Google Play Store.
- **Google Cast:** Cast content directly from your compatible smartphone, tablet, or computer to the projector using Google Cast.
- **External Devices:** Connect external devices such as Blu-ray players, gaming consoles, or USB drives to the HDMI or USB ports for playback.
- **Blu-ray 3D:** The projector supports Blu-ray 3D content. Ensure you have compatible 3D glasses (sold separately) for an immersive experience.

3. Audio Settings

- **Built-in Speakers:** The 10W dual speakers with Dolby Audio provide high-quality sound. Adjust volume using the remote control.
- **Bluetooth Speaker Mode:** The projector can function as a standalone Bluetooth speaker. Activate this mode in the settings to connect your phone or other devices for music playback.
- **External Audio:** For enhanced audio, connect external speakers or soundbars via Bluetooth.

4. Voice Control (Google Assistant)

- Press the Google Assistant button on your remote control and speak your commands. You can search for content, control playback, or ask questions.

MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Do not use abrasive cleaners or excessive force.
- **Cleaning the Exterior:** Wipe the exterior of the projector with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.
- **Ventilation:** Ensure the ventilation grilles are not blocked to prevent overheating. Periodically check for dust accumulation and gently clean with a soft brush or compressed air.
- **Storage:** When not in use for extended periods, store the projector in its eco-friendly EPP carrying bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the projector regularly, even if not in active use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	Low battery; Power cable not connected; Power button not pressed correctly.	Charge the projector; Ensure power cable is securely connected; Press and hold the power button for a few seconds.
No image projected.	Lens cap on; Input source incorrect; Auto focus issue.	Remove lens cap; Check input source settings; Move projector slightly to trigger auto focus or adjust manually.
Image is blurry or distorted.	Out of focus; Incorrect keystone; Projector not stable.	Allow auto focus to correct or adjust manually; Ensure projector is on a stable, flat surface.

Problem	Possible Cause	Solution
No sound.	Volume too low; Muted; External audio device connected.	Increase volume; Unmute projector; Disconnect external audio or select correct audio output.
Remote control not responding.	Low batteries; Not paired; Obstruction.	Replace batteries; Re-pair remote control; Remove any obstructions between remote and projector.
Wi-Fi connection issues.	Incorrect password; Router issues; Out of range.	Verify password; Restart router; Move projector closer to router.

SPECIFICATIONS

Feature	Detail
Model Number	J61-7K5
Display Resolution	1920 x 1080 (Full HD)
Brightness	420 ISO Lumens
Contrast Ratio	400:1 FOFO
Color Gamut	124% Rec.709
HDR Support	HDR10
3D Support	Blu-ray 3D
Battery Capacity	10,000mAh
Battery Life (Eco Mode)	Up to 4.5 hours
Battery Life (Music Mode)	Up to 7 hours
Charging	Type-C (PD3.0, 65W+)
Audio	10W Dual Speakers, Dolby Audio
Operating System	Google TV
Connectivity	Wi-Fi, Bluetooth
Ports	1x HDMI 2.1 (eARC), 1x USB 2.0, 1x USB-C
Gimbal Rotation	127 degrees
Dimensions	9.15 x 3.15 x 3.15 inches
Item Weight	3.3 pounds

WARRANTY AND SUPPORT

For warranty information and customer support, please contact JMGO directly. You can reach their customer service team via email at after-sales@jmgo.com. Please retain your proof of purchase for any warranty claims.



Image: A customer service representative wearing a headset, symbolizing support for JMGO products.

IMPORTANT SAFETY INFORMATION

- Do not look directly into the projector lens when the lamp is on.
- Do not place the projector in unstable locations.
- Keep the projector away from water or other liquids.
- Do not attempt to disassemble or repair the projector yourself. Contact qualified service personnel.
- Use only the provided power adapter and cables.
- Ensure proper ventilation to prevent overheating.

© 2024 JmGO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9K9211N>

More documents and user manuals: <https://manuals.plus/>