

[Manuals.plus](#) /

› [ODK](#) /

› ODK 4-Drawer Fabric Dresser Instruction Manual (Model 0717BM4NPS6)

ODK 0717BM4NPS6

ODK 4-Drawer Fabric Dresser Instruction Manual

MODEL: 0717BM4NPS6

Brand: ODK

INTRODUCTION

Thank you for choosing the ODK 4-Drawer Fabric Dresser. This dresser is designed to provide efficient storage in small spaces, featuring a sturdy steel frame, a durable wood top, and four spacious fabric drawers. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure optimal use and longevity of your product.



Figure 1: ODK 4-Drawer Fabric Dresser (Vintage)

SETUP AND ASSEMBLY

Assembly of the ODK 4-Drawer Fabric Dresser is required. Please follow the detailed instructions provided in the included installation manual. All necessary tools and hardware are supplied with the product. Ensure all components are present before beginning assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Verify all parts against the parts list in your manual.
2. **Assemble Frame:** Connect the steel frame components according to the diagrams in the manual. Ensure all screws are tightened securely to provide a stable structure.
3. **Install Crossbars:** Attach the rear crossbars to enhance the stability and prevent wobbling of the dresser frame.
4. **Attach Wood Top:** Secure the wood top to the assembled steel frame.
5. **Insert Drawers:** Unfold each fabric drawer and insert the bottom panel to create a rigid box. Place the assembled

drawers into the designated slots within the frame.

6. **Adjust Feet:** The dresser features adjustable feet to compensate for uneven floor surfaces, ensuring stability. Adjust as needed.

Dimension



Figure 2: Product Dimensions

OPERATING INSTRUCTIONS

The ODK 4-Drawer Fabric Dresser is designed for easy and convenient storage. Each fabric drawer operates smoothly within its designated slot. To open a drawer, gently pull the handle. To close, push the drawer back into the frame until it is flush.

- **Storage Capacity:** The four fabric drawers provide ample storage space for various items such as clothing, blankets, accessories, or other small belongings.

- **Top Surface Use:** The sturdy wood top can be used to place decorative items, lamps, books, or other frequently accessed items.
- **Adjustable Feet:** Utilize the adjustable feet to ensure the dresser remains level and stable on any floor surface.



Figure 3: Drawers open, showing storage capacity



Figure 4: Detail of wood top and fabric drawer

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your ODK dresser.

- **Cleaning the Frame and Top:** Wipe the steel frame and wood top with a dry, soft cloth. Avoid using harsh chemicals or abrasive cleaners that may damage the finish.
- **Cleaning Fabric Drawers:** For light cleaning, use a lint roller or a soft brush to remove dust and debris. For spills, gently blot with a damp cloth and mild soap, then allow to air dry completely. Do not machine wash or tumble dry the fabric drawers.
- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.

TROUBLESHOOTING

If you encounter any issues with your ODK 4-Drawer Fabric Dresser, please refer to the following common solutions:

- **Wobbly Dresser:** Ensure all assembly screws are securely tightened. Adjust the leveling feet on the bottom of the frame to stabilize the dresser on uneven floors.
- **Drawers Not Sliding Smoothly:** Check that the fabric drawers are correctly inserted into their respective slots and are not overloaded. Ensure no items are obstructing the drawer's movement.
- **Missing Parts:** If any parts were missing upon delivery, please contact customer support immediately for replacements.

SPECIFICATIONS

Brand	ODK
Model Name	4-Drawer Dresser
Model Number	0717BM4NPS6
Product Dimensions (D x W x H)	11.81" x 15.75" x 31.57"
Number of Drawers	4
Material	Fabric Drawer, Metal, Wood
Color	Vintage
Item Weight	11.02 pounds
Assembly Required	Yes
Product Care Instructions	Wipe with Dry Cloth

WARRANTY INFORMATION

This ODK 4-Drawer Fabric Dresser comes with a**Limited Warranty**. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty documentation included with your product packaging. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

ODK is committed to providing superior customer service. If you require assistance with installation, have questions about your product, or need quick replacements for quality issues, our support team is available 24/7. For support, please contact us via:

- **Email:** support@odk.com
- **Phone:** 1-800-XXX-XXXX (Toll-Free)
- **Website:** www.odk.com/support

Please have your model number (0717BM4NPS6) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9LW2K7Y>

More documents and user manuals: <https://manuals.plus/>