

MOJOGEAR MG-T03

MOJOGEAR Swift Tripod MG-T03

Instruction Manual

INTRODUCTION

The MOJOGEAR Swift Tripod is a versatile photographic tripod designed for photographers and videographers. With a maximum working height of 175 cm and a load capacity of up to 4 kg, this tripod is suitable for a wide range of cameras and shooting situations. It features a detachable monopod, a reversible center column for macro photography, and an Arca Swiss quick release plate for easy camera attachment.

SAFETY INFORMATION

- Always ensure all locking mechanisms are securely tightened before use to prevent equipment damage or injury.
- Do not exceed the maximum load capacity of 4 kg. Overloading can cause instability and damage.
- Avoid placing the tripod on uneven or unstable surfaces.
- Keep hands and fingers clear of moving parts when adjusting the tripod.
- Do not leave the tripod unattended in windy conditions, especially with heavy equipment mounted.
- Clean the tripod regularly with a soft, dry cloth. Avoid harsh chemicals.

PACKAGE CONTENTS

Please check the package to ensure all items are present:

- MOJOGEAR Swift Tripod
- Carrying Bag
- Smartphone Holder



Image: The MOJOGEAR Swift Tripod shown alongside its retail packaging.



Image: The MOJOGEAR Swift Tripod folded for transport, next to its black carrying bag.

PRODUCT OVERVIEW

The MOJOGEAR Swift Tripod (MG-T03) is constructed from durable aluminum and plastic, offering a balance of strength and portability. Key features include:

- **Adjustable Legs:** Three-section legs with quick-release locks for height adjustment.
- **Detachable Monopod:** One leg can be removed and used as a standalone monopod.
- **Reversible Center Column:** Allows for low-angle and macro photography.
- **Arca Swiss Quick Release Plate:** For fast and secure camera mounting.
- **Ball Head:** Provides flexible positioning for your camera.
- **Spirit Level:** Integrated for precise leveling.

SETUP

1. Unfolding the Tripod

1. Gently pull the legs outwards until they are fully extended or at your desired angle.
2. Loosen the leg section locks (usually flip-locks or twist-locks) and extend each leg section to the desired height. Securely tighten all locks.
3. Adjust the center column height by loosening its lock, raising or lowering, and then tightening the lock.



Image: The MOJOGEAR Swift Tripod set up to its full height with a camera attached, ready for use.

2. Attaching Your Camera or Smartphone

1. **For Cameras:** The tripod head features an Arca Swiss quick release plate. Unscrew the plate from the ball head. Attach the plate to your camera's 1/4-inch tripod socket by twisting the screw on the plate. Ensure it is tight. Slide the plate with the camera back into the ball head clamp and secure the clamp lever.
2. **For Smartphones:** Use the provided smartphone holder. Attach the holder to the 1/4-inch screw on the quick release plate (or directly to the ball head if preferred). Secure your smartphone within the holder.



Image: The MOJOGEAR Swift Tripod holding a smartphone, demonstrating its use for mobile photography.

OPERATING

1. Adjusting the Ball Head

Loosen the main knob on the ball head to adjust the camera's angle. Once the desired position is achieved, tighten the knob firmly to lock the camera in place. Use the integrated spirit level to ensure your horizon is straight.

2. Using as a Monopod

One of the tripod legs features a foam grip and can be detached to function as a monopod. To detach, unscrew the leg from the tripod body. The monopod can extend up to 180 cm and has a 3/8-inch screw for direct camera or accessory attachment.

3. Reversible Center Column for Macro Photography

For low-angle or macro photography, the center column can be inverted. Loosen the stabilization hook at the bottom of

the center column, then remove the column. Reinsert the column upside down into the tripod body, allowing your camera to hang between the legs, closer to the ground.





Image: The tripod configured with its center column inverted, positioning the camera for extreme low-angle or macro shots.



Image: An outdoor shot of the MOJOGEAR Swift Tripod with the camera mounted upside down for macro photography, close to the ground.



Image: A detailed view of a camera attached to the inverted center column, illustrating the setup for macro photography.

MAINTENANCE

- **Cleaning:** Wipe down the tripod after each use with a soft, dry cloth to remove dust, dirt, and moisture. For stubborn grime, use a slightly damp cloth and dry thoroughly.
- **Lubrication:** Periodically check leg locks and moving parts for smooth operation. If necessary, apply a small amount of silicone-based lubricant to ensure smooth movement. Avoid oil-based lubricants.
- **Storage:** Store the tripod in its carrying bag in a cool, dry place away from direct sunlight and extreme temperatures. Ensure all locks are slightly loosened during long-term storage to prevent stress on components.
- **Inspection:** Regularly inspect the tripod for any signs of wear, damage, or loose parts. Address any issues promptly to maintain optimal performance and safety.

TROUBLESHOOTING

1. Tripod is Unstable

- Ensure all leg section locks are fully tightened.
- Verify that the legs are spread evenly and fully extended to their stops.
- Check if the ground surface is level. Adjust leg lengths if necessary or relocate to a more stable area.
- Ensure the camera or device mounted does not exceed the maximum load capacity of 4 kg.

2. Camera/Smartphone Not Securely Attached

- For cameras, ensure the quick release plate screw is tightly fastened to the camera body and the plate clamp on the ball head is fully secured.
- For smartphones, ensure the smartphone holder is firmly attached to the tripod head and the phone is securely gripped within the holder.

3. Leg Sections or Center Column Sticking

- Clean the leg sections and center column to remove any dirt or debris.
- Apply a small amount of silicone lubricant to the moving parts if necessary.

SPECIFICATIONS

Model Name:	MG-T03
Material:	Aluminum, Plastic
Max Tripod Height:	175 cm
Max Monopod Height:	180 cm
Folded Length:	41 cm
Item Weight:	1.41 kg
Max Load Capacity:	4 kg
Compatible Devices:	DSLR Camera, Compact Camera, Camcorder, Smartphone, Action Cam
Tripod Head Type:	Ball Head
Leg Sections:	3
Special Feature:	Spirit Level

WARRANTY

The MOJOGEAR Swift Tripod (MG-T03) comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For technical support, troubleshooting assistance, or warranty inquiries, please contact MOJOGEAR customer service. You can find more information and contact details on the official MOJOGEAR store page:

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question