

[Manuals.plus](#) /

› [CAZOKASI](#) /

› CAZOKASI 8-inch Digital Alarm Clock (Model HY: XKSZ-080) User Manual

CAZOKASI HY: XKSZ-080

CAZOKASI 8-inch Digital Alarm Clock (Model HY: XKSZ-080) User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the CAZOKASI 8-inch Digital Alarm Clock. This device is designed to provide clear and easy-to-read time, date, and day information, making it ideal for individuals with impaired vision or those who benefit from large displays. It features an 8-inch high-definition IPS screen, automatic brightness adjustment, multiple alarm settings including medication reminders, and support for 10 system languages. This manual will guide you through the features and functions of your new clock.



The 8-inch display offers a significantly larger and clearer view compared to standard 7-inch models, enhancing readability for all users.

2. PRODUCT FEATURES

- **8-inch High-Definition IPS Screen:** Provides a clear, wide-angle view of time and date information.
- **Multiple Time Display Interfaces:** Choose from 4 distinct display styles, including classic, icon-based, 3-color, and simulated circular clock.
- **Adjustable Font Colors:** Customize the display with 4 different font color options.
- **15 Alarm Sets:** Includes 12 general alarms and 3 dedicated medication reminder alarms (morning, noon, evening).
- **Automatic Brightness Adjustment:** The screen automatically dims at night (7:00 PM - 6:59 AM) and brightens during the day (7:00 AM - 6:59 PM) to optimize visibility and reduce disturbance. Manual brightness settings (low, mid, off) are also available.
- **10 System Languages:** Supports English, German, French, Spanish, Portuguese, Italian, Polish, Finnish, Dutch, and Swedish.
- **Digital Photo Album Function:** Play pictures and videos from a USB drive.


3. PACKAGE CONTENTS

Please check the package for the following items:

- CAZOKASI 8-inch Digital Alarm Clock (Model HY: XKSZ-080)
- Power Adapter (Corded Electric)
- Remote Control
- User Manual
- 1 Lithium Metal Battery (pre-installed for backup)

4. SETUP

1. **Unpack the Device:** Carefully remove the clock and all accessories from the packaging.
2. **Power Connection:** Connect the provided power adapter to the clock's power input port and then plug it into a standard electrical outlet. The clock requires continuous power to operate.
3. **Initial Power On:** The clock will power on automatically once connected to power.
4. **Placement:** Place the clock on a stable tabletop or mount it on a wall. Ensure it is in a location where the display is easily visible.

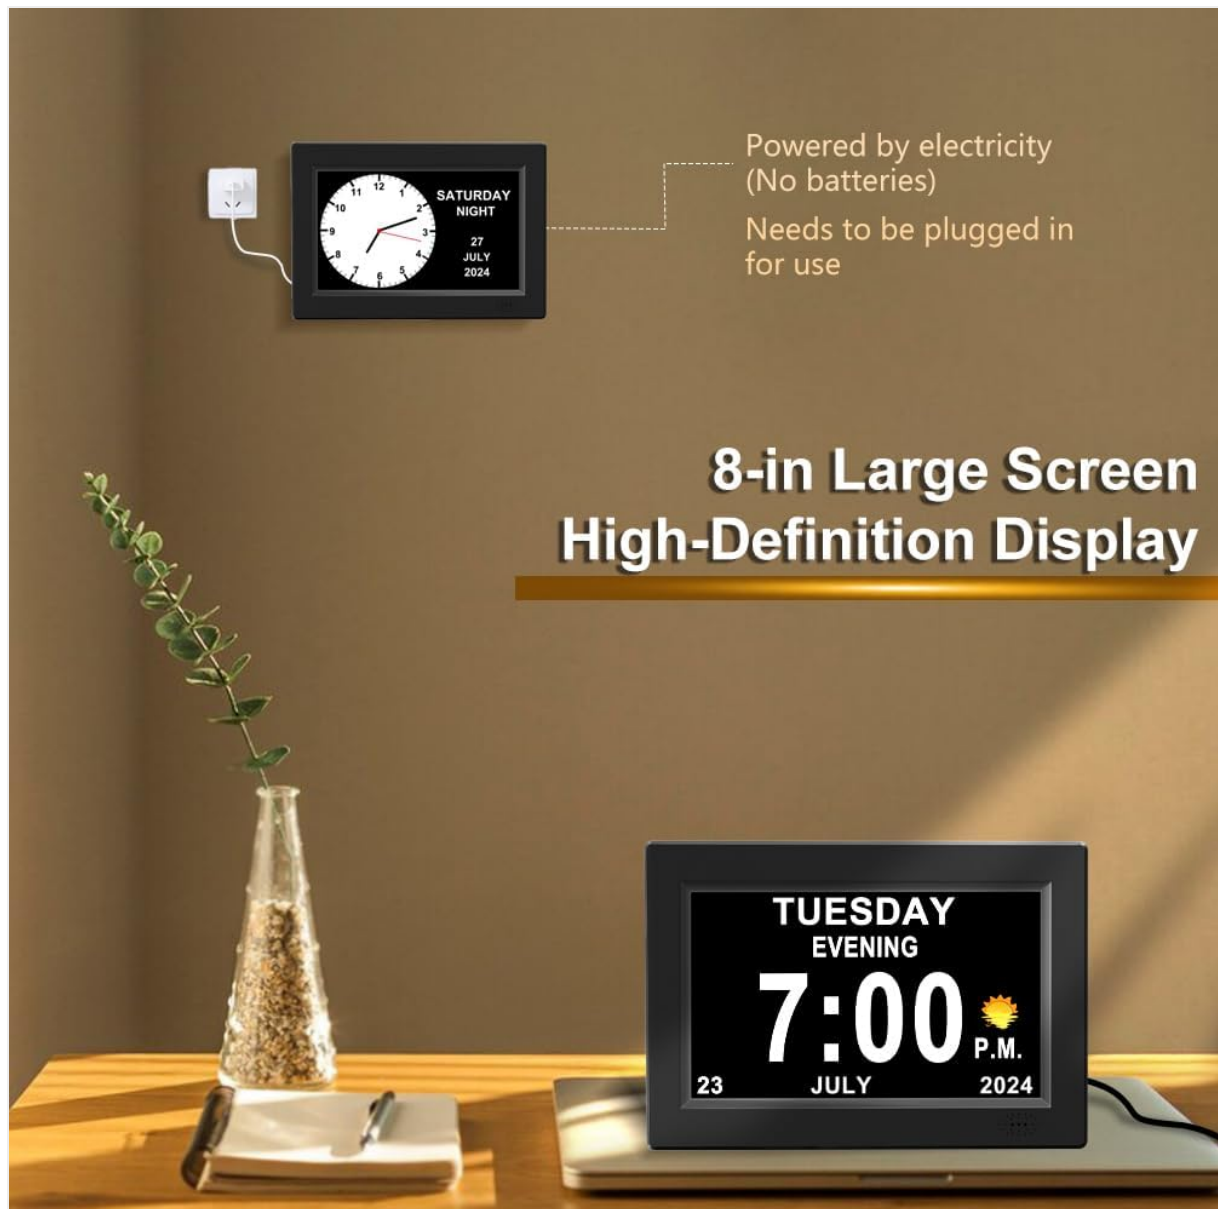

The CAZOKASI 8-inch Digital Alarm Clock requires continuous power via the included corded electric adapter. It can be

5. OPERATING INSTRUCTIONS

5.1 Navigating the Menu

Use the buttons on the back of the clock or the remote control to navigate the settings menu. The remote control offers convenient access to all functions.

5.2 Setting Time and Date

1. Press the **MENU** button on the remote or clock to enter the settings.
2. Navigate to **Time Set** or **Date Set** using the arrow buttons.
3. Press **OK/ENTER** to select.
4. Adjust the hour, minute, year, month, and day using the arrow buttons.
5. Press **OK/ENTER** to confirm each setting.
6. Select **Time Mode** to switch between 12-hour and 24-hour formats.
7. Select **Date Mode** to choose your preferred date format (e.g., Day-Month-Year).

5.3 Display Modes and Font Colors

The clock offers four distinct time display interfaces and four font color options to suit your preference.

- **Classic Elderly Clock:** Displays full time, date, week, and year/month without abbreviations.
- **Clock with Icon:** Includes corresponding icons for different time periods (e.g., sun for morning, moon for night).
- **3-Colors Clock:** Uses three different colors to distinguish time, week, and year/month.
- **Simulated Circular Clock:** A traditional analog clock face display.

To change the display interface, press and hold the **PLAY/PAUSE (||/ENTER)** button on the remote control. To change font colors, navigate to **Color Mode** in the settings menu and select your desired color (White, Yellow, Green, Red).

4 INTERFACES

Choose the interface you like



The clock offers four distinct display interfaces, allowing users to choose their preferred visual style for time and date information.



Customize the display with four different font color options: white, yellow, green, and red, to enhance readability.

5.4 Alarm Settings

The clock supports 12 general alarms and 3 specialized medication reminder alarms.

1. Navigate to **Alarm Set** or **Medicine Reminder** in the settings menu.
2. Select the desired alarm (e.g., Alarm 1, Morning Medicine).
3. Set the alarm time and frequency (e.g., Once, Daily, Weekdays).
4. Ensure the alarm **Status** is set to **On**.
5. To stop an active alarm, press any button on the clock or remote.



The clock features dedicated medication reminders, displaying a clear message and an image to prompt users. Any button press will stop the alarm.

5.5 Automatic Brightness Adjustment

The clock is equipped with an automatic dimming feature to adjust screen brightness based on the time of day.

- From 7:00 AM to 6:59 PM, the screen will be at its brightest setting.
- From 7:00 PM to 6:59 AM, the screen will automatically dim to a lower brightness level.

To override this, navigate to **Auto Dimming** in the settings menu and select **Low**, **Mid**, or **Off** for manual control.



The clock features automatic brightness adjustment, brightening during the day and dimming at night for optimal viewing comfort.

5.6 Language Settings

The clock supports 10 different languages.

1. Navigate to **Language Set** in the settings menu.
2. Use the arrow buttons to select your desired language.
3. Press **OK/ENTER** to confirm.



The clock supports 10 system languages, including English, German, French, Spanish, Portuguese, Italian, Polish, Finnish, Dutch, and Swedish.

5.7 Digital Photo Album Function

The clock can display pictures and play videos from a USB drive.

1. Insert a USB drive containing your desired pictures or videos into the USB port on the clock.
2. The clock will automatically detect the USB drive and prompt you to enter photo album mode.
3. Use the remote control to navigate through your media files and start a slideshow or video playback.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the clock. Do not use liquid cleaners or abrasive materials.
- **Power:** Ensure the clock remains connected to a power source for continuous operation. The internal battery is for backup only.
- **Storage:** If storing the clock for an extended period, disconnect it from power and store it in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not power on.	No power connection or faulty adapter.	Ensure the power adapter is securely plugged into the clock and a working electrical outlet. Test the outlet with another device.
Display is too dim or too bright.	Automatic dimming is active or manual brightness needs adjustment.	Check the Auto Dimming setting in the menu. Adjust to Low , Mid , or Off for manual control.

Problem	Possible Cause	Solution
Alarm does not sound.	Alarm not set correctly or volume is too low.	Verify alarm time and frequency in Alarm Set . Ensure Status is On . Check Volume Set in the menu.
USB drive not recognized.	Improperly inserted USB drive or unsupported file format.	Ensure the USB drive is fully inserted. Check if the files are in a supported format (e.g., JPEG for images, MP4 for videos). Try another USB drive.

8. SPECIFICATIONS

- Brand:** CAZOKASI
- Model Number:** HY: XKSZ-080
- Display Type:** Digital
- Screen Size:** 8 inches (16:9 aspect ratio)
- Product Dimensions:** 8.6"W x 5.9"H
- Material:** Acrylonitrile Butadiene Styrene (ABS) Plastic
- Power Source:** Corded Electric
- Batteries:** 1 Lithium Metal battery (included, for backup)
- Mounting Type:** Tabletop
- Item Weight:** 14.1 ounces (0.4 Kilograms)
- Special Features:** Adjustable Brightness, Alarm, Auto Dimmable, Large Display, Night Mode, Digital Photo Album
- Supported Languages:** English, German, French, Spanish, Portuguese, Italian, Polish, Finnish, Dutch, Swedish

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official CAZOKASI website. Keep your purchase receipt as proof of purchase for warranty claims.