

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Milex](#) /

› [Milex 30L Microwave Air Fryer & Oven User Manual](#)

Milex Milex Microwave Air Fryer

Milex 30L Microwave Air Fryer & Oven User Manual

Model: Milex Microwave Air Fryer

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Ensure the appliance is properly grounded.
- Do not operate the oven when empty.
- Do not allow children to use the appliance without supervision.
- Never place metal objects, sealed containers, or flammable materials inside the appliance.
- Regularly clean the appliance and remove any food debris to prevent fire hazards.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel.
- Ensure adequate ventilation around the appliance during operation.

2. PRODUCT OVERVIEW

2.1 Components

- Main Unit (Microwave, Air Fryer, Oven)
- Baking Pan
- Oven Rack
- Fry Basket
- User Manual

2.2 Control Panel

The control panel features an LED display and various buttons for selecting functions and settings.



Front view of the Milex 30L Microwave Air Fryer and Oven, showcasing the control panel on the right and the large glass door.

- **Functions:** Microwave, Oven/Airfry, Turntable, Defrost, Stage Cooking, Keep Warm.
- **Airfry Presets:** Fries, Wings, Snacks.
- **Microwave Presets:** Popcorn, Potato, Veggie, Beverage, Melt, Reheat.
- **Time & Temp:** Buttons for adjusting time and temperature.
- **ENTER:** Confirm selection.
- **STOP:** Cancel operation or clear settings.
- **START:** Begin cooking.

3. SETUP AND INSTALLATION

3.1 Unpacking

- Carefully remove the appliance and all accessories from the packaging.
- Remove any protective film or stickers from the appliance.
- Inspect the appliance for any damage. Do not operate if damaged.

3.2 Placement

- Place the appliance on a stable, level, heat-resistant surface.
- Ensure there is at least 10 cm of clear space on the back and sides, and 30 cm above the appliance for proper ventilation.
- Keep the appliance away from heat sources, water, and direct sunlight.



Angled view of the Milex 30L Microwave Air Fryer and Oven, positioned on a kitchen counter, highlighting its compact design.

3.3 Power Connection

- Plug the power cord into a grounded electrical outlet.
- Ensure the voltage matches the specifications of your appliance.

4. OPERATING INSTRUCTIONS

4.1 General Operation

- Place food in an appropriate microwave-safe, oven-safe, or air fryer-safe dish.
- Close the door securely.
- Select the desired function and adjust time/temperature using the control panel.
- Press START to begin cooking.

4.2 Microwave Function

- Press the 'Microwave' function button.
- Use the 'Time & Temp' buttons to set the cooking time and power level.
- Press START.

4.3 Air Fryer Function

- Place food in the Fry Basket.
- Press the 'Oven/Airfry' function button and select Air Fry mode.
- Adjust temperature and time as needed.
- Press START. The 360-degree heating technology ensures even cooking.

4.4 Oven/Convection Function

- Use the Baking Pan or Oven Rack for baking/roasting.
- Press the 'Oven/Airfry' function button and select Oven mode.
- Set the desired temperature and cooking time.

- Press START.

4.5 Pre-set Programs

The appliance includes 6 easy pre-sets for common cooking tasks:

- **Airfrying:** For crispy results with minimal oil.
- **Roasting:** Ideal for meats and vegetables.
- **Baking:** For cakes, cookies, and casseroles.
- **Broiling:** For browning and crisping the top layer of food.
- **Express Microwave Heating:** For quick reheating.
- **Defrost:** For thawing frozen foods quickly.

Select the desired preset from the control panel and press START.

4.6 Child Lock

- To activate the Child Lock, refer to your specific model's instructions on the control panel (usually involves pressing and holding a specific button for a few seconds).
- To deactivate, repeat the activation process.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

- Always unplug the appliance before cleaning.
- **Exterior:** Wipe with a damp cloth and mild detergent. Do not use abrasive cleaners.
- **Interior Cavity:** Wipe with a damp cloth. For stubborn food residue, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen the grime, then wipe clean.
- **Turntable, Baking Pan, Oven Rack, Fry Basket:** Wash with warm soapy water. These are not dishwasher safe.
- Ensure all parts are completely dry before reassembling and using the appliance.

6. TROUBLESHOOTING GUIDE

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; power outage; circuit breaker tripped.	Check power cord connection; verify power supply; reset circuit breaker.
Food not cooking evenly	Incorrect cooking time/temperature; food not stirred/turned; turntable not rotating.	Adjust settings; stir/turn food during cooking; ensure turntable is correctly placed and clean.

Problem	Possible Cause	Solution
Unusual noises during operation	Loose components; food touching interior walls.	Check for loose accessories; ensure food is centered and not touching walls.

If the problem persists after attempting these solutions, please contact Milex customer support.

7. SPECIFICATIONS

Brand	Milex
Model Name	Milex Microwave Air Fryer
Capacity	30 Liters
Power	1600 Watts
Dimensions (D x W x H)	49.2D x 60.8W x 37.2H cm
Item Weight	12 kg
Material	Stainless Steel, Heat-Resistant Ceramic, Borosilicate Glass
Special Features	3-in-1 Function (Microwave, Oven, Air Fryer), Dual Zone Features, Programmable, Express Heating System, 360 Degree Heating Technology, Child Lock
Dishwasher Safe	No (for accessories)

8. WARRANTY AND SUPPORT

Warranty information for the Milex 30L Microwave Air Fryer & Oven is typically provided with your purchase documentation or can be obtained from your retailer or the official Milex website. Please retain your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please refer to the contact information provided in your purchase documentation or visit the official Milex support channels.

	<p>Milex Extended Warranty Information and Product Eligibility</p> <p>Details on Milex products eligible for extended warranties, including warranty periods, registration requirements, exclusions, and care instructions. Covers models manufactured from 2024-2025.</p>
	<p>Milex Hurricane Air Fryer MAF001 Instruction Manual</p> <p>Comprehensive instruction manual for the Milex Hurricane Air Fryer (Model MAF001), detailing safety precautions, product parameters, operating instructions, and accessory usage for fat-free family meals.</p>
	<p>Milex 25L Rotisserie Air Fryer Instruction Manual</p> <p>Instruction manual for the Milex 25L Rotisserie Air Fryer, covering important safeguards, parts and accessories, features and benefits, operating instructions for various functions like air fry, rotisseries, steak, pizza, chicken, toast, bake, warm, and dehydrate, as well as care and cleaning, and warranty information.</p>
	<p>Milex Power Airfryer XXXL User Manual and Cooking Guide</p> <p>Comprehensive guide to the Milex Power Airfryer XXXL (Model MPA001), including features, safety precautions, operating instructions, cooking times, recipes, troubleshooting, and warranty information.</p>
	<p>Milex Nutri1200 Nutritional Blender Instruction Manual</p> <p>Comprehensive instruction manual for the Milex Nutri1200 Nutritional Blender, covering setup, safe operation, maintenance, and troubleshooting for optimal use.</p>
	<p>Milex Bread Master MBM001 Instruction Manual</p> <p>Comprehensive instruction manual for the Milex Bread Master MBM001, covering operation, safety, troubleshooting, ingredients, and recipes for homemade bread. Features include multiple programs, delay timer, and fruit/nut dispenser.</p>