

[Manuals.plus](#) /

› [SENCOR](#) /

› SENCOR Electric Kettle SWK 1753BK User Manual

SENCOR SWK 1753BK

SENCOR Electric Kettle SWK 1753BK User Manual

Model: SWK 1753BK

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the rating label matches your mains supply voltage.
- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- This appliance is intended for household use only. Do not use outdoors.
- Do not operate the kettle if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Keep the appliance out of reach of children. Close supervision is necessary when the appliance is used near children.
- Always place the kettle on a firm, flat, heat-resistant surface.
- Do not fill the kettle above the 'MAX' level or below the 'MIN' level to prevent boiling dry or water overflow.
- Avoid contact with steam escaping from the spout or lid, especially during refilling.
- The heating element surface is subject to residual heat after use.
- Only use the kettle with its supplied power base.

2. PRODUCT OVERVIEW

The SENCOR Electric Kettle SWK 1753BK is designed for efficient water boiling. It features a 1.7 L capacity and 2200 W power input. Key components include a removable and washable anti-scale filter, a clear water level indicator, and construction from high-quality SUS304 stainless steel. The kettle utilizes a 360° STRIX central connector for easy placement and a triple safety system for user protection. An indicator light signals when the kettle is in operation.



Figure 1: Front view of the SENCOR Electric Kettle SWK 1753BK, showing the spout, handle, lid, and water level indicator.



Figure 2: Detailed front view of the kettle, highlighting the SENCOR logo and water level markings.

3. SETUP

3.1 Unpacking

- Carefully remove the kettle and all accessories from the packaging.
- Remove any packaging materials, stickers, or labels from the appliance.
- Retain the packaging for future storage or disposal.

3.2 First Use Cleaning

Before using the kettle for the first time, or if it has been stored for a long period, it is recommended to clean it:

1. Fill the kettle with clean water up to the 'MAX' level.
2. Boil the water.
3. Discard the boiled water.
4. Repeat this process 2-3 times to ensure the kettle is clean and free from manufacturing residues.

3.3 Placing the Power Base

- Place the power base on a stable, flat, and dry surface.
- Ensure the power cord is not dangling or in a position where it can be tripped over.
- Plug the power cord into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Filling the Kettle

1. Remove the kettle from its power base.
2. Open the lid.
3. Fill the kettle with the desired amount of fresh water. Ensure the water level is between the 'MIN' and 'MAX' marks on the water level indicator.
4. Close the lid securely.

4.2 Boiling Water

1. Place the filled kettle securely onto its power base. The 360° central connector allows for easy placement from any angle.
2. Press the ON/OFF switch (usually located on the handle or near the base) to the 'ON' position.
3. The indicator light will illuminate, signaling that the kettle is heating.
4. The kettle will automatically switch off once the water has boiled, and the indicator light will turn off.



Figure 3: Illustrates the kettle in use, pouring hot water into a cup. Always handle with care as the kettle will be hot.

4.3 Pouring Water

- After boiling, wait a few seconds for the water to settle before pouring.
- Carefully lift the kettle from its base and pour the hot water slowly and steadily.
- Always hold the kettle by its handle, as the body will be hot.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

5.1 Exterior Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.

5.2 Descaling

Limescale buildup can affect the kettle's performance and lifespan. Descale regularly, especially in hard water areas.

- Fill the kettle with a mixture of one part white vinegar and two parts water, or use a commercial descaling solution according to its instructions.
- Boil the solution and then let it stand for at least 30 minutes, or longer if the scale is heavy.
- Empty the kettle and rinse thoroughly with fresh water several times.
- Boil fresh water in the kettle and discard it to remove any residual vinegar taste.

5.3 Filter Cleaning

The removable anti-scale filter should be cleaned periodically.

- Ensure the kettle is cool and unplugged.
- Carefully remove the filter from inside the spout.
- Rinse the filter under running water and gently brush away any scale or debris.
- Reinsert the clean filter into its position.

6. TROUBLESHOOTING

If you encounter any issues with your SENCOR Electric Kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply. Kettle not properly seated on base. Power switch not engaged.	Check if the plug is securely in the outlet. Ensure the kettle is correctly placed on the power base. Press the ON/OFF switch firmly.
Water is not heating.	Kettle has automatically shut off (e.g., boiled dry). Faulty heating element.	If the kettle boiled dry, allow it to cool down before refilling and restarting. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Kettle leaks water.	Lid not closed properly. Overfilled kettle. Damage to the kettle body.	Ensure the lid is securely closed. Do not fill above the 'MAX' level. If the body is damaged, discontinue use and contact customer support.
Water tastes strange.	New kettle residue. Limescale buildup.	Perform first-use cleaning steps (boil and discard water several times). Descale the kettle as per maintenance instructions.

7. SPECIFICATIONS

Detailed technical specifications for the SENCOR Electric Kettle SWK 1753BK:

Feature	Specification
Brand	SENCOR
Model Number	SWK 1753BK
Product Dimensions (L x W x H)	21.2 x 19.7 x 22.7 cm
Capacity	1.7 Liters
Power	2200 Watts
Voltage	240 Volts
Material	Stainless Steel
Automatic Shut-off Function	Yes
Item Weight	1.16 Kilograms
Spare Parts Availability	Information unavailable on spare parts
Date First Available on Amazon.com.be	July 18, 2024
Country of Origin	China
Year of Manufacture	2024

8. WARRANTY AND SUPPORT

SENCOR products are manufactured to high-quality standards and are warranted against defects in materials and workmanship for a specified period from the date of purchase. Please refer to your purchase documentation or the SENCOR official website for specific warranty terms and conditions applicable to your region.

Customer Support

For technical assistance, warranty claims, or general inquiries, please contact SENCOR customer support through their official website or the contact information provided with your product packaging.

Always have your model number (SWK 1753BK) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9MGJ6NJ>

More documents and user manuals: **<https://manuals.plus/>**