

Edifier S880DB MKII

Edifier S880DB MKII User Manual

High-Quality LDAC Bluetooth 5.3 2-Way Speakers

1. INTRODUCTION

Thank you for purchasing the Edifier S880DB MKII bookshelf speakers. This manual provides important information regarding the setup, operation, and maintenance of your new audio system. Please read this manual thoroughly before using the product to ensure proper and safe operation.

The Edifier S880DB MKII speakers are designed to deliver high-fidelity audio with versatile connectivity options, including LDAC Bluetooth 5.3 for high-resolution wireless audio, and various wired inputs. Featuring a total output power of 88W RMS, these speakers utilize advanced TI Class D audio amplifiers, 1-inch titanium diaphragm tweeters, and 3.75-inch aluminum diaphragm mid-bass drivers, all housed in a high-strength MDF enclosure to minimize distortion.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- Edifier S880DB MKII Speakers (Active and Passive)
- Remote Control
- Power Cable
- Speaker Connection Cable
- RCA to RCA Audio Cable
- 3.5mm to RCA Audio Cable
- USB-B to USB-A Cable
- Optical Audio Cable
- User Manual (this document)

3. SETUP

3.1 Speaker Placement

For optimal sound performance, place the speakers on a stable, flat surface, ideally at ear level when seated. Ensure there is adequate space around the speakers for proper ventilation.



Image: Front view of the Edifier S880DB MKII speakers, highlighting their design and drivers.



Image: Edifier S880DB MKII speakers in a home environment, illustrating ideal placement on a shelf.

3.2 Connecting the Speakers

1. Connect the active speaker (with controls) to the passive speaker using the provided speaker connection cable. Ensure the polarity is correct (red to red, black to black).
2. Connect the power cable to the active speaker and then to a power outlet.

3.3 Audio Input Connections

The S880DB MKII offers multiple input options:

- **Bluetooth:** For wireless connection to smartphones, tablets, or computers.
- **Optical:** For connecting to TVs, game consoles, or other digital audio sources.
- **Coaxial:** For connecting to digital audio sources with coaxial output.
- **USB:** For connecting to a computer as a USB audio device.
- **Line In (RCA):** For connecting to analog audio sources like CD players or turntables.

Select the appropriate cable and connect your audio source to the corresponding input on the active speaker.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the power button on the active speaker or the remote control to turn the speakers on or off.

4.2 Input Selection

Use the input selector button on the active speaker or the remote control to cycle through the available audio inputs (Bluetooth, Optical, Coaxial, USB, Line In).

4.3 Volume Control

Adjust the master volume using the rotary knob on the active speaker or the volume buttons on the remote control.

4.4 Bluetooth Pairing

1. Select Bluetooth input on the speakers. The indicator light will flash.
2. Enable Bluetooth on your audio device (smartphone, tablet, etc.) and search for "EDIFIER S880DB MKII".
3. Select the speaker from the list to pair. Once paired, the indicator light will be solid.

4.5 Tone Control

The active speaker features knobs for adjusting treble and bass levels to customize your sound preference.

4.6 EDIFIER ConneX App

Download the EDIFIER ConneX mobile application for enhanced control. The app allows for playback control, sound effect changes, equalizer customization, and access to the manual and other settings.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker surfaces. Do not use abrasive cleaners or solvents.
- **Dust:** Regularly dust the speaker grilles and cabinet to prevent accumulation.
- **Environment:** Avoid placing speakers in direct sunlight, near heat sources, or in areas with high humidity.
- **Handling:** Handle the speakers with care. Avoid dropping or subjecting them to strong impacts.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	• Power not connected • Incorrect input selected • Volume too low • Audio cable loose or faulty	• Ensure power cable is securely connected and power outlet is active. • Select the correct input source. • Increase the volume. • Check and re-connect audio cables. Try a different cable if available.

Problem	Possible Cause	Solution
Bluetooth connection issues	• Speakers not in pairing mode • Device too far from speakers • Interference	• Ensure Bluetooth input is selected and indicator is flashing. • Move device closer to speakers (within 10 meters). • Turn off other Bluetooth devices nearby.
Distorted sound	• Volume too high • Source audio quality is poor • Incorrect tone settings	• Reduce volume on both speakers and source device. • Try a different audio source or file. • Adjust treble and bass knobs to neutral or preferred settings.

If the problem persists, please contact Edifier customer support.

7. SPECIFICATIONS

 
 
 
Feature	Detail
Total Power Output	88W RMS
Tweeter	1-inch Titanium Diaphragm
Mid-bass Driver	3.75-inch Aluminum Diaphragm
Bluetooth Version	V5.3 (with LDAC support)
Dimensions (each speaker)	17D x 13.9W x 23.6H cm
Weight	7.5 Kilograms
Model Number	S880DB MKII


8. WARRANTY AND SUPPORT

Edifier products are designed with quality and reliability in mind. For warranty information specific to your region, please refer to the warranty card included with your product or visit the official Edifier website. For technical support, troubleshooting assistance, or service inquiries, please contact Edifier customer support through their official website or the contact information provided in your product packaging.

Edifier Official Website: www.edifier.com

Related Documents - S880DB MKII

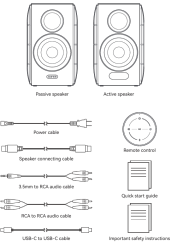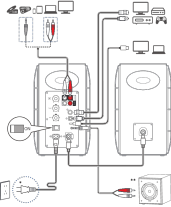	EDIFIER S880DB MKII Multimedia Speaker User Manual Comprehensive user manual for the EDIFIER S880DB MKII Multimedia Speaker, covering setup, features, controls, specifications, and troubleshooting.
EDIFIER® S880DB MKII Multimedia Speaker  — Manual — EN 1. EDIFIER Connect app With this app, you can: • Search App models • Control play • Select or customize EQs • Upgrade the firmware, and • More functions.  Download EDIFIER Connect app 1. With your smart device, scan the QR code on the quick start guide or the packaging. • Scan the QR code for "EDIFIER Connect" in Apple App Store (iOS) download or Google Play (Android download). 2. Download and install the app. How to use the app 1. Connect your smart device with the speaker via Bluetooth. 2. In Bluetooth mode, open the EDIFIER Connect app on your smart device. 3. Tap the icons for settings and playback control. After the Bluetooth connection, your smart device and the speaker operate as one unit if the speaker is switched to non-Bluetooth input modes. 2. What's in the box?  3. Cable connection  Note: • Power input: 100-240V~50/60Hz 40Watt • This plug type is meant for Australian power only. • The audio/video input/output: To connect with subwoofer, another suitable audio cable may be required. 4. Remote control  • For initial use, connect the remote control to a charger (5V=1A) to activate it. • Red: The indicator will glow green after the remote control is activated. • The remote control will enter power-saving mode if there is no operation in 10 seconds. To reactivate, the main power button is pushed. The indicator on the remote control will turn green. • If the battery level is lower than 15%, the indicator will turn red. After the remote control is fully charged, the indicator will turn off. 5. Power on/off Power on: Switch the main power button on the rear panel to "ON". Power off: Switch the main power button to "OFF". • To switch the speaker to standby mode, press each mode, tap and hold the "Q" button on the remote control or press and hold the "Volume/Source" knob on the rear panel. 6. Input source selection	


 


Input Source	OLED Display
USB-C input port	USB
Line in 1 input port	Line in 1
Line in 2 input port	Line in 2
Bluetooth input	
OPT input port	OPTICAL
COMAR input port	COMARIAL

Note:
You can also tap the button on the remote control to switch to Bluetooth input.

7. Bluetooth connection

  -
- The diagram illustrates the connection of a USB cable. On the left, a mobile phone is shown with a USB cable plugged into its side. On the right, a USB drive is shown with the same cable plugged into its top. The text 'or' is placed between the two options, indicating that either a mobile phone or a USB drive can be used for the connection.



Note:

- Pin code for connection is "0000" if needed.
- To enjoy all Bluetooth functions of this product, make sure that your audio source device supports A2DP and AVRCP profiles.
- If no device is connected in 10 minutes, the speaker will switch to Bluetooth hidden mode. "H" will blink on the OLED display. In this mode, CD new devices cannot find the speaker, but CD for a device that exists in the pairing record of this speaker, you can select "CD FOR SBB0039 MK3" from its Bluetooth device list to reconnect. To exit from Bluetooth hidden mode, press the "Volume/Source" knob on the speaker or tap the "H" button on the remote control.

8. USB audio streaming

-

- **NOTE**
- USB interface of the speaker is built as USB Audio Class 2.0, which supports high-resolution audio with sample rate up to 192kHz. For a computer running Windows 8 or earlier version, a driver needs to be installed. You can visit www.bose.com, search for "SPEAKER1903", go to its detail page, scroll down to the support information, and click the link to download the driver.
- For further information about the driver, access the following link for details: <http://www.bose.com/support/usb-audio-driver-support>.
- Make sure that SPEAKER1903 is set as the audio output device (1) for Windows users, or "Control Panel" > "Sound" > "Set as Default" to set "SPEAKER1903 (HDMI)" or "SPEAKER1903 (USB)" as the default audio output device. (2) For Mac users, access "System Preferences" > "Sound" > "Output" to select "SPEAKER1903 (HDMI)" as the current audio output device.
- In USB mode, the following sample rates are supported: 44.1kHz, 48kHz, 96kHz, and 192kHz.

9. Control



Button	Action
⏸	Tap to pause or resume the playback in Bluetooth or USB mode.
🔊	Tap to mute or unmute the speaker in Line In / Line In 2 / Optical / Coaxial mode.
🔊	Tap to switch between audio effects.



Button	Action
	Swipe from " " to " " to skip to the next track in Bluetooth or USB mode.
  	Swipe from "  " to "  " to skip to the previous track in Bluetooth or USB mode.



Button	Action
Ring area	Swipe clockwise to increase volume.
Ring area	Swipe counterclockwise to decrease volume.




Factor	Action
Volume/Source	Pertate clockwise to increase volume. Pertate counterclockwise to decrease volume.
Torque	Pertate clockwise to increase torque level. Pertate counterclockwise to decrease torque level.
Power	Pertate clockwise to increase power level. Pertate counterclockwise to decrease power level.

Note:


- The play control in USB mode may vary depending on different audio player applications.
- The volume levels of SB6000 MKII and your device are not synchronized. To adjust the volume levels, adjust separately.

 Comprehensive user manual for the Edifier S880DB MKII multimedia speakers, covering setup, connectivity, controls, specifications, and troubleshooting.

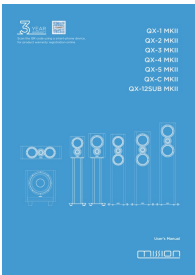10. Specifications Total output power (RMS, RL, 20kHz) 120W+120W RL: 16Ω, 8Ω and 4Ω; 20W+20W Frequency response: 50Hz-20kHz Declaration for EU Frequency Band: 2.402GHz ~ 2.4835GHz RF Power Output (Saturated): < 10 dBm (EIRP) RF Power Output (Maximum control): < 4 dBm (EIRP) There is no restriction of use. 11. Troubleshooting Cannot connect to your Bluetooth device • Make sure that the distance between this product and your Bluetooth device is less than 10 meters and there are no obstacles between them. • Make sure that no device is connected to this product via Bluetooth. • Make sure that this product is in Bluetooth pairing mode. If not, manually switch it on this mode. • Restart this product, enable Bluetooth function on your Bluetooth device, and then try again. • Restart this product to factory settings and try again. No power • Make sure that the power cable is properly connected. • Make sure that the power supply is not disconnected. • Make sure that the main power button on the rear panel is switched to "ON". No sound • Make sure that this product is powered on. • Make sure that this product and your device are properly connected. • Make sure that the playback is not paused. • Make sure that this product and your device are not muted. • Increase the volume of this product and your device. Noise coming from speakers • EDIFIER speakers generate this noise, while the background noise of some audio devices can be high. Please reduce audio volume and turn the volume up. If the sound can be heard at 1 meter away from this speaker, there is no problem with this product. To learn more about EDIFIER, please visit www.edifier.com. For EDIFIER user's policy, please visit the related content page on www.edifier.com and review the section titled Warranty Terms. SAR and Canada compliance info: South America: Please visit www.edifier.com (English) or www.edifier.com (Spanish/Portuguese) for local contact information.	
	EDIFIER S880DB MKII Haut-parleurs : Guide d'utilisation et Spécifications Manuel complet pour les haut-parleurs EDIFIER S880DB MKII, incluant l'installation, l'utilisation de l'application, la connectivité Bluetooth, les commandes, les spécifications techniques et le dépannage.
	Edifier S880DB Active Speaker User Manual Comprehensive user manual for the Edifier S880DB Active Speakers, covering safety, setup, connections, controls, troubleshooting, and specifications.
	Edifier S880DB Active Speaker User Manual Comprehensive user manual for the Edifier S880DB Active Speakers, covering setup, controls, connections, troubleshooting, and specifications. Learn how to get the most out of your audio experience.
	Mission QX MKII Series Loudspeakers and Subwoofer User Manual Comprehensive user manual for the Mission QX MKII Series loudspeakers, including QX-1, QX-2, QX-3, QX-4, QX-5, QX-C, and QX-12SUB models. Covers setup, connections, positioning, operation, safety, warranty, and specifications.

 Documents - Edifier – S880DB MKII





Руководство пользователя

1. Приложение EDIFIER ConneX

С помощью этого приложения вы можете:

- Переключать режим ввода,
- Контролировать воспроизведение,
- Выбрать или настроить эквалайзер,
- Обновить прошивку,
- Больше функций.

EDIFIER ConneX app



Загрузите приложение EDIFIER ConneX.

 
1. С помощью вашего смарт-устройства отсканируйте QR-код в кратком руководстве или на упаковке.
- Вы также можете выполнить поиск приложения «EDIFIER ConneX» в Apple App Store или Google Play.

2. Загрузите и установите приложение.


Как использовать это приложение:

1. Подключите свой смарт-устройство к динамику через Bluetooth.
2. В режиме Bluetooth нажмите на значок приложения EDIFIER ConneX на вашем смарт-устройстве, чтобы открыть его.
3. Нажмите на меню для настроек и управления воспроизведением.

2. Что в коробке ?




Пассивный динамик

 

Активный динамик



 Кабель питания




Соединительный кабель для динамиков



Аудиокабель 3,5 мм - RCA



 Аудиокабель RCA - RCA



Кабель USB-C - USB-C



Пульт дистанционного управления



Краткое руководство пользователя

 


Инструкция по технике безопасности

Примечание:

- Изображения приведены исключительно в иллюстративных целях и могут отличаться от фактического продукта.
- В связи с необходимостью технического усовершенствования и обновления системы, информация и характеристики, содержащиеся в настоящем документе, могут немного отличаться от фактического продукта. В случае обнаружения каких-либо различий преимущественную силу имеет фактический продукт.


3. Подключение кабеля

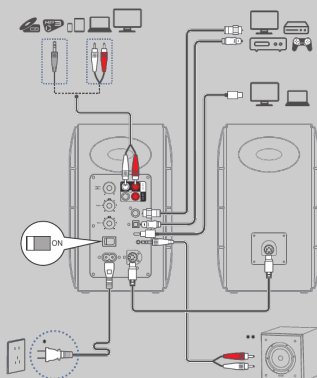

Примечание:

- Входная мощность: 100-240В~ 50/60Гц 400mA
- Данный тип штекера предназначен только для иллюстрации.
- Сабуфер не входит в комплект. Для подключения к сабуферу может потребоваться другой аудиокабель.

 4. Дистанционное управление

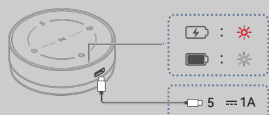


- Для начала использования необходимо подключить пульт дистанционного управления к зарядному устройству, после активация индикатор загорится зеленым.
- Пульт дистанционного управления перейдет в режим энергосбережения, если в течение 10 секунд не будет выполнено никаких действий.
- Если уровень заряда батареи ниже 5%, индикатор загорится красным. После полной зарядки пульта индикатор погаснет.

5. Вкл/выкл питания

- **Включение питания:** переведите кнопку питания на задней панели в положение «ВКЛ».
- **Выключение питания:** переведите кнопку питания в положение «ВЫКЛ».
- Чтобы перевести динамик в режим ожидания или рабочий режим, нажмите и удерживайте на пульте кнопку «Ф» или нажмите и удерживайте ручку «Громкость» на задней панели.

 6. Выбор источника входного сигнала

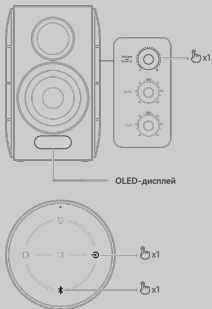




Для переключения между источниками входного сигнала необходимо нажать ручку «Громкость» на задней панели или кнопку «Ф» на пульте дистанционного управления.

Состояние индикатора	OLED-дисплей
USB-C input port	USB
Line In 1 input port	Line In 1
Line In 2 input port	Line In 2
Bluetooth input	
OPT input port	OPTICAL
COAX input port	COAXIAL

Примечание:
Вы также можете нажать кнопку «Ф» на пульте дистанционного управления, чтобы переключиться на Bluetooth.

7. Bluetooth соединение

   1. При переключении на вход Bluetooth, на OLED-дисплее будет мигать «Ф».
2. На вашем устройстве выберите "EDIFIER S880DB MKII" в списке устройств Bluetooth для подключения, и «Ф» будет гореть постоянно после установления соединения.
3. Чтобы отключиться от текущего устройства Bluetooth, дважды нажмите кнопку "Громкость/Источник" на задней панели или нажмите и удерживайте кнопку «Ф» на пульте дистанционного управления.

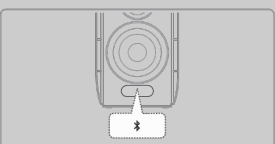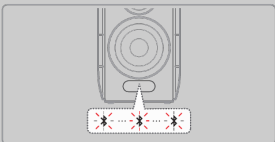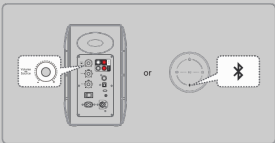

Примечание:
• При необходимости введите пин-код для подключения - "0000".
• Чтобы использовать все возможные функции Bluetooth, убедитесь, что ваше аудио устройство (источник) поддерживает профили A2DP и AVRCP.
• Если в течение 10 минут ни одно устройство не будет подключено, динамик переключится в скрытый режим Bluetooth. На OLED-дисплее будет мигать «Ф». В этом режиме новые устройства не смогут найти динамик, но для уже сопряженных устройств, вы можете выбрать "EDIFIER S880DB MKII" из списка устройств Bluetooth для повторного подключения. Чтобы выйти из скрытого режима Bluetooth, нажмите ручку "Громкости".

[pdf] User Manual

S880DB MKII User Manual V1 0 Edifier edifier ru â® user manual руководство пользователя 1 |||

 
S880DB MKII 1. EDIFIER ConneX : , , , , . EDIFIER ConneX app EDIFIER ConneX 1. - QR- . EDIFIER ConneX Apple App Store Google Play. 2. : 1. - Bluetooth. 2. Bluetooth EDIFIER ConneX - , 3. . 2. 3,5 - RCA...

lang:en score:59 filesize: 8.94 M page_count: 1 document date: 2025-01-15

источник", на динамике или нажмите кнопку «» / «» на пульте дистанционного управления.

8. Подключение через USB

1. Переключитесь в режим USB.
2. Подключите динамик к компьютеру с помощью USB-кабеля.
3. Выберите на компьютере этот динамик в качестве устройства вывода звука и начните воспроизведение аудиофайла.

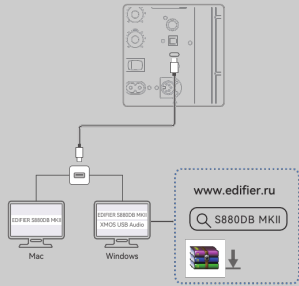

Примечание:

- USB-интерфейс динамика построен на базе USB Audio Class 2.0, поддерживающий аудио высокого разрешения, с частотой дискретизации до 192 кГц. Для компьютеров с версиями Windows 8 и младше – необходимо установить драйвер. Вы можете перейти по ссылке www.edifier.ru, найти модель "S880DB MKII", прокрутить вниз до технической спецификации, и под ней нажать на ссылку для загрузки драйвера.
- Для получения дополнительной информации о драйвере перейдите по следующей ссылке для получения подробной информации: <https://www.xmos.com/support/usb-audio-driver-support>.
- Убедитесь, что в качестве устройства вывода звука выбран S880DB MKII. (1) Для пользователей Windows откройте "Панель управления" → "Звук" → "Воспроизведение" → "Установить по умолчанию", EDIFIER S880DB MKII или "XMOС USB Audio" в качестве текущего устройства вывода звука. (2) Для пользователей Mac откройте "Системные настройки" → "Звук" → "Выход".
- Поддерживаемые частоты дискретизации в режиме USB: 44,1 кГц, 48 кГц, 96 кГц и 192 кГц.

9. Управление




Кнопка	Действие
	Нажмите, чтобы приостановить или возобновить воспроизведение в режиме Bluetooth или USB.
	Нажмите, чтобы отключить или включить звук линейного динамика в линейном/оптическом/коаксиальном режимах.
	Нажмите, чтобы переключиться между звуковыми эффектами.



Кнопка	Действие
  	Проведите пальцем от «  » к «  », чтобы перейти к следующему треку в режиме Bluetooth или USB.
  	Проведите пальцем от «  » к «  », чтобы перейти к предыдущему треку в режиме Bluetooth или USB.



Кнопка	Действие
Центральная панель	Проведите пальцем по часовой стрелке, чтобы увеличить громкость.
Центральная панель	Проведите пальцем против часовой стрелки, чтобы уменьшить громкость.

 

Регулятор	Действие
Volume/Source	Поверните регулятор по часовой стрелке, чтобы увеличить громкость. Поверните против часовой стрелки, чтобы уменьшить громкость.
Treble	Поверните регулятор по часовой стрелке, чтобы увеличить уровень высоких частот. Поверните против часовой стрелки, чтобы уменьшить уровень высоких частот.
Bass	Поверните регулятор по часовой стрелке, чтобы увеличить уровень низких частот. Поверните против часовой стрелки, чтобы уменьшить уровень низких частот.

Примечание:

- Управление воспроизведением в режиме USB может отличаться в зависимости от приложений аудио плеера.

• Уровень громкости S880DB MKII и вашего устройства не синхронизированы. Громкость настраивается отдельно.

10. Технические характеристики

Общая выходная мощность (RMS): R/L (высокие частоты) 12 Вт + 12 Вт
R/L (средние частоты и басы) 32 Вт + 32 Вт
Частотная характеристика: 50 Гц - 40 кГц

Декларация для ЕС
Диапазон частот: 2,402 ГГц - 2,480 ГГц
Выходная радиочастотная мощность (динамики): ≤ 13 дБм (EIRP)
Выходная радиочастотная мощность (пульт): ≤ 4 дБм (EIRP)
Ограничений на использование нет.

11. Устранение неисправностей

Не удалось подключиться к вашему устройству Bluetooth

- Убедитесь, что расстояние между данным продуктом и вашим устройством Bluetooth составляет менее 10 метров и между ними нет препятствий.
- Убедитесь, что к данному продукту не подключено ни одно устройство по Bluetooth.
- Убедитесь, что данный продукт находится в режиме сопряжения Bluetooth. Если нет, переключите в этот режим вручную.
- Перезагрузите данный продукт, включите функцию Bluetooth на вашем Bluetooth-устройстве и повторите попытку.
- Сбросьте данный продукт до заводских настроек и повторите попытку.

Нет питания

- Убедитесь, что кабель питания подключен правильно.
- Убедитесь, что источник питания не отключен.
- Убедитесь, что кнопка питания на задней панели переведена в положение «ВКЛ».

Нет звука

 
- Убедитесь, что данный продукт и ваше устройство подключены правильно.
- Убедитесь, что воспроизведение не приостановлено.
- Увеличьте громкость данного продукта и вашего устройства.
- Убедитесь, что выбран правильный источник аудиовхода.

Шум из динамиков
Динамики EDIFIER создают мало шума, в то время как фоновый шум некоторых аудиоустройств слишком высок. Пожалуйста, отсоедините аудиокабели и увеличьте громкость. Если на расстоянии 1 метра от динамика не слышно звука, то с этим продуктом всё в порядке.

Чтобы узнать больше об EDIFIER, посетите сайт www.edifier.com.
По вопросам гарантии EDIFIER посетите страницу соответствующей страны на сайте www.edifier.com и ознакомьтесь с разделом «Условия гарантии».
США и Канада: service@edifier.ca
Южная Америка: пожалуйста, посетите www.edifier.com (на английском языке) или www.edifierla.com (на испанском/португальском языке) для получения местной контактной информации.

EDIFIER®

S880DB MKII
Multimedia Speaker

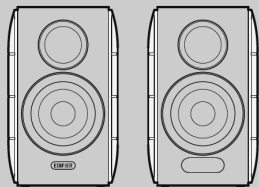


— Manual —

EN
1. EDIFIER ConneX app

With this app, you can

 - Switch input modes,
- Control play,
- Select or customize EQs,
- Upgrade the firmware, and
- More functions.



Download EDIFIER ConneX app

1. With your smart device, scan the QR code on the quick start guide or the packaging.
• You can also search for "EDIFIER ConneX" in Apple App Store (iOS devices) or Google Play (Android devices).

 
2. Download and install the app.

 
How to use this app

1. Connect your smart device with the speaker via Bluetooth.
2. In Bluetooth mode, open EDIFIER ConneX App on your smart device.
3. Tap the menu for settings and playback control.

Note: The BLE connection between your smart device and the speaker remains active even if the speaker is switched to non-Bluetooth input modes.

2. What's in the box?




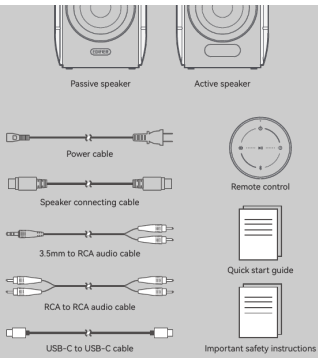

Note:

- Images are for illustrative purposes only and may differ from the actual product.
- For the need of technical improvement and system upgrade, information and specifications contained herein may be slightly different from actual product. If any difference is found, the actual product prevails.

 
3. Cable connection

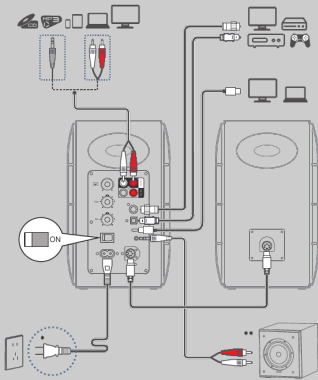

Note:

- Power input: 100-240V~ 50/60Hz 400mA
- This plug type is meant for illustration purpose only.
- ** The subwoofer is not bundled. To connect it with a subwoofer, another suitable audio cable may be required.

 4. Remote control



- For initial use, connect the remote control to a charger (5V≐1A) to activate it first. The indicator will turn green after the remote control is activated.
- The remote control will enter power-saving mode if there is no operation in 10 seconds. To wake it up, reach your hand to it. The indicator on the remote control will turn green.
- If the battery level is lower than 5%, the indicator will turn red. After the remote control is fully charged, the indicator will turn off.

 
5. Power on/off

Power on: Switch the main power button on the rear panel to "ON".

Power off: Switch the main power button to "OFF".

- To switch the speaker to standby mode or work mode, tap and hold the "⊕" button on the remote control or press and hold the "Volume/Source" knob on the rear panel.

6. Input source selection

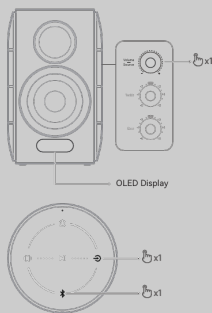

Press the "Volume/Source" knob on the rear panel or tap the "⊕" button on the remote control to switch between input sources.



Input Source	OLED Display
--------------	--------------

USB-C input port	USB
Line In 1 input port	Line In 1
Line In 2 input port	Line In 2
Bluetooth input	
OPT input port	OPTICAL
COAX input port	COAXIAL

Note:
You can also tap the "" button on the remote control to switch to Bluetooth input.

7. Bluetooth connection

  
1. Switch to Bluetooth input. "" will blink rapidly on the OLED display.
 2. On your device, select "EDIFIER S880DB MKII" in its Bluetooth device list to connect, and "" will be displayed constantly when the connection is established.
- To disconnect from the current Bluetooth device, double press the "Volume/Source" knob on the rear panel, or tap and hold the "" button on the remote control.

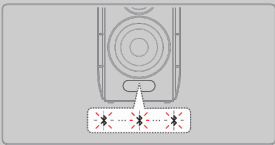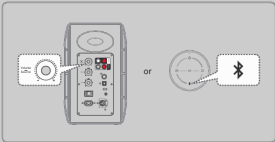

- Note:**
- Pin code for connection is "0000" if needed.
 - To enjoy all Bluetooth functions of this product, make sure that your audio source device supports A2DP and AVRCP profiles.
 - If no device is connected in 10 minutes, the speaker will switch to Bluetooth hidden mode. "" will blink on the OLED display. In this mode, (1) new devices cannot find the speaker, but (2) for a device that exists in the pairing record of this speaker, you can select "EDIFIER S880DB MKII" from its Bluetooth device list to reconnect. To exit from Bluetooth hidden mode, press the "Volume/Source" knob on the speaker or tap the "" button on the remote control.

8. USB audio streaming

 1. Switch to USB mode.
2. Connect the speaker to your computer with the bundled USB cable.
3. On the computer, select this speaker as the audio output device, and then start playback.

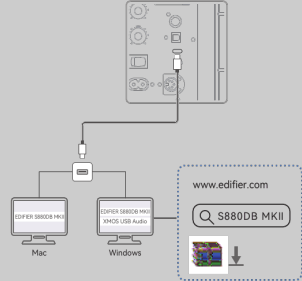

- Note:**
- USB interface of the speaker is built on USB Audio Class 2.0, which supports high-resolution audio with sample rate up to 192kHz. For a computer running Windows 8 or earlier versions, a driver needs to be installed. You can visit www.edifier.com, search for "S880DB MKII", go to its detail page, scroll down to the support information, and click the link to download the driver.
 - For further information about the driver, access the following link for details: <https://www.xmos.com/support/usb-audio-driver-support>.
 - Make sure that S880DB MKII is set as the audio output device. (1) For Windows users, access "Control Panel"→"Sound"→"Play"→"Set as Default" to set "EDIFIER S880DB MKII" or "XMOOS USB Audio" as the current audio output device. (2) For Mac users, access "System Preferences"→"Sound"→"Output" to select "EDIFIER S880DB MKII" as the current audio output device.
 - In USB mode, the following sample rates are supported: 44.1kHz, 48kHz, 96kHz, and 192kHz.

9. Control

[Edifier S880DB MKII Multimedia Speaker User Manual](#)

Comprehensive user manual for the Edifier S880DB MKII multimedia speakers, covering setup, connectivity, controls, specifications, and troubleshooting.

lang:en score:57 filesize: 1.41 M page_count: 7 document date: 2024-10-21




Button	Action
	Tap to pause or resume the playback in Bluetooth or USB mode.
	Tap to mute or unmute the speaker in Line In 1/Line In 2/Optical/Cosial modes.
	Tap to switch between audio effects.



Button	Action
..... 	Swipe from " " to " " to skip to the next track in Bluetooth or USB mode.
..... 	Swipe from " " to " " to skip to the previous track in Bluetooth or USB mode.



Button	Action
Ring area	Swipe clockwise to increase volume.
Ring area	Swipe counterclockwise to decrease volume.

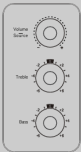 

Knob	Action
Volume/Source	Rotate clockwise to increase volume. Rotate counterclockwise to decrease volume.
Treble	Rotate clockwise to increase treble level. Rotate counterclockwise to decrease treble level.
Bass	Rotate clockwise to increase bass level. Rotate counterclockwise to decrease bass level.

Note:

- The play control in USB mode may vary depending on different audio player applications.
- The volume levels of S880DB MKII and your device are not synchronized. To adjust the volume levels, adjust separately.

10. Specifications

Total output power (RMS): R/L (Treble) 12W+12W
R/L (Mid-range and bass) 32W+32W
Frequency response: 50Hz-40kHz

Declaration for EU
Frequency Band: 2.402GHz ~ 2.480GHz
RF Power Output (Speaker): ≤ 13 dBm (EIRP)
RF Power Output (Remote control): ≤ 4 dBm (EIRP)
There is no restriction of use.

11. Troubleshooting

Cannot connect to your Bluetooth device

- Make sure that the distance between this product and your Bluetooth device is less than 10 meters and there are no obstacles between them.
- Make sure that no device is connected to this product via Bluetooth.
- Make sure that this product is in Bluetooth pairing mode. If not, manually switch it to this mode.
- Restart this product, enable Bluetooth function on your Bluetooth device, and then try again.
- Reset this product to factory settings and try again.

No power

- Make sure that the power cable is properly connected.
- Make sure that the power supply is not disconnected.
- Make sure that the main power button on the rear panel is switched to "ON".

 
No sound

- Make sure that this product is powered on.
- Make sure that this product and your device is properly connected.
- Make sure that the playback is not paused.
- Make sure that this product and your device are not muted.
- Increase the volume of this product and your device.

Noise coming from speakers

- EDIFIER speakers generate little noise, while the background noise of some audio devices are too high. Please unplug audio cables and turn the volume up. If no sound can be heard at 1 meter away from the speaker, there is no problem with this product.

To learn more about EDIFIER, please visit www.edifier.com
For EDIFIER warranty queries, please visit the relevant country page on www.edifier.com and review the section titled Warranty Terms.
USA and Canada: service@edifier.ca
South America: Please visit www.edifier.com (English) or www.edifierla.com (Spanish/Portuguese) for local contact information.

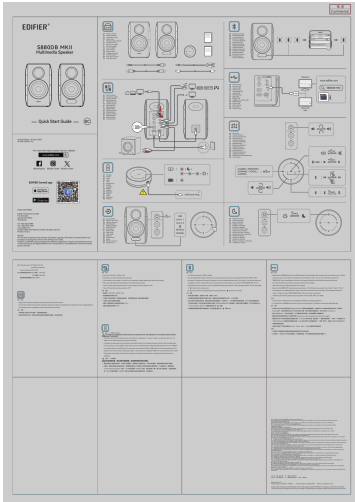

[\[pdf\]](#) User Manual Quick Start Guide Guide


S880DB MKII V1 0 User Manual Edifier International Limited EDF233 Z9G Z9GEDF233 edf233

S880DB MK Multimedia Speaker EN What s in the box FR Contenu de la bot ES Contenido de la caja DE ... olume dial/Input selection L R Treble Bass Settings Bluetooth 2:12 Bluetooth DEVICES EDIFIER **S880DB MKII** Windows XMOS USB Audio www.edifier.com **S880DB MKII** EDIFIER **S880DB MKII** Mac EN Play c...
lang:en score:47 filesize: 2.19 M page_count: 1 document date: 2024-03-15




[\[pdf\]](#)

dddd docId E84AA6009537F9088AB85A8034131E6A Edifier S880DB MKII 2 hangszórók felhasználói kézikönyv Euronicsx1 x1 A bemeneti források közötti váltáshoz nyomja meg a hangerő forrás gombot hátulapon vagy távirányítón Hangerő Forráshasználati útmutatóimages euronics hu product documents aGFzem7DoWxhdGkgw7p0bXV0YXTDsy5wZGY hasznalati utmutato 4zfd5ug2 v 1 |||
Edifier **S880DB MKII** 2.0 hangszrk felhasználói kézikönyv EDIFIER ConneX alkalmazs Ezzel az alkalmazssal - A bemeneti zemmódok váltása, - A lejtszós vezrlése, - Vlassza ki vagy lltsa be az equalizereket, - Firmware frissítés, s mg sok ms EDIFIER ConneX alkalmazs Az EDIFIER ConneX alkalmazs letöltése 1. Az okoses...
lang:no score:40 filesize: 1.35 M page_count: 19 document date: 2024-09-24

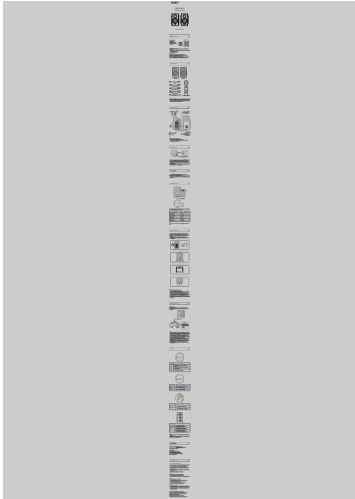 

[EDIFIER S880DB MKII Multimedia Speaker User Manual](#)

 
Comprehensive user manual for the EDIFIER S880DB MKII Multimedia Speaker, covering setup, features, controls, specifications, and troubleshooting.
lang:en score:39 filesize: 518.42 K page_count: 1 document date: 2025-10-01

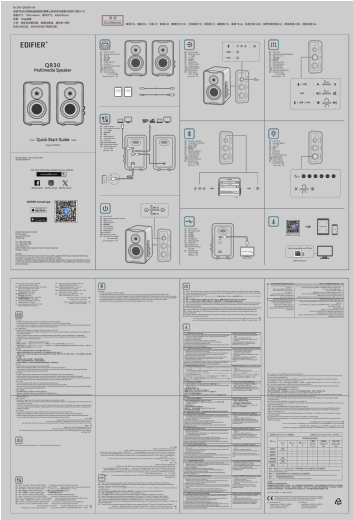

[Edifier QR30 Multimedia Speaker: Quick Start Guide](#)

A concise guide to setting up and using the Edifier QR30 multimedia speakers, covering connections, controls, app integration, and specifications.

 lang:en score:33 filesize: 3.47 M page_count: 1 document date: 2024-10-31

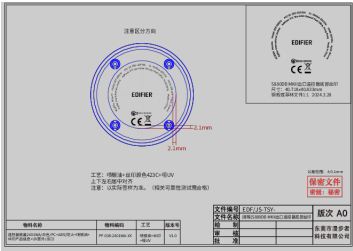

[Edifier S880DB MKII Remote Control Bottom Label Specifications](#)

Technical specifications and manufacturing details for the bottom label of the Edifier S880DB MKII remote control, including materials, processes, and dimensions.

lang:en score:31 filesize: 484.22 K page_count: 1 document date: 2024-03-28