

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ozeino](#) /

› [Ozeino OW810 Wireless Gaming Headset User Manual for PC, PS5, PS4, Switch, Laptop, Mobile](#)

Ozeino OW810

Ozeino OW810 Wireless Gaming Headset User Manual

Model: OW810 | Brand: Ozeino

INTRODUCTION

This manual provides instructions for the Ozeino OW810 Wireless Gaming Headset. Please read this manual carefully before using the product to ensure proper operation and to maximize your gaming experience.

PRODUCT OVERVIEW

Package Contents

- Ozeino OW810 Wireless Gaming Headset
- USB-A 2.4GHz Wireless Dongle
- USB-C 2.4GHz Wireless Adapter
- USB-C Charging Cable
- USB-C to 3.5mm Audio Cable
- User Manual (this document)

Headset Components and Controls

Refer to the image below for an overview of the headset's components and controls.

Longue durée de vie de la batterie

Possibilité de passer rapidement d'un système à l'autre



Battery Lasting Data for reference:	Light On	Light Off
10 mins de charge	90 mins	120 mins
Full Charge (3 Hrs)	20+ heures	40+ heures
Low power remind	10-15 mins	15-20 mins

Image: Ozeino OW810 Headset with visible controls and ports. This includes the power button, volume controls, microphone mute, and connectivity switch (2.4G/BT).



Image: Diagram illustrating the multi-function button operations for the Ozeino OW810 headset, including play/pause, answer/reject calls, volume control, track skipping, and microphone activation/deactivation.

- **Power Button:** Press and hold to power on/off.
- **Volume Up/Next Track Button (+):** Long press for Volume Up, single click for Next Track.
- **Volume Down/Previous Track Button (-):** Long press for Volume Down, single click for Previous Track.
- **Multi-function Button:** Single click for Play/Pause or Answer/End Call. Long press (1 second) to reject a call. Double click to activate/deactivate microphone.
- **2.4G/BT Switch:** Toggles between 2.4GHz wireless mode and Bluetooth mode.
- **Microphone:** Adjustable 120-degree microphone.
- **USB-C Port:** For charging and wired connection.

SETUP INSTRUCTIONS

Charging the Headset

Before first use, fully charge the headset. Connect the USB-C charging cable to the headset's USB-C port and the other end to a USB power source (e.g., computer USB port, USB wall adapter).



Image: Illustration of the Ozeino OW810 headset connected via USB-C cable for charging, with a table indicating battery life with lights on/off and charging times.

- A full charge takes approximately 3 hours.
- A 10-minute charge provides approximately 90 minutes of use with lights on, or 120 minutes with lights off.
- Low power reminder occurs 10-15 minutes before battery depletion.

Connecting to Devices

The Ozeino OW810 headset supports three connection modes: 2.4GHz Wireless, Bluetooth, and Wired.



Équipe audio d'élite pour gamers

- Plus de 300 ingénieurs audio professionnels
- 6+ laboratoires avancés de réglage sonore
- Son immersif conçu pour le jeu vidéo

Image: Diagram showing various connection methods for the Ozeino OW810 headset, including USB-A dongle for PS5/PS4, USB-C adapter for mobile/Switch, and compatibility with PC/Laptop/Mac via 2.4GHz, Bluetooth, or wired modes.

2.4GHz Wireless Mode (Recommended for PS5, PS4, PC, Mobile, Switch)

1. Ensure the headset is charged and powered on.
2. Slide the switch on the headset to the "2.4G" position.
3. For PS5/PS4/PC: Insert the USB-A 2.4GHz wireless dongle into an available USB port on your device.
4. For Mobile/Switch (with USB-C port): Insert the USB-C 2.4GHz wireless adapter into the device's USB-C port.
5. The headset will automatically connect to the dongle/adapter. An indicator light on the headset will confirm connection.
6. Adjust audio settings on your device if necessary to select the headset as the input/output device.

Bluetooth Mode (For Mac, Laptop, Mobile)

1. Ensure the headset is charged and powered on.
2. Slide the switch on the headset to the "BT" position. The headset will enter pairing mode (indicator light will flash).
3. On your device (Mac, laptop, mobile), go to Bluetooth settings and search for "Ozeino OW810" (or similar).
4. Select the headset to pair. An indicator light on the headset will confirm successful pairing.
5. *Note: Bluetooth mode does not directly support PS5, PS4, or PC for microphone functionality without an additional Bluetooth USB adapter (not included). 2.4GHz mode is recommended for these platforms.*

Wired Mode (For PC, Laptop, Mac, PS5, PS4)

1. Connect the USB-C end of the USB-C to 3.5mm audio cable to the headset's USB-C port.
2. Connect the 3.5mm jack end of the cable to the 3.5mm audio port on your device.
3. The headset will function as a wired audio device.

OPERATING INSTRUCTIONS

Basic Functions

- **Power On/Off:** Press and hold the power button for 3 seconds.
- **Volume Adjustment:** Long press the '+' button to increase volume, long press the '-' button to decrease volume.
- **Track Control (Bluetooth Mode):** Single click '+' for next track, single click '-' for previous track.
- **Play/Pause (Bluetooth Mode):** Single click the multi-function button.
- **Answer/End Call (Bluetooth Mode):** Single click the multi-function button.
- **Reject Call (Bluetooth Mode):** Long press the multi-function button for 1 second.
- **Microphone On/Off:** Double click the multi-function button to toggle the microphone.
- **RGB Lighting On/Off:** Double click the dedicated light button (if present, or refer to multi-function button diagram for specific control).

Microphone

ADJUSTABLE 120° MICROPHONE

Accurately capture your voice
for in-game

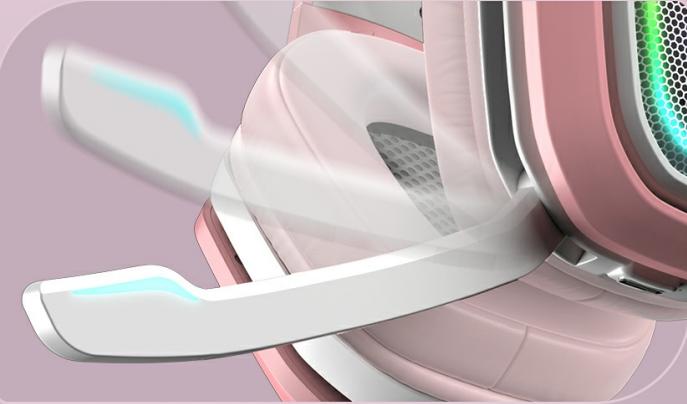


Image: The Ozeino OW810 headset featuring its 120-degree adjustable microphone, designed for clear voice capture during gameplay.

MAINTENANCE

- Clean the headset regularly with a soft, dry cloth.
- Avoid exposing the headset to extreme temperatures, humidity, or direct sunlight.
- Do not use abrasive cleaners or solvents.
- Store the headset in a cool, dry place when not in use.
- Avoid dropping or subjecting the headset to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from headset.	Headset not powered on. Incorrect connection mode selected. Volume too low on headset or device. Dongle/adapter not properly inserted or recognized. Device audio output not set to headset.	Ensure headset is powered on. Verify the 2.4G/BT switch is in the correct position. Increase volume on both headset and connected device. Re-insert the dongle/adapter. Try a different USB port. Check device audio settings and select the headset.
Microphone not working.	Microphone muted. Incorrect microphone input selected on device. Bluetooth mode used on PS5/PS4/PC without adapter.	Double click the multi-function button to unmute. Check device sound settings and select the headset microphone. Use 2.4GHz wireless mode for PS5/PS4/PC for microphone functionality.

Problem	Possible Cause	Solution
Intermittent connection or audio drops.	Out of range. Interference from other wireless devices. Low headset battery.	Move closer to the connected device (within 10m). Move away from other 2.4GHz devices (e.g., Wi-Fi routers). Charge the headset.
Headset not pairing via Bluetooth.	Headset not in pairing mode. Device Bluetooth is off.	Ensure the headset switch is on "BT" and indicator light is flashing. Enable Bluetooth on your device and search again.

SPECIFICATIONS

Feature	Detail
Model Name	OW810
Connectivity Technology	2.4GHz Wireless, Bluetooth, Wired (USB-C to 3.5mm)
Compatible Devices	PS5, PS4, PC, Mobile Devices, Mac, Laptop, Switch
Driver Size	50mm
Special Features	7.1 Surround Sound, Adjustable Microphone, RGB Lighting, Memory Foam Earcups
Wireless Range	Up to 10 meters (2.4GHz mode)
Latency	Less than 30ms (2.4GHz mode)
Battery Type	Lithium, Rechargeable (800mAh)
Battery Life	Up to 40 hours (at 60% volume, lights off)
Charging Time	Approximately 3 hours for full charge
Material	Plastic
Noise Isolation	Passive Noise Reduction
Headphone Jack	None (uses USB-C for wired audio via adapter cable)

WARRANTY AND SUPPORT


Manufacturer Warranty

The Ozeino OW810 Wireless Gaming Headset comes with a 2-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Ozeino

customer support. Contact details are typically provided in the product packaging or on the official Ozeino website.

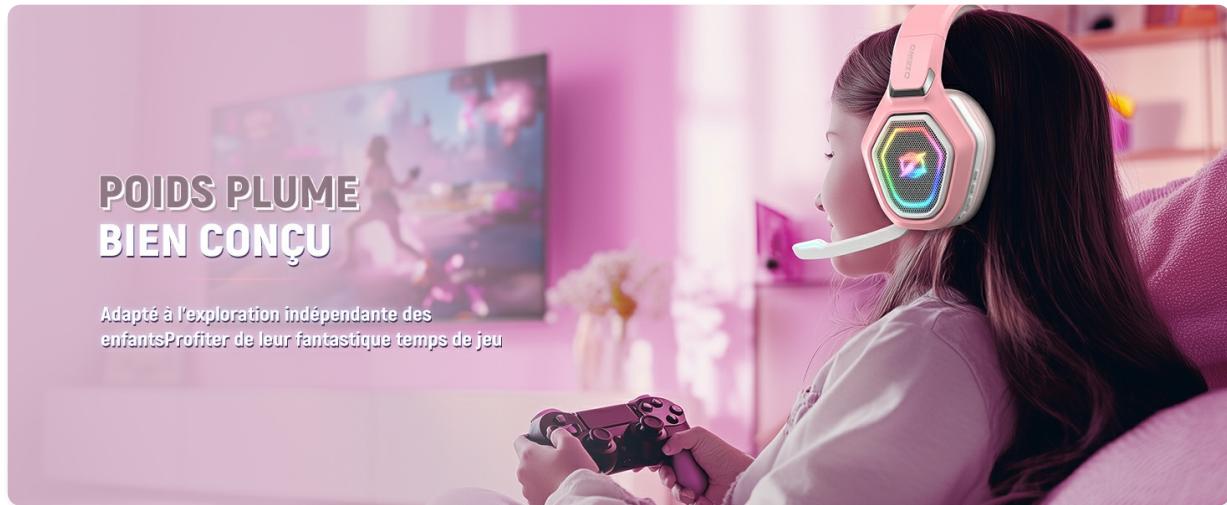

POIDS PLUME
BIEN CONÇU

Adapté à l'exploration indépendante des
enfants Profiter de leur fantastique temps de jeu

Image: Information regarding Ozeino's 24/7 after-sales service, including contact details in the user manual, 24-hour response time, and reliable, friendly service.