

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image Heated Travel Mug (Model 1018013) Instruction Manual

Sharper Image 1018013

Sharper Image Heated Travel Mug (Model 1018013) Instruction Manual

USB-C Powered, 10 fl. oz. Capacity, Insulated, 360-Degree Leak-Proof Lid

INTRODUCTION

The Sharper Image Heated Travel Mug is designed to keep your beverages warm while on the go. Featuring USB-C power, double-wall insulation, and a 360-degree leak-proof lid, this mug provides convenience for daily commutes and travel.



Image: The Sharper Image Heated Travel Mug shown alongside its retail packaging, highlighting its features and design.

PACKAGE CONTENTS

- Heated Travel Mug
- Lid
- USB-C Cable

SETUP

1. **Initial Cleaning:** Before first use, wash the mug and lid thoroughly with warm, soapy water. Rinse completely and dry. Ensure the USB-C port cover is securely closed during washing.
2. **Charge Cable Connection:** Connect the included USB-C cable to the mug's USB-C input port. Ensure a secure connection.
3. **Power Source:** Plug the other end of the USB-C cable into a compatible USB-C power adapter (not included) or a USB-C port in your vehicle or power bank.

SHARPER IMAGE®

HEATED TRAVEL MUG



INSULATED
WALLS



360° DRINK
LID



SLIM DESIGN



USB-C INPUT

CAPACITY

Holds up to 10 fl oz
(295 mL)

POWERED HEAT

Plug in the USB-C power cable
to automatically heat beverages

Image: A detailed view of the Sharper Image Heated Travel Mug, highlighting the USB-C input port for power connection.

OPERATING INSTRUCTIONS

1. **Filling the Mug:** Remove the lid and fill the mug with your desired beverage. Do not overfill; leave adequate space for the lid. The mug has a capacity of 10 fl. oz. (295 mL).
2. **Securing the Lid:** Place the lid onto the mug and twist clockwise until securely fastened. Ensure the lid is properly aligned to prevent leaks.
3. **Activating Heating:** Plug the USB-C cable into the mug and a power source. The mug will begin to heat the beverage. Note that the mug heats while plugged in and maintains temperature through insulation when unplugged.
4. **Drinking from the Lid:** The 360-degree lid allows sipping from any side. To open the drinking mechanism, press down on the center of the lid. Press again to close and seal.



**SINGLE-PRESS
OPEN & CLOSE**



Image: A close-up of the mug's lid, illustrating the single-press open and close mechanism for drinking.



SPILL-RESISTANT

Closes securely to avoid accidents and spills



HEATED

Plug in to heat beverage and enjoy warmth at your leisure

HEAT
ON

Image: A cutaway diagram of the heated travel mug, demonstrating the internal heating element and spill-resistant lid.

MAINTENANCE AND CLEANING

- **Daily Cleaning:** After each use, unplug the mug and allow it to cool. Hand wash the mug and lid with warm, soapy water.
- **Waterproof Design:** The mug features an IPX7 waterproof rating, making it submersible for easy cleaning. Ensure the USB-C port cover is fully sealed before submerging.
- **Lid Disassembly:** The inside of the lid can be unscrewed for thorough cleaning of all components. Reassemble securely after cleaning.
- **Drying:** Allow all parts to air dry completely before reassembling or storing.
- **Storage:** Store the mug in a clean, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mug is not heating.	USB-C cable not properly connected or power source issue.	Ensure the USB-C cable is securely plugged into both the mug and a working power source. Try a different USB-C power adapter or port.
Beverage is not hot enough.	Insufficient heating time or initial beverage temperature too low.	Allow more time for the mug to heat the beverage. For best results, start with a warm beverage. The mug is designed to maintain temperature, not rapidly boil cold liquids.
Lid is leaking.	Lid not securely fastened or drinking mechanism not closed.	Ensure the lid is twisted on tightly and the 360-degree drinking mechanism is pressed down to the closed position. Check for any debris preventing a proper seal.
Mug does not fit in cupholder.	Cupholder size varies.	The mug is designed to fit most standard cupholders due to its slim, tapered base. If it does not fit, alternative placement may be necessary.

SPECIFICATIONS

- Model:** 1018013
- Capacity:** 10 fl. oz. (295 mL)
- Power Source:** USB-C (cable included)
- Material:** BPA-free Plastic, Stainless Steel Interior
- Special Features:** Double-wall insulation, 360° Leak-Proof Lid, IPX7 Waterproof
- Dimensions:** Approximately 9.06 x 4.8 x 4.41 inches (Package Dimensions)
- Weight:** Approximately 1.04 pounds

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official Sharper Image website or contact their customer service directly. Keep your purchase receipt for warranty claims.

Sharper Image Official Website: www.sharperimage.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9PF6LCL>

More documents and user manuals: <https://manuals.plus/>