

Gemmy 551528-ST

Gemmy Nightmare Before Christmas Jack Skellington 6ft Animatronic Decoration

Model: 551528-ST | Brand: Gemmy

INTRODUCTION

Thank you for purchasing the Gemmy Nightmare Before Christmas Jack Skellington 6ft Animatronic Decoration. This animated figure is designed to bring the iconic Pumpkin King to life, perfect for indoor or outdoor Halloween displays. Please read this manual carefully before assembly and operation to ensure safe and proper use.

SAFETY INFORMATION

- Always supervise children around the animatronic.
- Ensure the product is placed on a stable, level surface to prevent tipping.
- Keep away from open flames, heat sources, and flammable materials.
- Do not expose to water or extreme weather conditions unless explicitly stated for outdoor use. This product is recommended for indoor and outdoor use, but protect electrical components from moisture.
- Unplug the animatronic when not in use or during assembly/disassembly.
- Do not attempt to modify or repair the product yourself. Contact customer support for assistance.

WHAT'S INCLUDED

- Jack Skellington Animatronic Figure (main body, head, arms, legs)
- Base Stand
- Power Adapter
- Instruction Manual

ASSEMBLY AND SETUP

Follow these steps to assemble your Jack Skellington animatronic:

Step 1: Unpacking

Carefully remove all components from the packaging. Lay them out on a clean, flat surface. Ensure all parts listed in the 'What's Included' section are present.

Step 2: Base Assembly

Assemble the base stand according to the diagrams provided in the packaging. Ensure all connections are secure and stable.

Step 3: Attaching the Body

Attach the main body of Jack Skellington to the assembled base stand. Connect the head, arms, and legs as indicated in the instructions. Ensure all parts are firmly connected to prevent accidental detachment during operation.

Step 4: Connecting Power

Locate the power input on the animatronic and connect the provided power adapter. Plug the adapter into a standard electrical outlet. For outdoor use, ensure the outlet is weather-protected and use a suitable outdoor extension cord if necessary.

Placement Considerations

Choose a prominent location for your Jack Skellington animatronic. For outdoor use, select a sheltered area to protect it from direct heavy rain or strong winds. Ensure there is enough space for the animatronic's movements without obstruction.



Image: The 6-foot Jack Skellington animatronic standing tall in an outdoor Halloween setting, showcasing its impressive height and design.

6' Reference

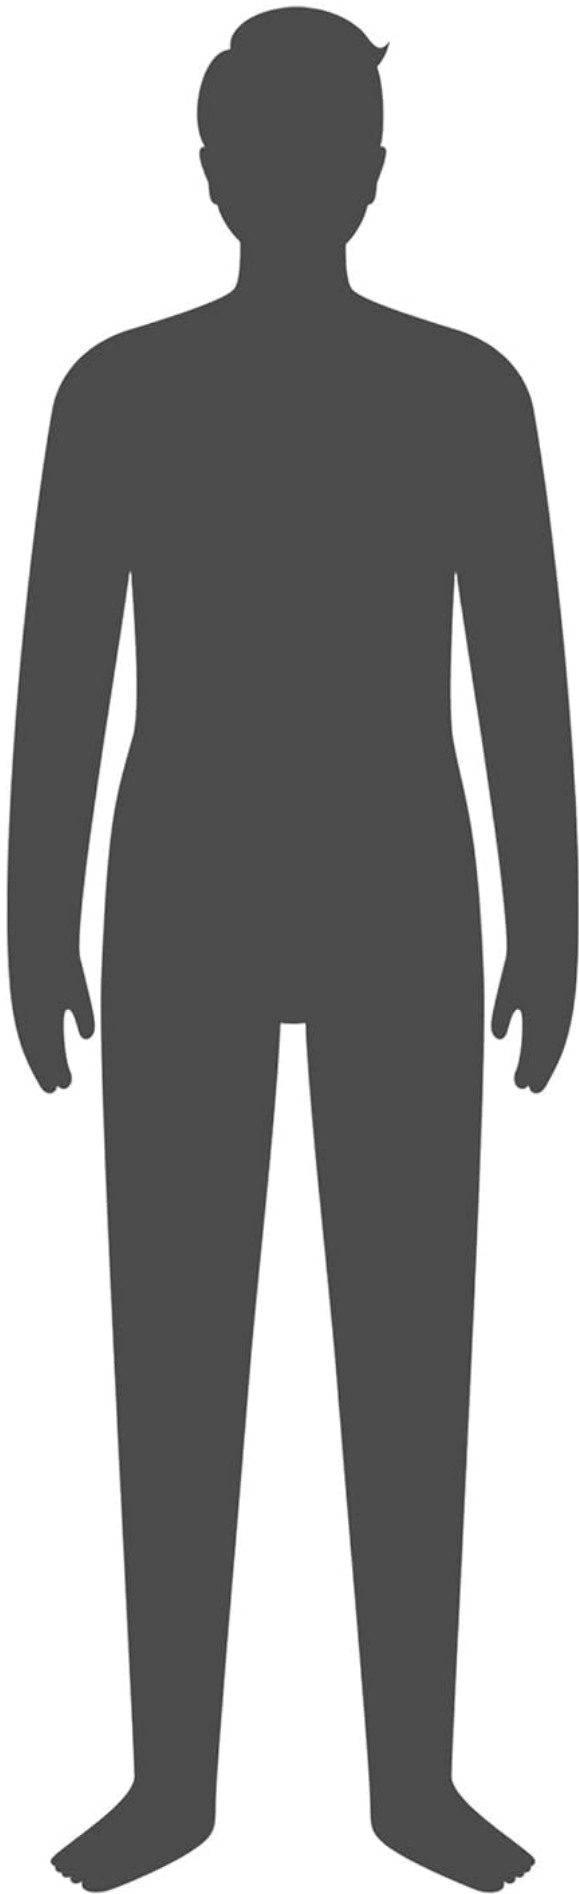


Image: A visual comparison demonstrating the 6-foot height of the Jack Skellington animatronic next to a human figure, highlighting its

OPERATING INSTRUCTIONS

Once assembled and powered, your Jack Skellington animatronic is ready for operation. Locate the power switch, typically found on the back or base of the figure. Turn the switch to the 'ON' position to activate the animatronic's movements and sounds. Some models may include a motion sensor or a continuous play option.

Your browser does not support the video tag.

Video: An official product video showcasing the Gemmy Nightmare Before Christmas Jack Skellington animatronic in action, demonstrating its movements and sound features.

Your browser does not support the video tag.

Video: A highlight reel from an official product video, focusing on the key animated features and details of the Jack Skellington animatronic.

FEATURES

- **Animated Movement:** Jack Skellington features dynamic movements to create a spooky and engaging display.
- **Sound Effects:** Integrated sound effects enhance the immersive experience.
- **Detailed Design:** Crafted with attention to detail, capturing the iconic look of Jack Skellington from The Nightmare Before Christmas.
- **Durable Construction:** Made from plastic, foam, and metal for lasting use.



Image: A detailed close-up of Jack Skellington's head, highlighting the intricate skull design and his signature black bowtie.

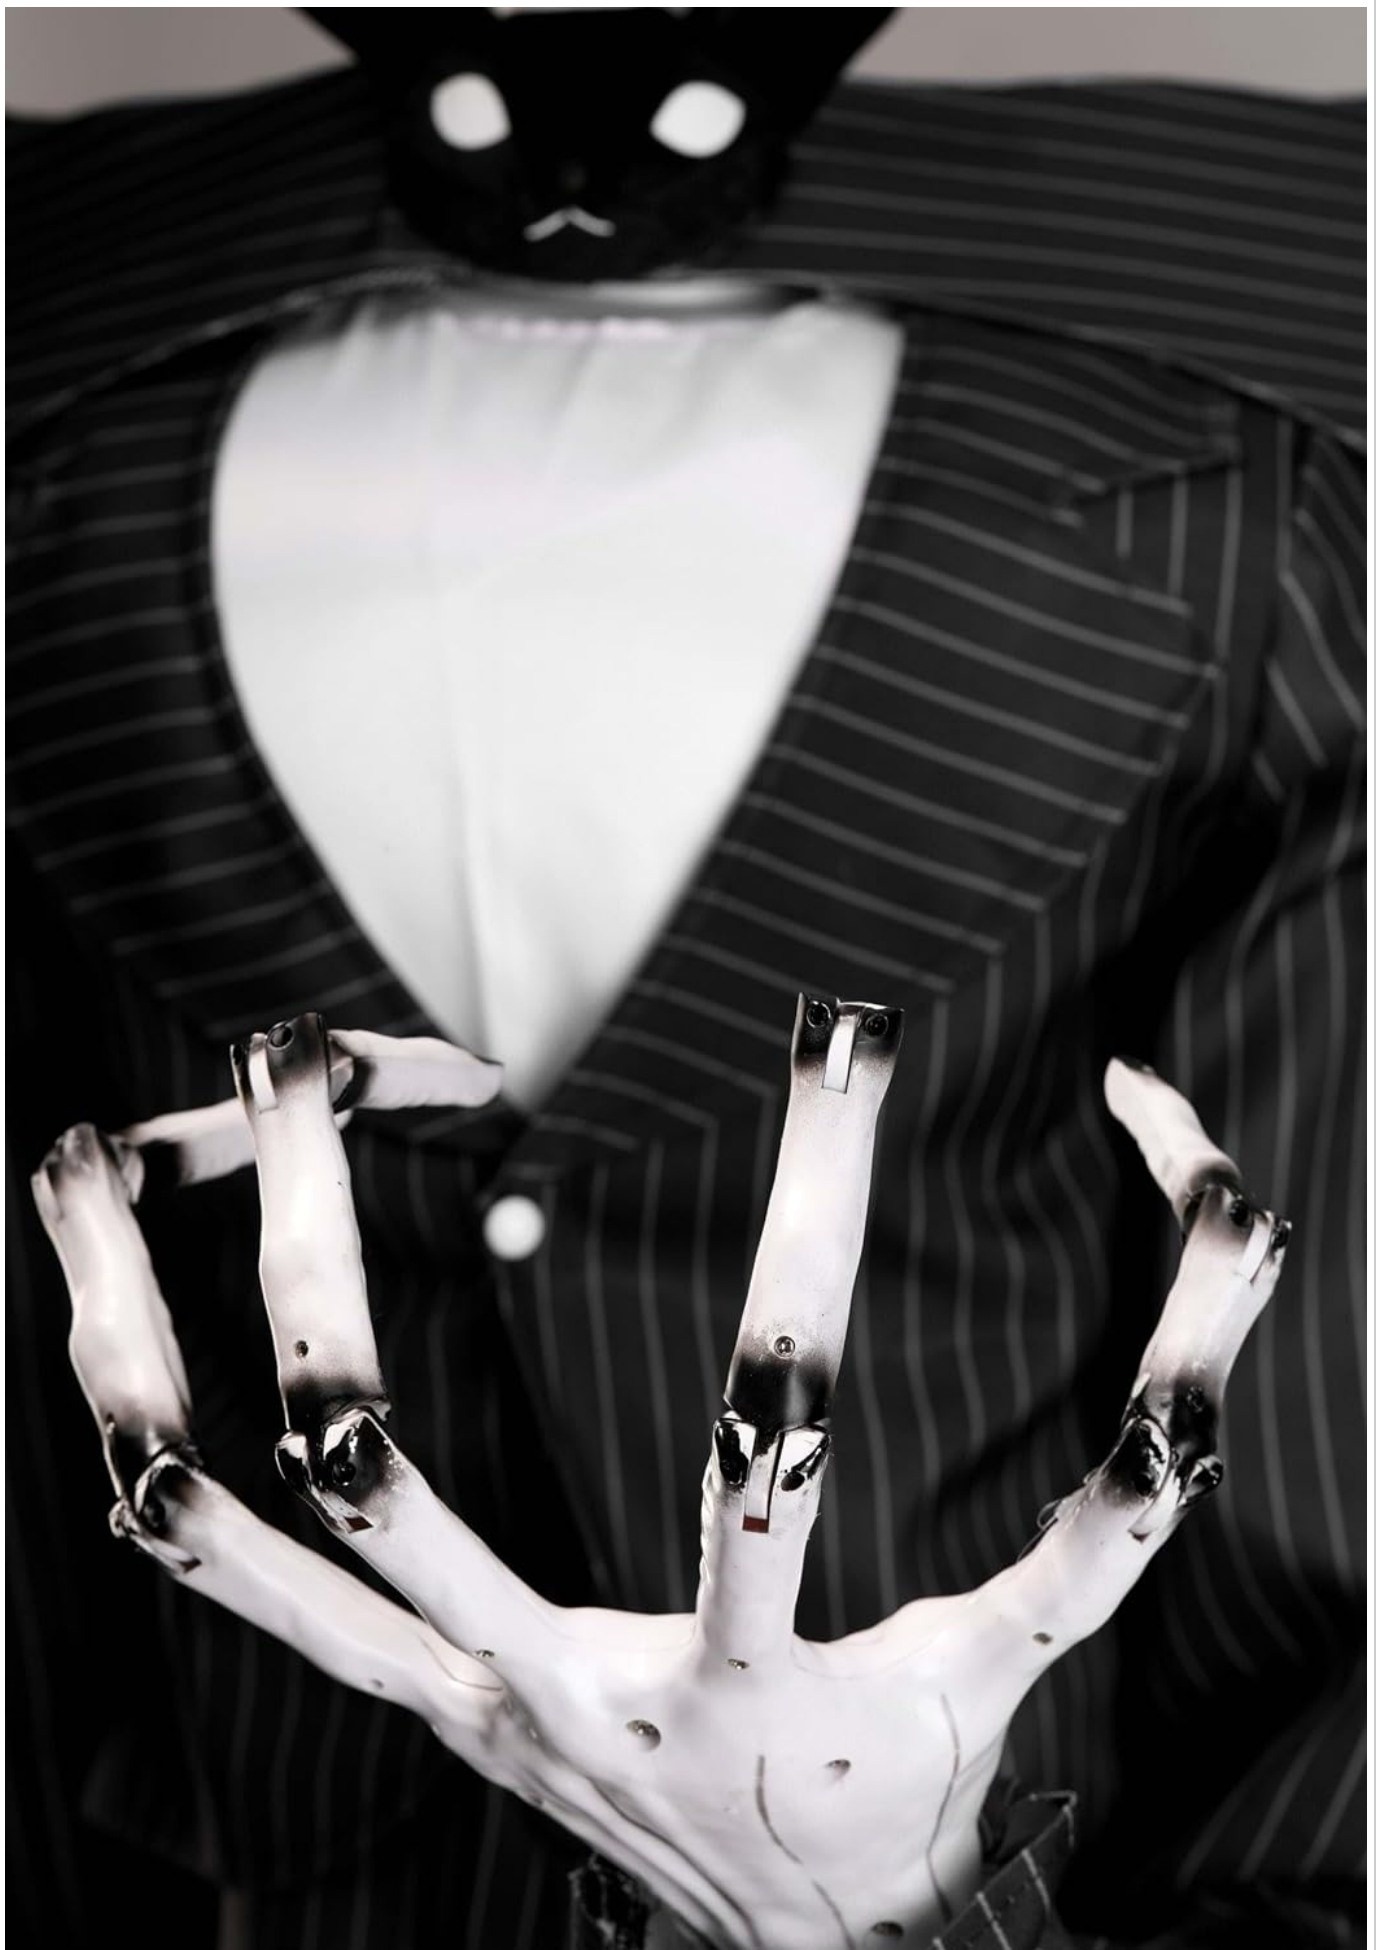


Image: A close-up view of Jack Skellington's skeletal hands, emphasizing their elongated, pointed fingers and eerie appearance.

MAINTENANCE AND CARE

- **Cleaning:** Wipe clean with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the animatronic in its original packaging or a protective container in a cool, dry place away from direct sunlight.
- **Inspection:** Periodically inspect the power cord and connections for any signs of damage. Discontinue use if damage is found.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Animatronic does not turn on.	No power, loose connection, power switch off.	Check power outlet, ensure all connections are secure, turn power switch to 'ON'.
Movements are erratic or stopped.	Obstruction, internal mechanism issue.	Ensure no objects are blocking movement. Turn off, wait 30 seconds, then turn on again. If problem persists, contact support.
No sound.	Volume too low, speaker obstruction, internal sound issue.	Check volume controls if available. Ensure speaker is not covered.

SPECIFICATIONS

Attribute	Detail
Brand	Gemmy
Model Number	551528-ST
Height	6 feet (72 inches)
Product Dimensions	22.8 x 17.9 x 12.1 inches (packaged)
Item Weight	16.05 Pounds
Material	Plastic, Foam, Metal
Theme	Horror, Nightmare Before Christmas
Recommended Use	Indoor, Outdoor
UPC	191245515289

HalloweenCostumes

SIZE	HEIGHT	WIDTH
Standard	77"	20"

Image: A table detailing the product's dimensions, including a height of 77 inches (approximately 6 feet 5 inches) and a width of 20 inches for the standard size.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Gemmy website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question