

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Innoflame](#) /

> [Innoflame 26" Electric Fireplace Insert Instruction Manual - Model RV26V80L-MT1](#)

Innoflame RV26V80L-MT1

Innoflame 26" Electric Fireplace Insert Instruction Manual

Model: RV26V80L-MT1

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand this entire instruction manual before attempting to assemble, operate, or install this product. Failure to do so could result in fire, electric shock, or serious personal injury.

- Always unplug the fireplace when not in use.
- Do not operate any fireplace with a damaged cord or plug, or if the heater has malfunctioned, been dropped, or damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the fireplace and away from the sides and rear.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- The unit is equipped with an overheat protection switch that automatically cuts off power at high temperatures, along with a fuse for added safety.
- This product is CSA/UL certified, ensuring compliance with safety standards.

PRODUCT OVERVIEW

The Innoflame 26" Electric Fireplace Insert provides a realistic flame effect and supplemental heating for indoor spaces. It features a log set, adjustable flame brightness, and a digital display for easy control.



Figure 1: Front view of the Innoflame 26" Electric Fireplace Insert with remote control.

Key Features:

- Realistic flame effect with log set and adjustable 4 flame brightness levels.
- Efficient heating with 5000 BTU heat output, warming rooms up to 400 sq ft.
- Built-in thermostat for temperature control from 64°F-82°F.
- Easy-to-use controls via included remote control or integrated control panel.
- Overheat protection and fuse for enhanced safety.
- Integrated timer function (1-8 hours).

SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Innoflame
Model Name	RV26V80L-MT1
Product Dimensions	5"D x 27.2"W x 18.1"H
Installation Type	Recessed
Opening Dimensions (Recommended)	W 26 3/16" x H 17 5/8"
Power Source	Corded Electric
Power Cord Length	6 ft
Heat Output	1400 Watts (5000 BTU)
Heating Coverage	Up to 400 sq ft
Thermostat Range	64°F-82°F
Flame Brightness Levels	4
Timer Settings	1-8 hours
Material	Metal, Tempered Glass
Item Weight	19.62 Pounds
Batteries for Remote	2 AAA batteries (required)

SETUP AND INSTALLATION

This electric fireplace insert is designed for recessed installation into furniture such as TV stands, sideboards, or bookshelves. Ensure the furniture has an opening that matches the recommended dimensions for proper fit and ventilation.

Measuring Opening Dimensions:



Figure 2: Guide for measuring the furniture opening.

- **Measure Height:** Use a measuring tape to determine the height of the opening from the bottom to the top.

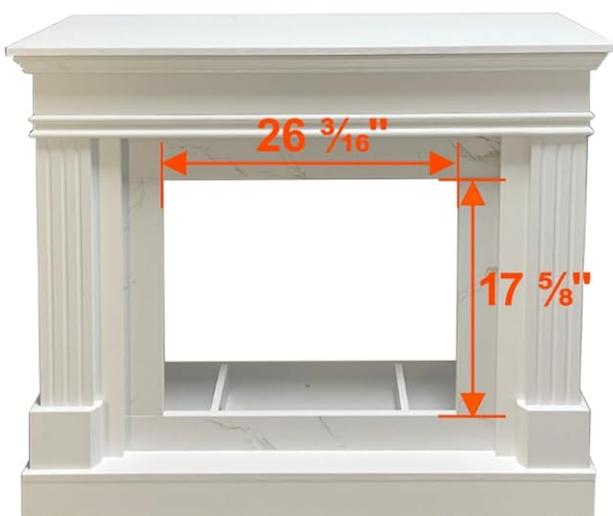
- **Measure Width:** Use a measuring tape to determine the width of the opening from the left side to the right side.
- The recommended opening dimensions are approximately **W 26 3/16" x H 17 5/8"**.

Installation Steps:

1. Carefully unpack the fireplace insert and all components. Verify that all included components (fireplace unit, remote control, screws, manual) are present.
2. Position the furniture where the fireplace will be installed. Ensure there is adequate space for ventilation around the unit.
3. Slide the electric fireplace insert into the prepared opening in your furniture. The unit is typically installed from the back of the furniture.
4. Secure the fireplace insert using the provided screws, if applicable, to prevent movement.
5. Plug the power cord into a grounded 120V AC outlet. Ensure the outlet is easily accessible.



Suitable for furniture with an opening size of W 26 3/16" X 17 5/8"



The electric fireplace is installed from the back of the furniture to the front.

Figure 3: Dimensions and typical recessed installation.

OPERATING INSTRUCTIONS

The Inno flame Electric Fireplace Insert can be operated using the included remote control or the control buttons located on the unit.

Remote Control and Control Panel:

Your browser does not support the video tag.

Video 1: Demonstration of remote control and control button functions for flame brightness, temperature, and timer settings.

Functions:

- **Power On/Off:** Press the power button on the remote or control panel to turn the unit on or off.
- **Flame Brightness Adjustment:** The fireplace features 4 adjustable flame brightness levels (L1, L2, L3, L4). Use the flame button on the remote or control panel to cycle through the brightness settings.



4 Brightness Levels



Figure 4: Visual representation of the 4 flame brightness levels.

- **Temperature Setting:** Adjust the desired room temperature using the thermostat controls. The temperature can be set between 64°F and 82°F. The unit will automatically turn the heater on or off to maintain the set temperature.
- **Timer Function:** Set the operating time for the fireplace from 1 to 8 hours using the timer button. The unit will automatically shut off after the set time has elapsed.
- **Flame Only Mode:** The flame effect can be operated independently without the heater function, providing ambiance without heat.
- **Flame and Heat Mode:** Both the flame effect and heater can be operated simultaneously to provide both visual appeal and warmth.



Figure 5: Comparison of Flame and Heat mode versus Flame Only mode.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace insert.

- **Cleaning:** Always unplug the unit before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Ventilation:** Ensure that the air intake and exhaust vents are clear of any obstructions to maintain proper airflow and prevent overheating.
- **Light Bulbs:** The flame effect uses LED technology, which typically does not require replacement. If issues arise, consult the troubleshooting section or contact customer support.

TROUBLESHOOTING

If you experience issues with your electric fireplace insert, refer to the following common problems and solutions:

- **Unit does not turn on:**

- Check if the power cord is securely plugged into a grounded outlet.
- Verify that the wall outlet is functioning by plugging in another appliance.
- Ensure the main power switch on the unit (if present) is in the 'ON' position.
- Check the remote control batteries and replace if necessary.

- **No heat output:**

- Confirm that the heater function is activated (not in flame-only mode).
- Check the thermostat setting; ensure it is set higher than the current room temperature.
- Ensure air vents are not blocked. The overheat protection may have activated. Unplug the unit, wait 10-15 minutes, and plug it back in.

- **Flame effect is not working:**

- Ensure the unit is powered on.
- Adjust the flame brightness setting.

- **Remote control not working:**

- Replace the batteries (2 AAA batteries required).
- Ensure there are no obstructions between the remote and the unit's sensor.

If the problem persists after attempting these solutions, please contact Inno flame customer support.

WARRANTY AND SUPPORT

Warranty Information:

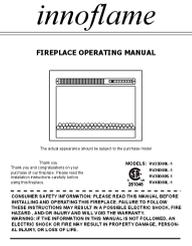
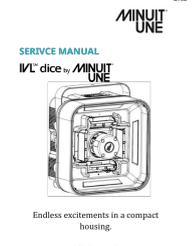
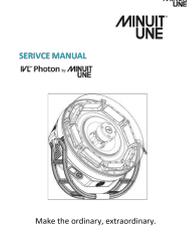
This Inno flame Electric Fireplace Insert comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product or contact Inno flame customer support.

Customer Support:

For technical assistance, troubleshooting, or warranty inquiries, please contact Inno flame customer support. Contact information can typically be found in the product packaging or on the official Inno flame website.



Related Documents - RV26V80L-MT1

 <p>innoflame FIREPLACE OPERATING MANUAL</p> <p>The first operation should be read to the user before use.</p> <p>Models: RV26P80F-C1, RV26D80L-1, RV30D80S-1, RV48D80L-1, RV26P80F-C1, RV26D80L-1, RV30D80S-1, RV48D80L-1</p>	<p>Innoflame Electric Fireplace Operating and Installation Manual</p> <p>Comprehensive operating and installation manual for Innoflame electric fireplaces, covering safety, setup, controls, maintenance, and troubleshooting for models RV26P80F-C1 through RV48D80F-C1.</p>
 <p>innoflame FIREPLACE OPERATING MANUAL</p> <p>The first operation should be read to the user before use.</p> <p>Models: RV23D80L-1, RV26D80L-1, RV30D80S-1, RV48D80L-1</p>	<p>Innoflame Fireplace Operating Manual RV23D80L-1, RV26D80L-1, RV30D80S-1, RV48D80L-1</p> <p>Operating and installation manual for Innoflame fireplaces, including safety instructions, dimensions, electrical specifications, control panel functions, battery replacement, care, maintenance, and troubleshooting.</p>
 <p>ELECTRIC FIREPLACE HOMEOWNERS OPERATING MANUAL</p> <p>The first operation should be read to the user before use.</p> <p>Models: RV23V80S-MT1, RV23V80L-MT1, RV26V80S-MT1, RV26V80L-MT1, RV30V80S-MT1, RV30V80L-MT1, RV48V80S-MT1, RV48V80L-MT1</p>	<p>Electric Fireplace Homeowners Operating Manual</p> <p>Comprehensive operating manual for electric fireplaces, detailing installation, safety precautions, operational instructions, maintenance, troubleshooting, and warranty information. Covers various models including RV23V80S-MT1, RV23V80L-MT1, and others.</p>
 <p>ELECTRIC FIREPLACE HOMEOWNERS OPERATING MANUAL</p> <p>The first operation should be read to the user before use.</p> <p>Models: RV23V80S-MT1, RV23V80L-MT1, RV26V80S-MT1, RV26V80L-MT1, RV30V80S-MT1, RV30V80L-MT1, RV48V80S-MT1, RV48V80L-MT1</p>	<p>EdenDirect Electric Fireplace Homeowners Operating Manual</p> <p>Comprehensive operating manual for EdenDirect electric fireplaces, covering installation, safety instructions, package contents, electrical specifications, operation, battery replacement, FCC statement, maintenance, troubleshooting, and warranty information for various RV series models.</p>
 <p>MINUIT UNE SERVICE MANUAL IVL dice by MINUIT UNE</p> <p>Endless excitements in a compact housing.</p>	<p>Minit Une IVL dice Service Manual</p> <p>Detailed service manual for the Minit Une IVL dice professional lighting fixture, covering troubleshooting, maintenance, calibration, software updates, and part replacement procedures.</p>
 <p>MINUIT UNE SERVICE MANUAL IVL Photon by MINUIT UNE</p> <p>Make the ordinary, extraordinary.</p>	<p>Minit Une IVL™ Photon Service Manual AC: Maintenance and Troubleshooting Guide</p> <p>Comprehensive service manual for the Minit Une IVL™ Photon lighting fixture. Covers safety procedures, troubleshooting common issues, detailed replacement operations for various components, calibration, testing, software updates, cleaning, and DMX protocol.</p>