

Joymate L40

Joymate L40 Phone Stand with Bluetooth Speaker and Charging Function User Manual

Model: L40

1. INTRODUCTION

Thank you for choosing the Joymate L40 Phone Stand with Bluetooth Speaker and Charging Function. This versatile device combines a stable phone holder, a high-definition Bluetooth speaker, and a portable power bank into one compact unit. Designed for convenience and enhanced media experience, it is compatible with a wide range of smartphones and tablets.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep out of reach of children.
- Use only the provided charging cable or a certified equivalent.
- Do not attempt to disassemble or repair the device yourself.

3. PACKAGE CONTENTS

Ensure all items are present in your package:

- Joymate L40 Phone Stand with Bluetooth Speaker and Charging Function x1
- Type-C Data Cable x1

- Instruction Manual x1
- Packing Box x1



Image: The package contents of the Joymate L40, showing the pink phone stand, a white Type-C data cable, the instruction manual, and the product box.

4. PRODUCT OVERVIEW

The Joymate L40 is designed for multi-functional use, offering:

- **3-in-1 Functionality:** Bluetooth Speaker, Phone Stand, and Charging Function.
- **Adjustable & Rotatable Stand:** 360° rotatable and height/angle adjustable for optimal viewing.
- **HD Stereo Subwoofer Speaker:** Delivers clear sound with enhanced bass.
- **Bluetooth 5.3:** Ensures stable and strong connection up to 32.80ft.
- **5000mAh Power Bank:** Provides emergency charging for your devices.
- **Hands-Free Calls:** Built-in microphone for convenient communication.
- **Foldable Design:** Compact and portable for easy carrying.

Hands-free Chargeable Phone Stand



Hands-free
video call answer
(with mic)



Chargeable
for devices



5000mAh:
play up to 40 hours
at 50% volume



Range up
to 32.80ft



Image: A pink Joymate L40 Phone Stand with Bluetooth Speaker and Charging Function, showcasing its compact design.

Controls and Ports



Image: A diagram illustrating the control buttons and ports on the Joymate L40, including battery level display, volume/track controls, power/mode button, answer/hang up/play/pause button, Type-C charging input, and USB-A charging output.

5. SETUP

5.1 Charging the Device

1. Connect the provided Type-C data cable to the Type-C charging input port on the device.
2. Connect the other end of the cable to a 5V=2A power adapter (not included).
3. The battery indicator lights will show the charging status. A full charge typically takes 3-4 hours.



Image: A close-up of the Joymate L40 device highlighting the 5000mAh battery capacity and its indicator lights.

5.2 Bluetooth Pairing

1. Slide the power switch to the 'ON' position. The device will automatically enter Bluetooth pairing mode, indicated by a blinking blue light.
2. On your smartphone or tablet, go to Bluetooth settings and search for 'Joymate L40'.
3. Select 'Joymate L40' to connect. Once connected, the blue light will stop blinking and remain solid.
4. The device will automatically reconnect to the last paired device when powered on.



Image: A visual representation of the Bluetooth 5.3 chip, emphasizing stable and strong wireless connectivity.

Your browser does not support the video tag.

Video: This video demonstrates the Bluetooth pairing process of the Joymate L40 with a smartphone, showing how to turn on the device and connect it wirelessly.

6. OPERATING THE DEVICE

6.1 Using the Phone Stand

- Gently pull up the phone holder to extend it.
- Adjust the height and angle of the stand to your preferred viewing position. The stand features a 360° rotatable base for flexible orientation.
- Place your smartphone or tablet on the anti-slip panel and wider anti-slip bracket.



Image: The Joymate L40 phone stand demonstrating its foldable design, adjustable height, and angle capabilities for comfortable viewing.

6.2 Bluetooth Speaker Functions

- After successful Bluetooth pairing, open your music app and start playing audio.
- Use the **VOL+/-** buttons to adjust the volume.
- Press and hold the **VOL+/-** buttons to skip to the previous or next track.

- Press the **Play/Pause** button to control audio playback.

Joymate committed to providing each customer with the highest standard of product and customer service. Our goal is to develop performance products that meet the needs of our customers through ongoing research and development.



Hassle-free
Customer Service



Quick Response



24H Online Service



100% Satisfied

Image: An internal diagram of the Joymate L40, highlighting the HD Subwoofer for enhanced sound quality and the anti-slip holder for device stability.

Your browser does not support the video tag.

Video: This video demonstrates the sound quality and controls of the Joymate L40 Bluetooth speaker while playing music from a smartphone.

6.3 Hands-Free Calls

- When a call comes in, press the **Answer/Hang up** button to answer or end the call.
- The built-in microphone allows for clear hands-free communication.

6.4 Power Bank Function

- Connect your device's charging cable to the USB-A output port on the Joymate L40.
- The device will begin charging your phone or tablet.

6.5 AUX Mode (Computer Speaker)

- Connect the Type-C data cable to the IN/AUX port on the Joymate L40.
- Connect the other end of the cable to your computer's USB port.
- The device will function as an external speaker for your computer.

Your browser does not support the video tag.

Video: This video provides a brief introduction to the product's features, including its use as a phone stand, Bluetooth speaker, and power bank, demonstrating its versatility.

7. MAINTENANCE

- Clean the device with a soft, dry cloth.

- Do not use abrasive cleaners or solvents.
- Store the device in a cool, dry place when not in use.

8. TROUBLESHOOTING

8.1 No Power

- Ensure the power switch is in the 'ON' position.
- Charge the device fully using the provided Type-C cable.

8.2 Cannot Connect via Bluetooth

- Make sure the device is in pairing mode (blinking blue light).
- Ensure your smartphone/tablet's Bluetooth is enabled and within range (up to 32.80ft).
- Forget 'Joymate L40' from your device's Bluetooth list and try pairing again.

8.3 Poor Sound Quality

- Ensure the device and your connected audio source are fully charged.
- Move the device closer to your audio source to improve Bluetooth signal.
- Adjust the volume on both the Joymate L40 and your audio source.


9. SPECIFICATIONS

Feature	Detail
Product Model	L40
Battery Capacity	5000mAh
Speaker Power	4Ω5W
Bluetooth Version	5.3
Bluetooth Range	Up to 32.80ft
Play Time	Up to 40 hours (at 50% volume)
Charging Time	3-4 hours
Voltage Input/Output	5V=2A
Product Dimensions	5.6 x 3.6 x 2.1 inches
Item Weight	13.1 ounces
Product Material	ABS+Silicone

Packing list



Product x1

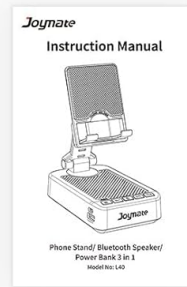

Instruction Manual x1



Type-c data cable
(Wall charger not included) x1



Packing Box x1

Image: The Joymate L40 device with its key dimensions (length, width, height) clearly labeled.

10. WARRANTY AND SUPPORT

10.1 Return Policy

This product is subject to a 30-day return/replacement policy. Please refer to your purchase platform for detailed return instructions.

10.2 Customer Support

For any questions, concerns, or technical assistance, please contact Joymate customer service. We are committed to providing hassle-free, quick response, and 24-hour online service to ensure 100% satisfaction.