

[Manuals.plus](#) /

› [Furmax](#) /

› Furmax Ergonomic Office Chair with Footrest (Model MY0240486001B) - Instruction Manual

Furmax MY0240486001B

Furmax Ergonomic Office Chair with Footrest

Model: MY0240486001B - Instruction Manual

1. INTRODUCTION

Thank you for choosing the Furmax Ergonomic Office Chair with Footrest. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new office chair. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: The Furmax Ergonomic Office Chair with Footrest in beige.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- Always assemble the chair according to the instructions provided.
- Do not stand on the chair or use it as a step stool.
- Do not use the chair if any parts are missing, damaged, or worn. Contact customer support for replacement parts.
- Ensure all bolts and screws are securely tightened before use. Re-tighten periodically.
- Do not exceed the maximum weight capacity of 400 pounds.
- Keep children away from the assembly area. Small parts may be a choking hazard.
- Use the chair on a level surface to prevent tipping.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Refer to the assembly diagram for identification of parts.

Ergonomic Fits Your Curve



Image 3.1: Illustration of chair components and hardware included in the package.

4. SETUP AND ASSEMBLY

Assembly typically takes 20-25 minutes. Follow the steps carefully. It is recommended to assemble the chair on a soft, clean surface to prevent damage.

Assembly Video Guide



Video 4.1: Official Furmax assembly guide and feature overview. This video demonstrates key assembly steps and chair adjustments.

For detailed step-by-step instructions, refer to the printed manual included with your product. Ensure all screws are tightened firmly but do not overtighten.

5. OPERATING INSTRUCTIONS

Your Furmax office chair offers several adjustable features for personalized comfort.

5.1. Seat Height Adjustment

To adjust the seat height, pull the lever located under the right side of the seat upwards. While holding the lever, stand up to raise the seat or remain seated to lower it. Release the lever to lock the height in place.

5.2. Backrest Recline (90°-135°)

The backrest can be reclined between 90 and 135 degrees. Pull the lever located under the left side of the seat upwards to unlock the recline mechanism. Lean back to your desired angle and release the lever to lock the backrest position. To return to an upright position, pull the lever again and lean forward slightly.



Image 5.1: The chair shown in a reclined position with the footrest extended for relaxation.

5.3. Retractable Footrest

To deploy the footrest, pull it out from underneath the seat. Extend it fully and adjust its position for comfort. To retract,

push it back under the seat until it is fully stored.

5.4. 360° Swivel Function

The chair features a 360-degree swivel base, allowing for easy rotation without moving the entire chair.

Operating Features Video Guide

Video 5.2: Official Furmax video demonstrating the reclining and footrest features of the office chair.

5.5. Ergonomic Design Features

The chair is designed with ergonomic support for your body, including a soft headrest, lumbar support, and thick cushioning to promote healthy posture and reduce discomfort during long periods of sitting.



Image 5.2: Visual representation of the chair's ergonomic design, highlighting key support areas.

6. MAINTENANCE

Regular maintenance helps prolong the life and appearance of your chair.

- **Cleaning:** Wipe the faux leather surfaces with a soft, damp cloth. For stubborn stains, use a mild soap solution and dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically check all bolts and screws to ensure they are tight. Re-tighten as necessary to maintain stability.
- **Caster Care:** Keep the casters clean from hair and debris to ensure smooth movement.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the faux leather to fade or crack.

7. TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Chair wobbles or is unstable	Loose screws or uneven assembly.	Check and tighten all assembly screws. Ensure the chair is on a level surface.
Seat height adjustment not working	Gas lift mechanism issue or lever malfunction.	Ensure the lever is fully engaged. If the issue persists, the gas lift may need replacement. Contact support.
Backrest does not recline or lock	Recline mechanism jammed or lever issue.	Check for obstructions. Ensure the recline lever is functioning correctly.
Squeaking noises	Loose connections or friction between parts.	Tighten all screws. Apply a small amount of silicone lubricant to moving parts if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	Furmax
Model Name	Furmax Office Chair with Footrest
Model Number	MY0240486001B
Color	Beige
Material	Faux Leather, Metal Frame, Foam Cushion
Product Dimensions (D x W x H)	18.9"D x 21.26"W x 48"H
Item Weight	40.1 pounds
Maximum Weight Recommendation	400 pounds
Reclining Position Count	Adjustable from 90° to 135°
Additional Features	Adjustable Backrest, Adjustable Height, Retractable Foot Rest, 360° Swivel



Image 8.1: Detailed product dimensions, including height, width, and depth measurements.

9. WARRANTY INFORMATION

Furmax provides a limited warranty for this product against defects in material and workmanship. The warranty period and terms may vary. Please refer to the warranty card included with your purchase or visit the official Furmax website for detailed information regarding warranty coverage and claims.

10. SUPPORT

For any questions, assistance with assembly, troubleshooting, or to order replacement parts, please contact Furmax customer support. Contact information can typically be found on the product packaging, the official Furmax website, or through your retailer.

Please have your model number (MY0240486001B) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question