

XP-PEN Artist Pro 14 Gen2

XP-PEN Artist Pro 14 Gen2 Drawing Tablet User Manual

Model: Artist Pro 14 Gen2

[Introduction](#) [Package Contents](#) [Setup](#) [Operating the](#)
[Device](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your XP-PEN Artist Pro 14 Gen2 Drawing Tablet. Please read these instructions carefully to ensure optimal performance and longevity of your device. The Artist Pro 14 Gen2 is a professional drawing display designed for digital artists, featuring advanced pressure sensitivity, a vibrant display, and versatile connectivity.

2. PACKAGE CONTENTS

Upon unboxing, please verify that all the following items are included in your package:

- Drawing display
- X3 Pro Stylus
- Replace Pen Nibs
- USB-C to USB-C Cable
- USB-A to USB-C Cable
- USB Extension Cable
- Wireless Shortcut Remote (Mini Keydial)
- Drawing Gloves
- Cleaning Cloth
- Quick Guide
- Power Adapter (with various international plugs)

Your browser does not support the video tag.

Video: Open Box Video for XP-Pen Artist Pro 14 Gen2. This video demonstrates the unboxing process and showcases all included components of the drawing tablet package.

3. SETUP

3.1 Connecting the Drawing Tablet

The XP-PEN Artist Pro 14 Gen2 drawing tablet requires connection to a computer or compatible device to function. There are two primary connection methods:

1. **USB-C to USB-C Connection:** If your computer has a full-featured USB-C port (which supports DisplayPort Alternate Mode), you can connect the drawing display directly using the provided USB-C to USB-C cable. This single cable handles both video and power.
2. **USB-A to USB-C with Power Adapter:** If your computer does not have a full-featured USB-C port, use the provided USB-A to USB-C cable for data and video, and connect the drawing display to the power adapter via the USB-A to USB-C cable for power supply.



Image: Connection options for the Artist Pro 14 Gen2. This diagram illustrates how to connect the tablet using either a single USB-C cable or a USB-A cable with a power adapter.

Video: How to connect cables for the XP-Pen Artist Pro 14 Gen2. This video provides a visual guide on connecting your drawing tablet to your computer using the appropriate cables.

3.2 Driver Installation

After connecting the tablet, you must install the latest drivers from the official XP-PEN website. Visit www.xp-pen.com/download/, select your product model, and download the appropriate driver for your operating system. Follow the on-screen instructions to complete the installation. Restart your computer after installation for the changes to take effect.

4. OPERATING THE DEVICE

4.1 X3 Pro Battery-Free Stylus

The X3 Pro stylus offers an industry-leading 16K pressure levels, providing exceptional precision and responsiveness for your digital artwork. It is battery-free, eliminating the need for charging. The stylus also supports tilt functionality, allowing for natural shading and varied brush strokes.

16K Pressure Levels Game-changer in Details

Accuracy: $\pm 0.4\text{mm}$ (center), $\pm 0.8\text{mm}$ (corner)



3Grams IAF



Retraction distance
 $\pm 0.6\text{mm}$



16384 pen
pressure levels



Image: X3 Pro Stylus features, highlighting 16K pressure levels and accuracy specifications.

4.2 Display Features

The Artist Pro 14 Gen2 features a 14-inch display with a 1920 x 1200 resolution. It boasts 99% sRGB color gamut coverage and 123% sRGB color gamut area ratio, ensuring accurate and vibrant color reproduction. The screen is fully laminated and includes an anti-glare finish to reduce reflections and enhance visibility, providing a natural drawing experience.

Incredible Brilliant Screen

- 123% sRGB**
Color gamut area ratio
- 99% sRGB**
Color gamut coverage ratio
- 16:10**
Aspect Ratio
- 1920*1200**
FHD Resolution
- AE<2.2**

Image: Display specifications, including color gamut, aspect ratio, and resolution.

Full Lamination & Anti-glare Screen



Image: Comparison of screen lamination types, highlighting the benefits of the fully laminated anti-glare screen.

4.3 Mini Keydial

The included Wireless Shortcut Remote (Mini Keydial) provides customizable shortcut keys to streamline your workflow. It can be positioned conveniently for quick access to frequently used functions in your creative software.

Boost Productivity with a Mini Keydial

127.55x 70.49x 10mm



Wired
Bluetooth dongle
Connect Bluetooth 5.0



Image: The Mini Keydial remote, designed to boost productivity with customizable shortcuts.

4.4 Ergonomics and Stand

The tablet features a foldable stand for adjustable viewing and drawing angles, an X-Edge wrist rest design for comfort, and an anti-slip design to keep the device stable during use.



Foldable Stand



X-Edge Wrist Rest Design



Anti-slip Design

Image: Ergonomic features including the foldable stand, wrist rest, and anti-slip design.

4.5 Compatibility

The Artist Pro 14 Gen2 is compatible with a wide range of operating systems and digital art software. Supported operating systems include Windows 7 (or later), macOS 10.10 (or later), Android (USB3.1 DP1.2), Chrome OS 88 (or later), and Linux. It supports popular software such as Adobe Photoshop, Illustrator, SAI, CDR, GIMP, Krita, MediBang, FireAlpaca, Toonboom, Maya, and Blender3D.



Image: Operating system and software compatibility for the Artist Pro 14 Gen2.

5. MAINTENANCE

5.1 Cleaning the Display

To clean the display, gently wipe it with the provided cleaning cloth. For stubborn smudges, lightly dampen the cloth with water or a screen-safe cleaning solution. Avoid using harsh chemicals, abrasive materials, or excessive moisture, as these can damage the screen surface.

5.2 Stylus Care

Store the X3 Pro stylus in its pen case when not in use to protect it from damage. Replace pen nibs as needed using the included nib remover tool. Avoid dropping the stylus or exposing it to extreme temperatures.

6. TROUBLESHOOTING

6.1 No Display/Power

- Ensure all cables are securely connected to both the tablet and your computer.
- If using the USB-A to USB-C connection, confirm the power adapter is plugged into a working outlet.
- Verify your computer's USB-C port supports DisplayPort Alternate Mode if using a single USB-C cable.
- Try connecting to a different USB port on your computer.

6.2 Stylus Not Responding

- Check if the stylus nib is properly inserted.
- Ensure the latest drivers are installed and functioning correctly. Reinstall drivers if necessary.
- Test the stylus on a different application or computer to isolate the issue.

6.3 Driver Issues

- Uninstall any previous tablet drivers before installing new ones.
- Disable any antivirus software temporarily during driver installation.
- Ensure your operating system is up to date.

7. SPECIFICATIONS

Feature	Detail
Brand	XP-PEN
Model Name	Artist Pro 14 Gen2
Connectivity Technology	HDMI, USB-C
Pressure Sensitivity	16384 Levels (X3 Pro Stylus)
Operating System Compatibility	Windows 7 (or later), macOS 10.10 (or later), Android (USB3.1 DP1.2), Chrome OS 88 (or later), Linux
Special Feature	60° Tilt Function
Display Type	LCD, Full Laminated Anti-Glare
Native Resolution	1920 x 1200
Screen Size	14 Inches
Color Gamut	99% sRGB, 123% sRGB color gamut area ratio
Item Weight	3.24 Kilograms
Active Surface Area	11 x 6 inches

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The XP-PEN Artist Pro 14 Gen2 Drawing Tablet comes with a **1-year warranty**. Please refer to the included Warranty Policy document for detailed terms and conditions regarding coverage and claims.

8.2 Customer Support

For technical assistance, driver updates, or further inquiries, please visit the official XP-PEN website at www.xp-pen.com or contact their customer support directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question