

[Manuals.plus](#) /

> [PayLessHere](#) /

> PayLessHere Computer Desk Instruction Manual

PayLessHere 32/39/47 inch Computer Desk

PayLessHere Computer Desk Instruction Manual

MODEL: 32/39/47 INCH COMPUTER DESK

Brand: PayLessHere

PRODUCT OVERVIEW

The PayLessHere Computer Desk is designed to elevate your workspace with its sleek and contemporary style, blending seamlessly into any setting. Crafted with a robust metal frame, this desk offers a perfect balance of durability and modern aesthetics. It provides a compact solution that combines form and function, ideal for any home, office, study, or writing space.

Key Features:

- **Modern Simple Style:** Adds sophistication to any space.
- **Durable and Sturdy:** Robust metal frame ensures stability and longevity.
- **Premium & Sturdy Small Desk:** Ideal for small spaces with a secure platform.
- **Smooth Table Top:** Waterproof, smooth surface, and scratch-proof for easy maintenance.
- **Adjustable Screw Feet:** Anti-slip and noise reduction, ensuring stability on uneven floors.
- **Triangular Connection Design:** Metal frame and corner reinforcement provide reliable support.
- **Fast Installation:** Easy-to-follow instructions for quick assembly.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and accounted for. Refer to the diagram below for identification.

Part	Description	Quantity
A	Desktop	1 PC
B	Side Frame (with holes for H bolts)	2 PCS
C	Side Frame (with holes for G bolts)	2 PCS
D	Crossbar	2 PCS
E	Hex Key	1 PC
F	Adjustable Feet	4 PCS
G	M6*12mm Bolt	8 PCS
H	M6*30mm Bolt	14 PCS

Note: Some small plastic corner protectors and broken wire ties may be included in the packaging. These are for shipping protection and are not part of the assembly.



Image: Product dimensions of the PayLessHere Computer Desk.

ASSEMBLY INSTRUCTIONS

Please ensure you have adequate space and all components before starting. It is recommended to have two people for assembly. Wear appropriate safety equipment, such as safety glasses, during assembly.

Step 1: Assemble the Side Frames

Connect the side frame parts (B and C) using the provided bolts. Ensure the correct sides are facing the correct way as shown in the diagram. Do not fully tighten the screws at this stage (tighten to approximately 50%).



Image: Close-up of the triangular connection design on the desk frame.

Step 2: Attach Bolts to Side Frames

Insert Bolt G (M6*12mm) through Part C into Part B from one side. Insert Bolt H (M6*30mm) through Part B into Part C from the other side. Do not fully tighten these bolts yet (tighten to approximately 50%).

Step 3: Attach Crossbars

Attach the crossbars (Part D) to the top of the assembled side frames. Secure them with the appropriate bolts (H bolts). Again, do not fully tighten the screws at this stage (tighten to approximately 50%).

Step 4: Attach Adjustable Feet

Screw the adjustable feet (Part F) into the bottom of each leg of the desk frame. These feet help stabilize the desk on uneven surfaces.



Image: Adjustable screw feet for the PayLessHere Computer Desk.

Step 5: Attach Desktop to Frame

Carefully place the assembled metal frame onto the underside of the desktop (Part A), aligning the pre-drilled holes. Ensure the desktop surface is protected from scratches by placing it on a soft surface like the foam board from the packaging.

Step 6: Final Tightening

Once all components are in place and loosely assembled, go back and fully tighten all bolts (from 50% to 100%) to secure the desk. This ensures maximum stability and durability.



Image: The PayLessHere Computer Desk fully assembled.

OPERATING INSTRUCTIONS

Adjusting for Stability

The desk is equipped with adjustable screw feet. To stabilize the desk on uneven floors, gently lift one corner of the desk and rotate the corresponding adjustable foot clockwise or counter-clockwise until the desk is level and stable. Repeat for other feet as necessary.

MAINTENANCE

Cleaning and Care

The desk features a smooth, waterproof, and scratch-proof tabletop for easy cleaning. Wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the

finish. Regularly check and tighten all bolts to ensure the desk remains sturdy and safe for long-term use.

TROUBLESHOOTING

- **Wobbling Desk:** Ensure all adjustable feet are properly leveled. Re-tighten all assembly bolts if wobbling persists.
- **Missing Parts:** Double-check the package contents against the provided list. If parts are genuinely missing, contact PayLessHere customer support.
- **Surface Scratches:** While the surface is scratch-proof, extreme force or sharp objects can still cause damage. Use a desk mat for added protection if needed.
- **Difficulty Assembling:** Review the assembly instructions carefully. Ensure all parts are oriented correctly before tightening bolts. Do not fully tighten bolts until all components are in place.

SPECIFICATIONS

Attribute	Detail
Brand	PayLessHere
Product Dimensions	19"D x 47"W x 29"H
Color	White Gold
Style	Modern
Base Material	Metal
Top Material Type	Wood
Finish Type	Powder Coated
Special Feature	Adjustable Height
Room Type	Office, Study Room
Recommended Uses For Product	Office, Working, Writing
Model Number	32/39/47 inch Computer Desk
Item Weight	20 Pounds
Required Assembly	Yes
Recommended Number of People for Assembly	2
Includes All Assembly Tools	Yes

