

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Trucozie](#) /

> [Trucozie T350 Cordless Vacuum Cleaner User Manual](#)

Trucozie T350

Trucozie T350 Cordless Vacuum Cleaner User Manual

Model: T350 | Brand: Trucozie

1. INTRODUCTION

Thank you for choosing the Trucozie T350 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

Key Features:

- **LED Display & De-Tangle Design:** Easy-to-read LED screen for status monitoring and a V-shape de-tangle floor brush to lift hair and dirt.
- **8-in-1 Multifunctional Vacuum:** Lightweight (less than 3.3 lbs) and versatile, transforming into a handheld vacuum for various cleaning scenarios.
- **Up to 45 Mins Runtime Battery:** Equipped with a rechargeable 7x2200mAh battery pack for extensive cleaning on a single charge.
- **5 Stages Filtration:** Advanced filter system captures 99.99% of dust particles as small as 0.1um, preventing secondary pollution.
- **LED Detects Invisible Dust:** Floor brush with 6 LED lights illuminates under furniture, ensuring thorough cleaning.

2. INCLUDED COMPONENTS

Your Trucozie T350 Cordless Vacuum Cleaner package includes the following items:



Cordless Vacuum Cleaner (Main Unit)

The primary body of the vacuum, housing the motor, dust cup, and controls.



Adjustable Extension Tube

Extends the reach of the vacuum for floor cleaning and high-area access. Adjustable from 15 to 45 inches.



Motorized Floor Brush

Features a V-shape de-tangle design and 6 LED headlights for effective cleaning on various floor types.



7x2200mAh Battery Pack

Rechargeable lithium-ion battery providing up to 45 minutes of runtime.



2-in-1 Crevice Tool

Ideal for cleaning tight spaces, corners, and car interiors.



Sofa Brush

Designed for cleaning upholstery, pet beds, and other fabric surfaces.



HEPA Filters (x2) & Metal Filter (x1)

Part of the 5-stage filtration system to capture fine dust and allergens.



Charger

Power adapter for recharging the battery pack.



Wall Hanger

For convenient storage and charging of the vacuum.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Trucozie T350 Cordless Vacuum Cleaner:

1. **Attach the Extension Tube:** Align the end of the adjustable extension tube with the main body's suction inlet. Push firmly until it clicks into place.



Video: Demonstrates connecting the extension tube to the main unit.

2. **Connect the Motorized Floor Brush:** Attach the motorized floor brush to the other end of the extension tube. Ensure it clicks securely.

Video: Demonstrates connecting the motorized floor brush to the extension tube.

3. **Install the Battery Pack:** Slide the battery pack into the designated slot on the main body until it locks. Ensure it is fully seated.

Video: Demonstrates installing the battery pack into the main unit.

4. **Charge the Battery:** Before first use, fully charge the battery pack using the provided charger. The LED display will indicate charging status.

Charging Time: Approximately 5 hours for a full charge.

4. OPERATING INSTRUCTIONS

Power On/Off and Speed Adjustment:

1. **Power On:** Press the power button on the main unit's handle to turn on the vacuum. The LED display will light up.

Video: Demonstrates turning on the vacuum and showing the LED display.

2. **Adjust Speed:** Press the speed adjustment button to cycle through the three available suction modes: Energy-saving (45 mins), Mid (25 mins), and Max (20 mins).

The LED display will show the current speed setting and battery level.

3. **Power Off:** Press the power button again to turn off the vacuum.

Versatile Cleaning Modes:

- **Stick Vacuum Mode:** Use with the extension tube and motorized floor brush for general floor cleaning on hardwood, tile, and low-pile carpets.

Powerful Cyclonic Suction

Engineered for Quicker Cleaning



Image: Vacuum in stick mode, ideal for floors and carpets.

- **Handheld Vacuum Mode:** Detach the extension tube and motorized floor brush to use the main unit with attachments for handheld cleaning.

Switch to Handheld

Suitable for Multiple Scenarios



Image: Demonstrates the vacuum's versatility as a handheld unit.

- Use the **2-in-1 Crevice Tool** for tight spaces, corners, and car seats.
- Use the **Sofa Brush** for upholstery, curtains, and pet hair on furniture.
- **LED Headlights:** The motorized floor brush features LED lights that automatically illuminate the cleaning path, making invisible dust visible, especially in dimly lit areas.

Video: Shows the LED headlights illuminating dust under furniture.

5. MAINTENANCE

Emptying the Dust Cup:

1. When the dust cup reaches the 'MAX' line, it's time to empty it. Ensure the vacuum is turned off.
2. Press the dust cup release button (usually located near the bottom of the main unit) to open the dust cup flap and empty contents into a trash bin.



Image: Illustration of emptying the dust cup.

Cleaning the Filters:

It is recommended to clean the HEPA filter every 2-3 weeks and replace them every 3 months for optimal performance.

1. Remove the dust cup from the main unit. Twist the filter assembly counter-clockwise to remove it.

Video: Demonstrates removing the filter assembly from the dust cup.

2. Separate the HEPA filter from the metal filter. Tap off any loose dust.
3. Rinse the HEPA filter and metal filter under running water. Ensure they are completely dry before reassembling and placing back into the vacuum. Do not use the vacuum with wet filters.

Video: Demonstrates cleaning the filters and reassembling.

Cleaning the Brush Roll:

Regularly check the V-shape de-tangle brush roll for tangled hair or debris.

1. Turn off the vacuum and detach the motorized floor brush.
2. Use the provided cleaning brush or scissors to carefully remove any tangled hair or fibers from the brush roll.

Video: Demonstrates cleaning the brush roll.

3. Ensure the brush roll spins freely before reattaching the floor brush.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted.
Reduced suction power.	Dust cup is full, filters are clogged, or brush roll is tangled.	Empty dust cup. Clean or replace filters. Clear any tangles from the brush roll.
Motorized brush stops spinning.	Brush roll is tangled or obstructed.	Turn off vacuum and clear any obstructions from the brush roll. Check the LED display for a "ROLLER TANGLED" indicator.
Short runtime.	Battery not fully charged or operating in Max mode constantly.	Fully charge the battery. Use lower suction modes for longer runtime.

7. SPECIFICATIONS

Feature	Detail
Brand	Trucozie
Model Name	T350
Special Feature	20-45 mins Runtime, 8-in-1 Lightweight, High-efficiency Filtration, Tangle Resistant
Filter Type	HEPA Filter, Metal Filter
Is Cordless?	Yes
Capacity	0.6 Liters
Runtime	45 minutes (Energy-saving Mode)
Charging Time	5 Hours
Recommended Uses	Cars Cleaning, Corner Cleaning, Furnitures Cleaning, Hard Floors Cleaning, Low Pile Carpet Cleaning, Tile Cleaning
Form Factor	Stick
Color	Blue

Feature	Detail
Product Dimensions	16.9"L x 11.2"W x 7.2"H
Battery Description	Rechargeable 7x2200mAh Battery Pack
Noise Level	75 dB
Item Weight	6 pounds
Number of Speeds	3

8. WARRANTY AND SUPPORT

Each Trucozie T350 Cordless Vacuum Cleaner comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product functions as intended under normal use.

Trucozie is committed to providing excellent customer service. If you encounter any problems or have questions regarding your vacuum cleaner, please do not hesitate to contact our support team:

Customer Service: 7 days a week, 24 hours a day (7*24hrs)

Technical Support: Life-time technical support

Contact Method: Via message or email (refer to product packaging or purchase platform for specific contact details).

Please retain your proof of purchase for warranty claims.