

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION SD36 Digital Sewing Machine User Manual

MEDION SD36

MEDION SD36 Digital Sewing Machine User Manual

Model: SD36 (MD11881)

1. INTRODUCTION

Thank you for choosing the MEDION SD36 Digital Sewing Machine. This manual provides essential information for the safe and efficient operation, setup, and maintenance of your new sewing machine. Please read these instructions carefully before use and keep them for future reference.

2. SAFETY INSTRUCTIONS

- Always unplug the machine from the electrical outlet when removing covers, lubricating, or when making any other user servicing adjustments mentioned in the instruction manual.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Use the correct needle plate. The wrong plate can cause the needle to break.
- Do not use bent needles.
- Do not pull or push fabric while stitching. This may deflect the needle, causing it to break.
- Wear safety glasses.
- Never operate the machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot controller free from the accumulation of lint, dust, and loose cloth.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT OVERVIEW

The MEDION SD36 is a versatile digital sewing machine designed for various sewing projects. It features a clear LCD display, a wide range of stitch patterns, and user-friendly controls.



Figure 3.1: Front view of the MEDION SD36 digital sewing machine, showing the needle area, control panel with LCD display, stitch pattern chart, and thread spool pin.

Key Features:

- **Adjustable Stitch Length and Width:** Customize stitch settings up to 4.5 mm for various fabric types and projects.
- **270 Stitch Patterns:** A wide selection of utility, decorative, and alphanumeric stitches.
- **LED Sewing Light:** Illuminates the sewing area for improved visibility.
- **Automatic Needle Threader:** Simplifies the threading process.
- **Reverse Stitch Button:** For reinforcing seams.
- **Integrated Accessory Compartment:** Convenient storage for sewing tools.
- **Thread Cutter:** Built-in for quick thread trimming.
- **Free Arm Sewing:** Ideal for sewing cylindrical items like sleeves and pant legs.



**12 verschiedene
Stichmuster**



Präzies Drehrad



Snap-on Nähfuß



Freiarm Nähen



Fadenschneider



Figure 3.2: Overview of key features including 12 different stitch patterns, snap-on presser foot, precise rotary wheel, free arm sewing, and thread cutter.

4. SETUP

4.1 Unpacking and Placement

1. Carefully remove the machine from its packaging.
2. Place the machine on a stable, flat surface.
3. Ensure there is adequate space around the machine for comfortable operation.

4.2 Power Connection

- Connect the foot pedal cable to the designated port on the machine.
- Plug the power cord into the machine and then into a suitable electrical outlet.

4.3 Accessory Compartment

The MEDION SD36 features an integrated accessory compartment to keep your sewing essentials organized and within reach.



Figure 4.1: Close-up view of the integrated accessory compartment on the MEDION SD36 sewing machine, showing various sewing tools and bobbins stored neatly.

4.4 Included Accessories

The machine comes with a comprehensive set of accessories to get you started immediately.

Vielfalt entdecken

Verschiedene Modelle in
verschiedenen Farben verfügbar



Figure 4.2: An array of accessories included with the MEDION SD36 sewing machine, including the foot pedal, various presser feet, needles, bobbins, and cleaning tools.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Locate the power switch on the side of the machine. Flip it to the 'ON' position to power on the machine. Flip it to 'OFF' when not in use.

5.2 Stitch Selection and Adjustment

The MEDION SD36 offers 270 different stitch patterns. Use the control panel and LCD display to select and adjust your desired stitch.

Perfekte Saumkanten und professionelle Nähte

mit unserer digitalen Nähmaschine!



Figure 5.1: Detailed view of the MEDION SD36 sewing machine's control panel, featuring an LCD display showing stitch settings, control buttons, and a comprehensive chart of 270 stitch patterns.

- **Selecting a Stitch:** Use the arrow buttons on the control panel to navigate through the stitch patterns displayed on the LCD.
- **Adjusting Stitch Length and Width:** The digital display allows precise adjustment of stitch length and width up to 4.5 mm. Use the '+' and '-' buttons to modify these settings according to your fabric and project requirements.

5.3 Threading the Machine

Follow the numbered threading path indicated on the machine. The automatic needle threader simplifies the final step of threading the needle.

5.4 Bobbin Winding

Refer to the diagrams on the machine for instructions on how to properly wind the bobbin. Ensure the thread is evenly wound for consistent stitching.

5.5 LED Sewing Light

The integrated LED light illuminates your sewing area, providing clear visibility for intricate work.



Freiarmnähen

Rundgeschlossene Kleidungsstücke
mithilfe des Freiarms nähen

Figure 5.2: Close-up of the needle area of the MEDION SD36 sewing machine, highlighting the bright LED sewing light illuminating the workspace.

5.6 Reverse Stitch Function

Press the reverse stitch button to sew backwards, which is useful for securing the beginning and end of seams.

5.7 Free Arm Sewing

To use the free arm, slide off the accessory compartment. This exposes the narrow free arm, perfect for sewing cuffs, sleeves, and other small, cylindrical items.

Entdecke die Vielfalt

270 verschiedene Sticharten



Figure 5.3: The MEDION SD36 sewing machine with its free arm extended, demonstrating its use for sewing cylindrical items like sleeves or pant legs.

5.8 Thread Cutter

A convenient thread cutter is integrated into the machine for quickly trimming threads after sewing.

6. MAINTENANCE

6.1 Cleaning

- Regularly clean the lint and dust from the bobbin case area and feed dogs using the provided lint brush.
- Wipe the exterior of the machine with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

6.2 Needle Replacement

Replace the needle regularly, especially when it becomes dull, bent, or if you notice skipped stitches. Always use the correct type and size of needle for your fabric.

6.3 Storage

When not in use, cover the machine to protect it from dust. Store it in a dry, safe place.

7. TROUBLESHOOTING

This section addresses common issues you might encounter. For more complex problems, please contact customer support.

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading, wrong needle size for fabric.	Replace needle with a new, correct type. Re-thread the machine. Ensure proper needle insertion.
Thread Breakage	Improper threading, incorrect tension, poor quality thread, bent needle, burr on needle plate.	Re-thread the machine. Adjust tension. Use good quality thread. Replace needle. Check for burrs.
Uneven Stitches	Incorrect tension, improper bobbin winding, inconsistent fabric feeding.	Adjust tension. Re-wind bobbin. Guide fabric gently without pulling or pushing.
Machine Not Starting	Power cord not plugged in, foot pedal not connected, power switch off.	Check all power connections. Ensure power switch is ON.

8. SPECIFICATIONS

Feature	Specification
Brand	MEDION
Model Number	SD36
Power	60 W (Motor power 36 W)
Dimensions (L x W x H)	41 x 17.5 x 30.5 cm
Weight	5 Kilograms
Material	Plastic
Stitch Patterns	270
Max. Stitch Length	4.5 mm



Figure 8.1: Dimensions of the MEDION SD36 Digital Sewing Machine: 41 cm (width), 30.5 cm (height), 17.5 cm (depth).

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official MEDION website. If you require technical assistance or have questions not covered in this manual, please contact MEDION customer support.

MEDION Customer Service: Please refer to your regional MEDION website or purchase documentation for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9QPC8HV>

More documents and user manuals: **<https://manuals.plus/>**