

[Manuals.plus](#) /

> [MEDION](#) /

> MEDION MD15000 Retro Microwave Oven User Manual

MEDION MD15000

MEDION MD15000 Retro Microwave Oven User Manual

Model: MD15000

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your MEDION MD15000 Retro Microwave Oven. Please read this manual thoroughly before using the appliance and retain it for future reference.

The MEDION MD15000 is a 20-liter capacity microwave oven with 800 watts of power, featuring 5 microwave power levels, 8 automatic cooking programs, a digital display, and a defrost function, all housed in a stylish retro design with a grey lacquered casing.



Image 1.1: Front view of the MEDION MD15000 Retro Microwave Oven in grey.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Regularly clean the oven and remove any food deposits.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

3. PRODUCT OVERVIEW

3.1 Components

- Microwave Oven Unit
- Glass Turntable
- Turntable Ring
- User Manual (Quick Start Guide)
- Warranty Card

3.2 Control Panel

Utilisation intuitive grâce au bouton rotatif

Réglage instantané de la durée et du poids



Image 3.1: Close-up of the control panel.

The control panel features a digital display, various function buttons for power levels, automatic programs, and defrost, along with a central rotary knob for setting time and selecting menu options.

4. SETUP

1. **Unpacking:** Carefully remove the microwave oven and all packing materials. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
2. **Placement:** Place the microwave oven on a stable, level surface that is strong enough to hold the oven and the food you will be placing in it. Ensure there is adequate ventilation space around the oven (at least 10 cm at the back, 15 cm at the top, and 5 cm on the sides). Do not block air vents.
3. **Turntable Assembly:** Place the turntable ring in the center of the oven cavity. Then, place the glass turntable securely on top of the turntable ring. Ensure it rotates freely.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your microwave oven (220 Volts).

5. OPERATING INSTRUCTIONS

5.1 Setting the Clock

Upon first plugging in the oven or after a power outage, the display will show '0:00'.

1. Press the 'Clock' button once.
2. Turn the rotary knob to set the hour. Press 'Clock' again to confirm.
3. Turn the rotary knob to set the minutes. Press 'Clock' again to confirm. The clock is now set.

5.2 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable. Close the oven door.
2. Turn the rotary knob to select the desired cooking time. The maximum cooking time is 60 minutes.
3. Press the 'Start' button to begin cooking. The oven will start immediately at full power (800W).

5.3 Power Levels

The MEDION MD15000 offers 5 power levels for various cooking needs:

- **P100 (100% Power / 800W):** For fast cooking or reheating.
- **P80 (80% Power / 640W):** For general cooking.
- **P50 (50% Power / 400W):** For medium cooking, such as simmering.
- **P30 (30% Power / 240W):** For gentle cooking or softening.
- **P10 (10% Power / 80W):** For keeping food warm or very gentle thawing.

To select a power level:

1. Press the 'Microwave' button repeatedly to cycle through the power levels (P100, P80, P50, P30, P10).
2. Turn the rotary knob to set the desired cooking time.
3. Press the 'Start' button to begin cooking.

5.4 Automatic Programs

The oven includes 8 pre-set automatic programs for common food items. These programs automatically set the cooking time and power level based on the food type and weight.

8 Programmes automatiques

Le programme adapté à chaque plat



Image 5.1: Examples of dishes suitable for automatic programs.

To use an automatic program:

1. Press the 'Menu' button (often the rotary knob itself or a dedicated button).
2. Turn the rotary knob to select the desired program (e.g., A-1 for popcorn, A-2 for potato, etc.). Refer to the full manual for a complete list of programs and their corresponding food types/weights.
3. Press the 'Start' button to confirm the program.
4. Turn the rotary knob to adjust the weight or quantity if applicable.
5. Press 'Start' again to begin cooking.

5.5 Defrost Function

The defrost function allows for gentle thawing of frozen food based on weight.

Rapidité et simplicité

Pour décongeler les aliments au micro-ondes



Image 5.2: Microwave in operation, suitable for defrosting.

To use the defrost function:

1. Press the 'Defrost' button.
2. Turn the rotary knob to select the weight of the food to be defrosted.
3. Press the 'Start' button to begin defrosting.

5.6 Using the Rotary Knob



Image 5.3: Demonstrating the use of the rotary knob.

The rotary knob is used for setting cooking times, adjusting weights for defrosting or automatic programs, and navigating menu options. Turn clockwise to increase values and counter-clockwise to decrease.

6. MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven ensures its longevity and hygienic operation. Always unplug the oven before cleaning.

- **Exterior:** Wipe the exterior surface, including the lacquered casing, with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Interior:** Clean the inside of the oven regularly. Wipe spills and food splatters immediately with a damp cloth. For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen the residue, then wipe clean. The interior coating is stainless steel.
- **Door Seals:** Keep the door seals and sealing surfaces clean. Use a mild detergent and a soft cloth.
- **Glass Turntable and Ring:** The glass turntable and turntable ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse or reset circuit breaker.
Food not heating	Door not closed properly; Incorrect cooking time or power level set; Food not suitable for microwave.	Close door securely; Adjust cooking time and power level; Ensure food is microwave-safe.
Turntable not rotating	Turntable not properly placed on ring; Obstruction under turntable.	Re-position turntable and ring; Remove any obstructions.

Problem	Possible Cause	Solution
Sparks or arcing inside oven	Metal objects in oven; Food residue on oven walls.	Remove all metal objects (foil, metal-trimmed dishes); Clean oven interior thoroughly.

Important Note: The manual supplied with the appliance is a quick start guide. For a comprehensive user guide, including detailed descriptions of all automatic programs and advanced features, please visit the official MEDION manufacturer's website.

8. SPECIFICATIONS

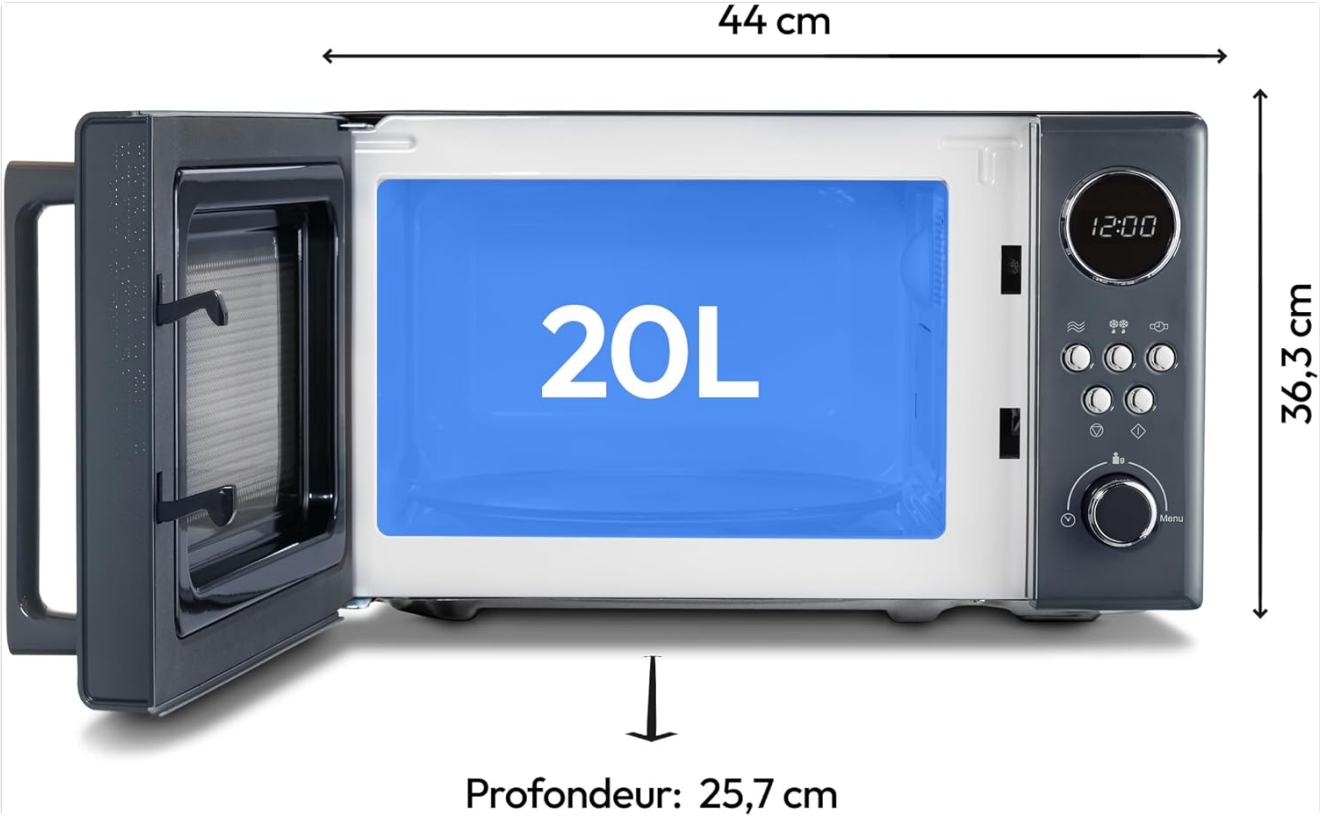


Image 8.1: Dimensions of the MEDION MD15000 Microwave Oven.

Feature	Specification
Brand	MEDION
Model Number	MD15000
Capacity	20 Liters
Microwave Power	800 Watts
Power Levels	5
Automatic Programs	8
Product Dimensions (L x W x H)	36 x 44 x 26 cm

Feature	Specification
Weight	10 Kilograms
Voltage	220 Volts
Installation Type	Countertop
Special Features	Defrost Function
Material	Alloy Steel
Interior Coating	Stainless Steel
Controller Type	Knob

9. WARRANTY AND SUPPORT

Your MEDION MD15000 Retro Microwave Oven comes with a warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details. For technical support, service, or to obtain a full version of the user manual, please visit the official MEDION website or contact MEDION customer service directly. Contact information can typically be found on the warranty card or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9QPJ4TT>

More documents and user manuals: <https://manuals.plus/>