

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nikon](#) /
- › [Nikon One Touch Zoom 90 AF 35mm Film Camera Instruction Manual](#)

## Nikon One Touch Zoom 90 AF

# Nikon One Touch Zoom 90 AF 35mm Film Camera Instruction Manual

Model: One Touch Zoom 90 AF

## INTRODUCTION

---

This manual provides detailed instructions for the proper use and care of your Nikon One Touch Zoom 90 AF 35mm Film Camera. Please read this manual thoroughly before operating the camera to ensure optimal performance and longevity.

## SETUP

---

### 1. Battery Installation

The Nikon One Touch Zoom 90 AF requires two AA batteries for operation. Ensure batteries are inserted with correct polarity.



*Image: Top view of the camera, showing the ON/OFF button and other control dials. The battery compartment is located on the bottom of the camera.*

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert two fresh AA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

## **2. Loading Film**

This camera uses standard 35mm film. Handle film in subdued light to prevent exposure.



*Image: Rear view of the camera with the film door open, showing the film chamber and take-up spool.*

1. Open the camera back by sliding the film door release latch (usually on the side).
2. Place the film cartridge into the film chamber on the left side.
3. Pull the film leader across to the film take-up spool on the right, ensuring it aligns with the red mark.
4. Close the camera back firmly until it latches. The camera will automatically advance the film to the first frame.

## **OPERATING THE CAMERA**

---

### **1. Power On/Off**

Press the **ON/OFF** button located on the top of the camera to power it on or off. The lens will extend when powered on.



*Image: Detailed view of the camera's top panel, showing the ON/OFF button and other control dials.*

## **2. Zooming**

Use the zoom buttons (W for wide, T for telephoto) to adjust the focal length of the 38-90mm macro lens. The zoom buttons are typically located near the shutter button.



*Image: Close-up of the camera's zoom lens, indicating its 38-90mm macro capabilities.*

### 3. Taking a Picture

1. Look through the viewfinder to compose your shot.
2. Press the shutter button halfway down to activate autofocus and exposure metering. A green light in the viewfinder indicates focus lock.
3. Press the shutter button fully to take the picture. The film will automatically advance to the next frame.

### 4. Flash Modes

The camera features a built-in flash. Use the flash mode button to cycle through available modes such as Auto Flash, Flash Off, Fill-Flash, and Red-Eye Reduction. Refer to the display for the current flash setting.

## MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Avoid touching the lens surface with your fingers.
- **Cleaning the Camera Body:** Wipe the camera body with a dry, soft cloth. Do not use solvents or abrasive cleaners.

- **Battery Care:** Remove batteries if the camera will not be used for an extended period to prevent leakage.
- **Film Storage:** Store film in a cool, dry place away from direct sunlight and high temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Replace batteries or re-insert them with correct polarity.
Film does not advance.	Film not loaded correctly or end of roll.	Re-load film, ensuring leader is properly engaged. If at end of roll, rewind and replace.
Flash does not fire.	Flash is set to "Flash Off" mode or insufficient battery power.	Change flash mode. Check and replace batteries if needed.
Pictures are blurry.	Camera shake, subject too close/far, or autofocus issue.	Hold camera steady. Ensure subject is within focus range. Allow camera to focus before fully pressing shutter.

## SPECIFICATIONS

- **Model:** Nikon One Touch Zoom 90 AF
- **Film Format:** 35mm
- **Lens:** Nikon Zoom Lens 38-90mm Macro
- **Autofocus:** Yes
- **Flash:** Built-in, multiple modes
- **Power Source:** 2 x AA Batteries
- **Dimensions:** Approximately 9.3 x 5 x 4.3 inches
- **Weight:** Approximately 1.1 pounds (without batteries)
- **Special Feature:** Built-in Flash

## WARRANTY AND SUPPORT

This product is sold as a renewed item. Please refer to the specific warranty terms provided by the seller at the time of purchase. For technical support or service inquiries, please contact the seller or Nikon customer service directly. Keep your purchase receipt as proof of purchase.

For general information about Nikon products, visit the official [Nikon website](#).

