

## **Glocusent A16A30**

# **Glocusent 81 LED Music Stand Light User Manual**

Model: A16A30

## **INTRODUCTION**

The Glocusent 81 LED Music Stand Light is designed to provide super bright and eye-caring illumination for musicians and performers. Featuring 3 color modes and 5 brightness levels, this piano lamp is rechargeable and offers long-lasting performance, making it ideal for various musical settings.



Figure 1: Glocusent 81 LED Music Stand Light in use, providing illumination for sheet music.

## WHAT'S IN THE BOX

Upon unboxing your Glocusent Music Stand Light, please ensure all components are present:

- 1 x Glocusent Music Stand Light
- 1 x USB Type-C Cable (24 inches)
- 1 x User Manual

**Note: A power adapter is not included.**

## SETUP AND INITIAL USE

1. **Charging the Device:** Before first use, fully charge the music stand light using the provided USB Type-C cable. Connect the cable to the light's USB-C port and a compatible USB power source (not included). The battery

indicator lights will show charging progress.

2. **Attaching to a Stand:** The light features a sturdy clamp that opens up to 1.6 inches. Securely clip the light onto your music stand or piano panel. The clamp includes anti-slip soft pads to prevent scratches and ensure stability.
3. **Adjusting the Gooseneck:** The flexible gooseneck allows for precise positioning of the light bar. Adjust it to direct illumination exactly where needed on your sheet music or piano keys.

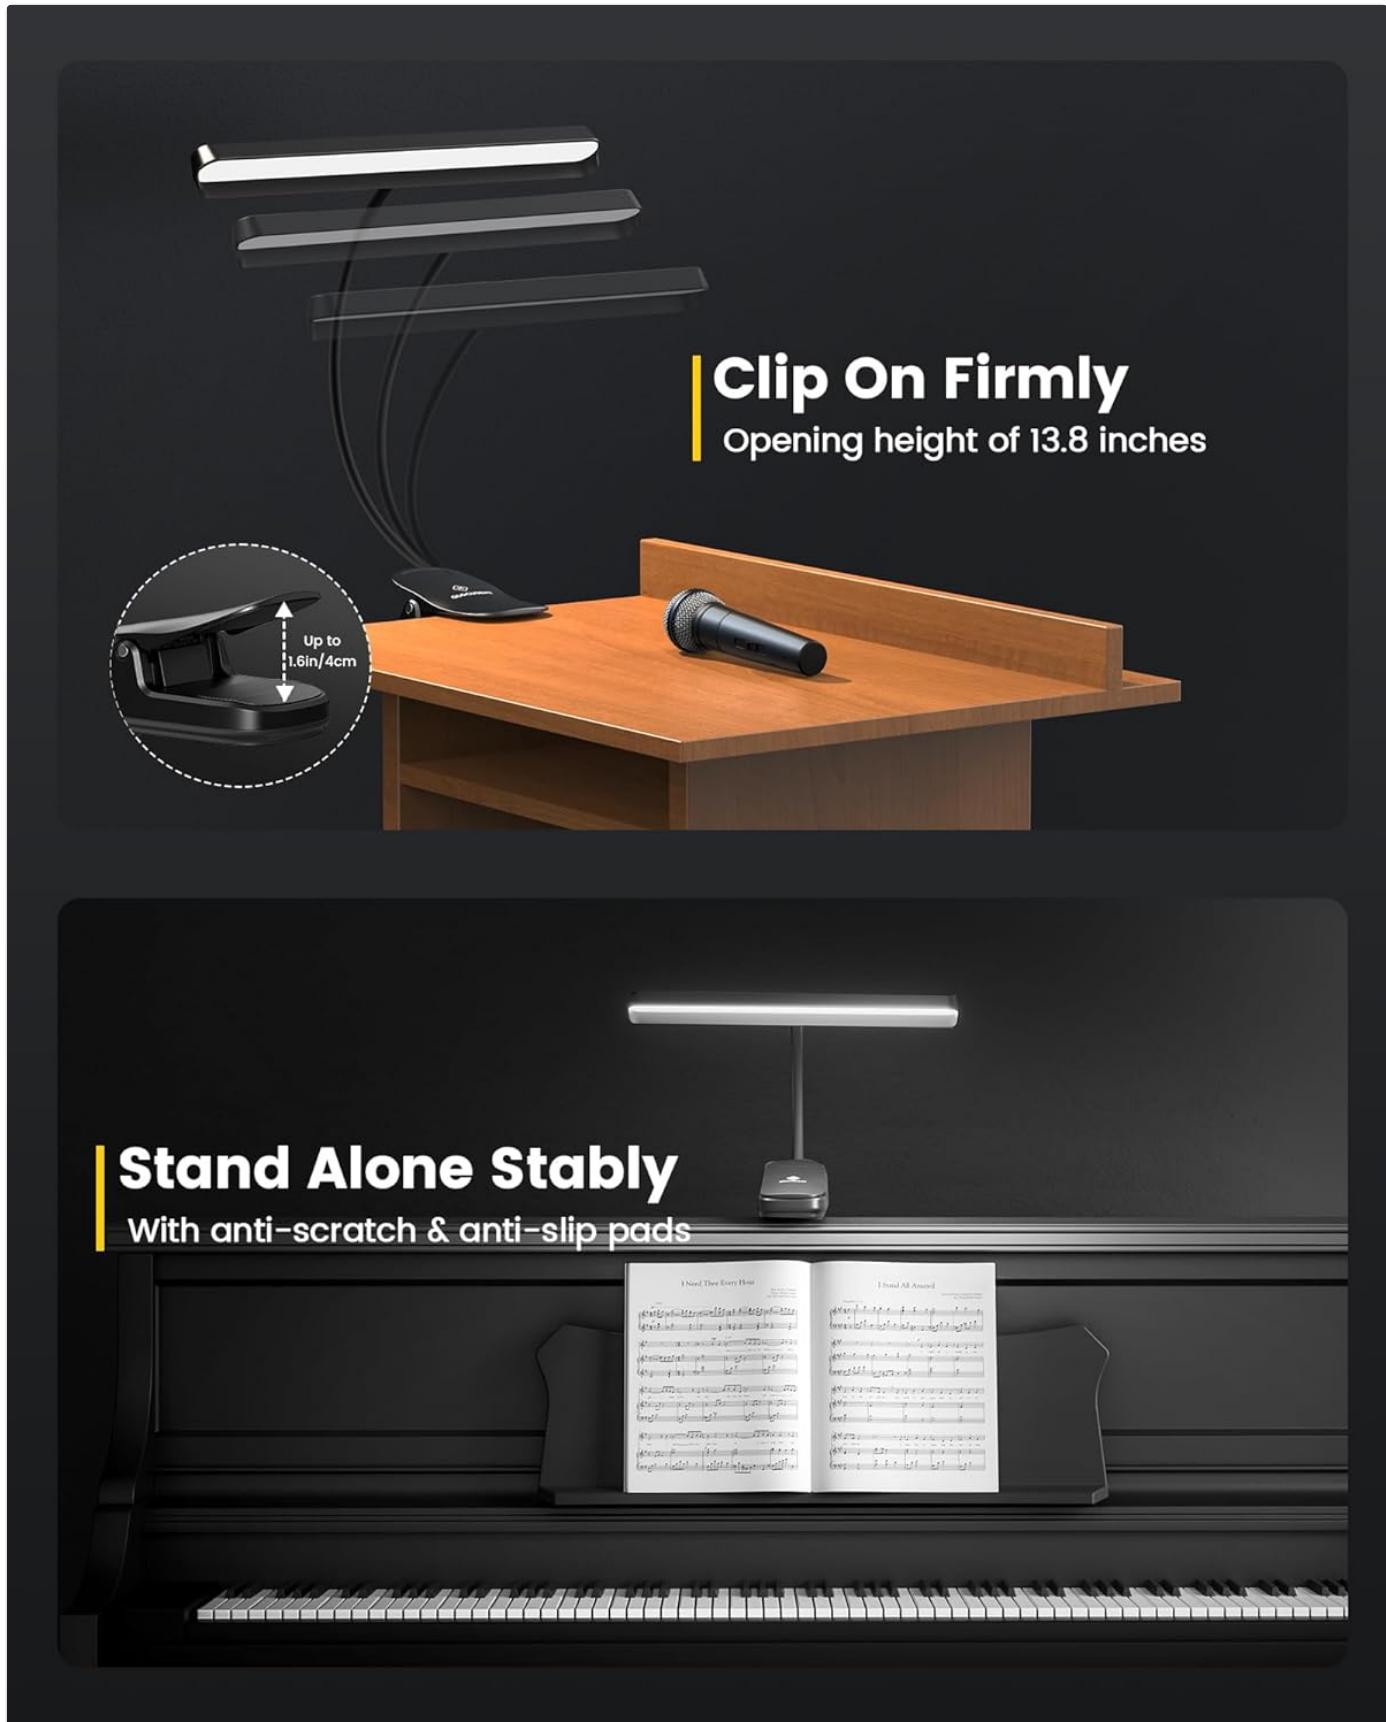


Figure 2: The versatile clamp allows for secure attachment to various surfaces or stable freestanding use.

## OPERATING INSTRUCTIONS

The Glocusent Music Stand Light offers intuitive controls for adjusting light settings.

### Controls Overview

The control panel is located on the light bar. It includes buttons for power, brightness adjustment, and color temperature selection.

## Color & Brightness Adjustable

Memory function sets your favorite setting as default

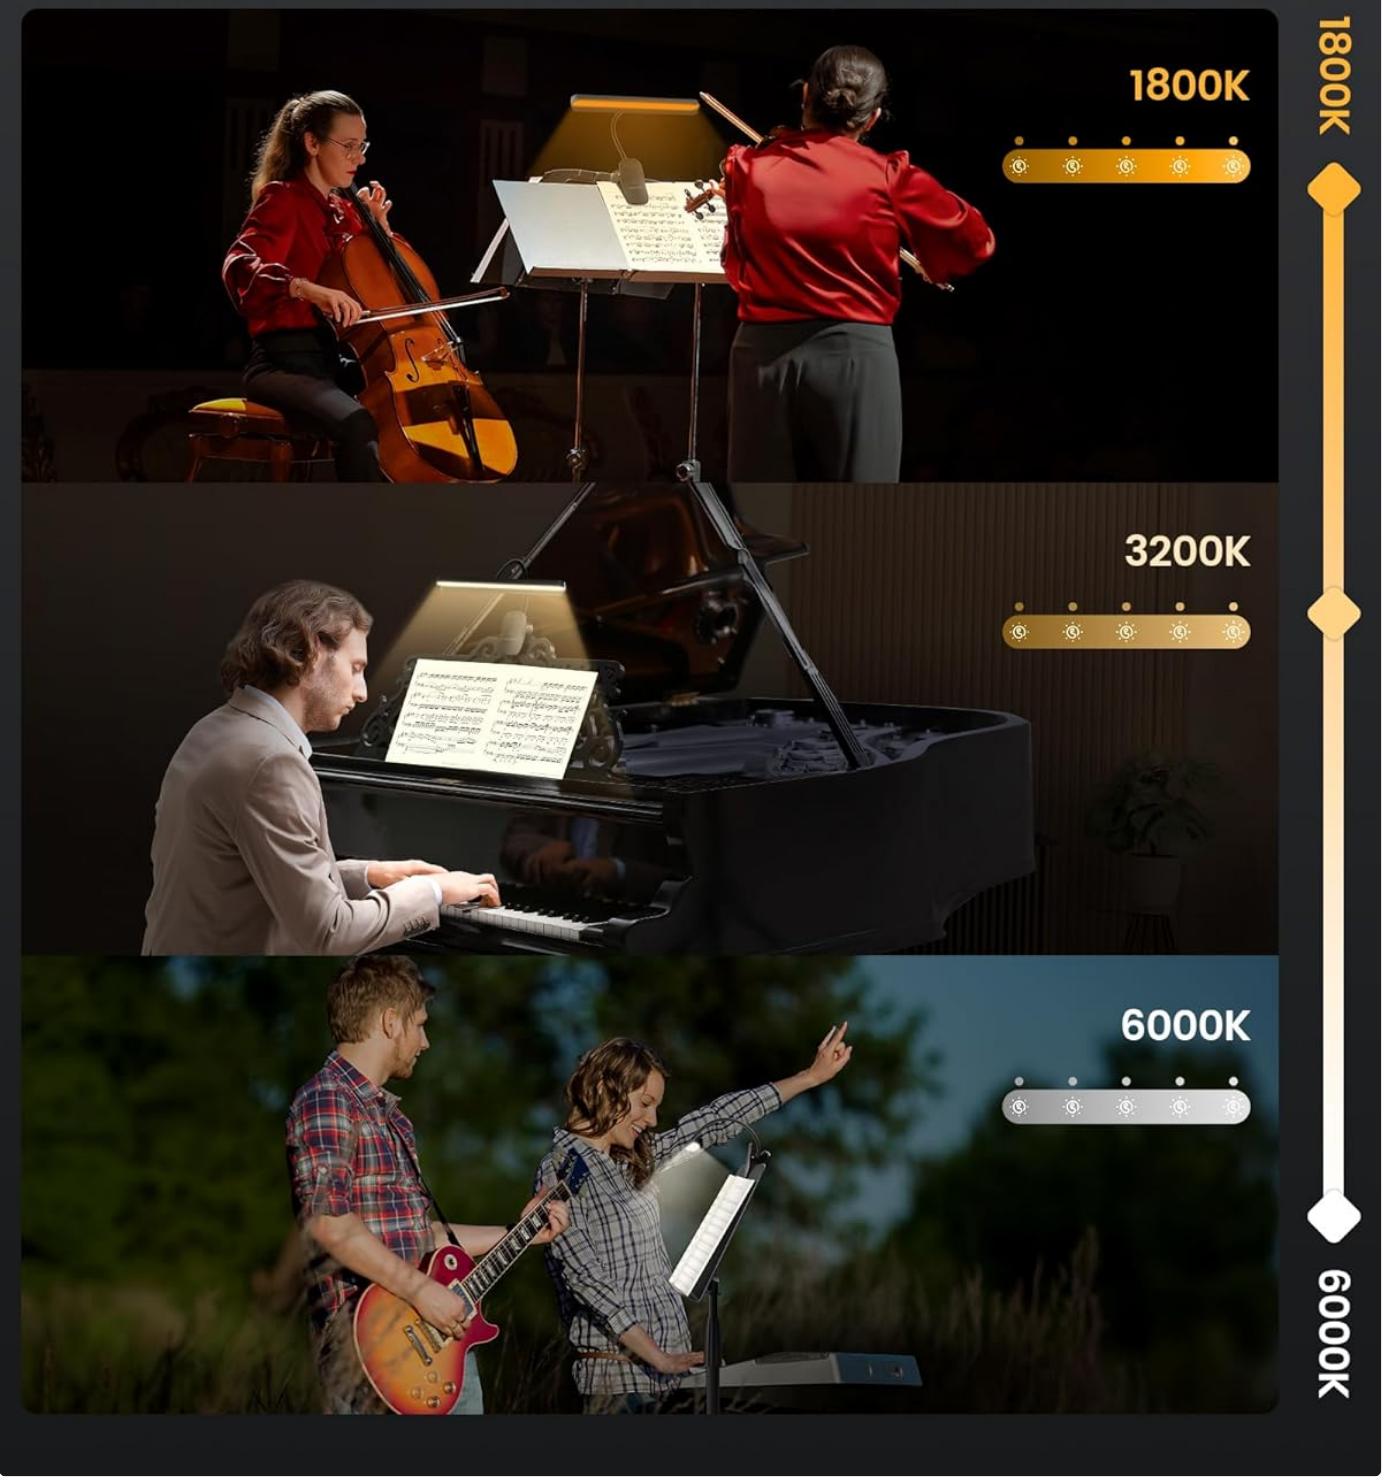


Figure 3: The light offers adjustable color temperatures to suit various environments and preferences.

## Power On/Off

- Press the **Power Button** (*power icon*) once to turn the light on or off.

## Brightness Adjustment

The light features 5 stepless adjustable brightness levels, ranging from 15 lumens to 200 lumens.

- Press the **Brightness Button** (*three horizontal lines icon*) repeatedly to cycle through the 5 preset brightness levels.
- For stepless adjustment, press and hold the Brightness Button to gradually increase or decrease the brightness. Release when the desired level is reached.

Figure 4: Five distinct brightness levels provide versatile illumination for any performance need.

## Color Temperature Selection

Choose from 3 color modes to suit your preference and environment:

- Press the **Color Temperature Button** (*light bulb icon*) repeatedly to cycle through the following modes:
  - **1800K (Amber Mode):** Eye-caring, reduces eye strain.
  - **3200K (Warm White):** Balanced and comfortable.
  - **6000K (Cool White):** Bright and clear.

Figure 5: Different color temperatures are suitable for various musical activities and environments.

## Travel Lock Feature

The light includes an additional lock switch to prevent accidental activation during transport, enhancing portability.

- Locate the lock switch near the clamp. Slide it to the locked position before packing the light for travel.

## MAINTENANCE AND CARE

- **Cleaning:** Wipe the light with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the light in a cool, dry place when not in use. Utilize the travel lock feature to prevent accidental power-on.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge when the battery indicator shows low power. The battery quality is guaranteed by a certified safety sheet (MSDS).

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted. Travel lock is engaged.	Charge the light fully. Disengage the travel lock.

Problem	Possible Cause	Solution
Light flickers or is dim.	Low battery.	Recharge the light.
Light does not hold a charge.	Battery degradation.	Contact Glocusent customer service for warranty support.
Clamp does not hold securely.	Surface too thick or thin.	Ensure the surface thickness is within the 1.6-inch clamp opening limit. Adjust position for optimal grip.

## SPECIFICATIONS

Feature	Detail
Brand	Glocusent
Model Number	A16A30
Lamp Type	LED (81 LED beads)
Brightness	15 - 200 Lumens (5 stepless adjustable levels)
Color Temperature	1800K (Amber), 3200K (Warm White), 6000K (Cool White)
Battery Capacity	4000mAh Lithium Polymer
Battery Life	Up to 150 hours (dimmest mode), 12 hours (brightest mode)
Charging Port	USB Type-C
Product Dimensions	2.3"D x 13"W x 18.9"H
Item Weight	10.7 ounces (304 Grams)
Clamp Opening	Up to 1.6 inches
Material	Acrylonitrile Butadiene Styrene (Plastic)
Special Features	Adjustable Arm, Light Shield, Travel Lock
Certifications	FCC, CE, PSE, C-Tick certified
Country of Origin	China

## WARRANTY AND SUPPORT

Glocusent stands behind the quality of its products. The Music Stand Light comes with:

- **30-Day Happiness Promise:** If you are not satisfied, you can return the product within 30 days.
- **24-Month Coverage:** A 24-month warranty covers manufacturing defects and issues.

For customer service and support, please visit the official Glocusent website or contact their support team directly. Refer to the included user manual for specific contact details.

You can visit the Glocusent Store for more information:[Glocusent Store](#)

## PRODUCT VIDEOS

### Music Stand Light Overview

Your browser does not support the video tag.

This video provides a comprehensive overview of the Glocusent 81 LED Music Stand Light, showcasing its features, design, and functionality in various musical settings. It highlights the adjustable brightness and color temperature, the sturdy clip, and the flexible gooseneck.

© 2024 Glocusent. All rights reserved.