

[Manuals.plus](#) /

› [Piskyet](#) /

› Piskyet Washer Dryer Countertop Instruction Manual (Model XYJ-DB)

Piskyet XYJ-DB

Piskyet Washer Dryer Countertop Instruction Manual

Model: XYJ-DB

PRODUCT OVERVIEW

The Piskyet Washer Dryer Countertop is designed to enhance your laundry space by providing a stable and organized surface over your front-loading washer and dryer units. This countertop features edge rails to prevent items from falling and is constructed from high-quality MDF board with a waterproof surface. It offers an efficient solution for folding clothes, storing laundry essentials, and improving the overall aesthetic of your laundry room.

Key Features

- **Space Optimization:** Provides a functional surface for folding and sorting clothes, reducing bending and improving efficiency.
- **Durable Construction:** Made from selected high-quality MDF board with a waterproof surface for longevity.
- **Edge Rails:** Integrated edge rails prevent items from falling off the back or sides of the countertop.
- **Easy Installation:** Designed for straightforward assembly with included tools and anti-slip pads for stability.
- **Enhanced Stability:** Equipped with 12 rubber stickers with anti-slip function to securely fix the countertop on your machines, minimizing movement during operation.

SETUP INSTRUCTIONS

This section provides detailed steps for assembling and installing your Piskyet Washer Dryer Countertop. Please ensure all components are present before beginning assembly.

Components Checklist:

- Main Countertop Panel
- Side Edge Rails (2)

- Back Edge Rail (1)
- Three-in-one Screws
- Adhesive Rubber Anti-slip Mats (12 pieces)
- Instruction Manual

Assembly Steps:

1. **Attach Anti-slip Mats:** Paste the 12 adhesive rubber anti-slip mats onto the four corners and center of the back of the main countertop panel. These mats ensure the countertop remains stable on your washer and dryer.
2. **Connect Edge Pieces:** Connect the side and back edge rails to the main countertop panel using the provided three-in-one screws. Ensure they are securely fastened.
3. **Cover Screw Holes:** Use the provided stickers to cover the screw holes for a clean and finished appearance.
4. **Placement:** Carefully place the assembled countertop on top of your front-loading washer and dryer units. Ensure it is centered and stable.

Visual Guide for Assembly



Image: A visual diagram illustrating the three main steps of assembling the countertop: attaching anti-slip mats, connecting edge pieces with screws, and covering screw holes.

Assembly Video

Your browser does not support the video tag.

Video: A step-by-step guide demonstrating the assembly process of the Piskyet Washer Dryer Countertop, including attaching the edge rails and securing the components.

OPERATING INSTRUCTIONS

The Piskyet Washer Dryer Countertop provides a convenient and organized workspace for your laundry tasks.

Usage Guidelines:

- **Folding Area:** Use the spacious surface for folding clothes directly out of the dryer, eliminating the need for extra

folding tables.

- **Storage:** Place laundry detergents, fabric softeners, dryer sheets, and other essentials on the countertop for easy access. The edge rails help keep items secure.
- **Organization:** Arrange baskets, decorative items, or small plants to personalize and organize your laundry area.

Example of Organized Laundry Space



Image: A laundry room featuring the Piskyet countertop with laundry detergents, folded towels, and a small plant, demonstrating effective organization.

Folding Clothes on the Countertop

Your browser does not support the video tag.

Video: A user demonstrating how to efficiently fold towels on the Piskyet Washer Dryer Countertop, highlighting the convenience and ample space provided.

MAINTENANCE

Proper care will ensure the longevity and appearance of your Piskyet Washer Dryer Countertop.

Care and Cleaning:

- **General Cleaning:** Wipe the surface with a damp cloth to remove dust and spills.
- **Spill Management:** Promptly wipe up any spills or water with a damp cloth or paper towel to maintain the waterproof finish.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals, as these may damage the surface.
- **Not Dishwasher Safe:** The countertop is not designed for dishwasher cleaning.

Cleaning the Countertop

SPECIFICATIONS

Fits Most Standard Front-Loading Washer&Dryer



Image: A person cleaning the waterproof surface of the Piskyet countertop with a damp cloth, demonstrating easy maintenance.

Troubleshooting

If you encounter any issues with your countertop, refer to the following common solutions.

Common Issues:

- **Countertop Movement:** Ensure all 12 anti-slip rubber mats are correctly placed on the underside of the countertop. Verify that the countertop is centered and evenly distributed over your washer and dryer.
- **Unstable Edges:** Check that all three-in-one screws securing the edge rails are tightened properly.
- **Water Damage:** Although the surface is waterproof, prolonged exposure to standing water should be avoided. Wipe up spills immediately.

Product Specifications

Feature	Detail
Brand	Piskyet
Model Name	XYJ-DB
Product Dimensions	54"D x 27.5"W x 2.5"H
Item Weight	31.2 pounds
Material	Engineered Wood
Color	Rustic Brown
Finish Type	Textured
Room Type	Laundry Room
Special Feature	Adjustable
Assembly Required	No (Minor assembly of edge rails)
Included Components	Instruction manual, Adhesive rubber anti-slip mats
Recommended Uses	Clothing folding, Storage

Important Safety Information

Please read and follow all safety instructions to prevent injury or damage to the product.

- **Weight Capacity:** This product is designed to support heavy appliances. Ensure that the total weight of the appliances does not exceed the countertop's weight limit.
- **Proper Installation:** Always follow the installation instructions carefully to secure the countertop properly and prevent accidents.
- **Stability:** Ensure the countertop is placed on a flat, stable surface and that the anti-slip pads are correctly applied to prevent shifting during machine operation.

- **Children and Pets:** Keep children and pets away from the product during assembly and ensure it is stable before leaving them unattended near it.

WARRANTY AND CUSTOMER SUPPORT

For any questions, concerns, or support regarding your Piskyet Washer Dryer Countertop, please contact our customer service team. While specific warranty details are not provided in this manual, please refer to your purchase documentation or the retailer's website for warranty information.

For further assistance, please visit the [Piskyet Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question