



[Manuals.plus](#) /

- › [Philips Domestic Appliances](#) /
- › Philips Airfryer Series 3000 7.2 L User Manual

Philips Domestic Appliances NA340/00

Philips Airfryer Series 3000 User Manual

Model: NA340/00

INTRODUCTION

Welcome to the Philips Airfryer Series 3000 user manual. This appliance is designed to provide a healthier and more convenient way to prepare your favorite meals. Featuring a 7.2-liter capacity, 16 cooking modes, RapidAir Plus technology, and a transparent cooking window, this Airfryer offers versatility and ease of use for everyday cooking.



The Philips Airfryer Series 3000, showcasing its sleek design and cooking window.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Failure to follow these safety guidelines may result in electric shock, fire, or serious injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Always ensure the voltage indicated on the appliance matches your local mains voltage.
- Keep the appliance and its cord out of reach of children.
- Do not operate the appliance if the plug, the mains cord, or the appliance itself is damaged.

- Always unplug the appliance after use and before cleaning.
- Ensure the appliance is placed on a stable, level, and heat-resistant surface.
- Do not block the air inlet and outlet openings.
- Avoid touching hot surfaces. Use handles or knobs.
- Do not place anything on top of the appliance.

SETUP

Before first use, follow these steps to prepare your Airfryer:

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean:** Wash the basket and pan thoroughly with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth.
3. **Placement:** Place the Airfryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance.
4. **First Run (Optional):** For the first use, you may run the Airfryer empty for about 10 minutes at 180°C (350°F) to eliminate any manufacturing odors. Ensure good ventilation during this process.

OPERATING INSTRUCTIONS

Basic Operation

The Philips Airfryer Series 3000 features an intuitive digital display and touch controls for easy operation.



The touch control panel allows for easy selection of cooking modes and settings.

1. **Power On:** Plug the appliance into a grounded wall outlet. Press the power button to turn on the Airfryer.
2. **Select Mode:** Use the pre-set cooking modes or manually adjust the temperature and time using the +/- buttons.
3. **Preheat (Optional):** For best results, preheat the Airfryer for 3-5 minutes before adding food.
4. **Add Food:** Pull out the pan and basket assembly. Place your ingredients into the basket. Do not overfill.
5. **Start Cooking:** Slide the pan back into the Airfryer. Press the start/pause button to begin cooking.
6. **Shake/Flip:** For even cooking, some recipes may require shaking or flipping ingredients halfway through the cooking process. The Airfryer may beep to remind you.
7. **Monitor Cooking:** Utilize the integrated cooking window to observe your food without opening the basket.
8. **Finish:** The Airfryer will automatically shut off when the timer reaches zero. Carefully remove the pan and basket.

RapidAir Plus Technology

The patented RapidAir Plus Technology ensures hot air circulates rapidly throughout the cooking chamber, resulting in

evenly cooked food that is crispy on the outside and tender on the inside, with up to 90% less fat.



Technologie RapidAir Plus

Visual representation of the RapidAir Plus Technology's hot air circulation.

Cooking Window

The transparent cooking window allows you to monitor the cooking progress of your food without interrupting the cooking cycle. This feature helps prevent overcooking and ensures perfect results every time.



Fenêtre

The cooking window provides a clear view of your food as it cooks.

Capacity and Versatility

With a generous 7.2-liter capacity, the Airfryer Series 3000 is suitable for family meals. It can accommodate up to 1400 grams of vegetables, 10 chicken drumsticks, 6 pieces of salmon, or 9 muffins. The appliance offers 16 cooking functions, including baking, grilling, roasting, defrosting, reheating, dehydration, and fermentation.




The 7.2L capacity easily accommodates a whole chicken, perfect for family meals.

HomeID App Integration

Enhance your cooking experience by connecting your Airfryer to the HomeID app. The app provides access to over 10,000 recipes tailored for your Airfryer, offering inspiration and step-by-step guidance for various dishes.



HomeID

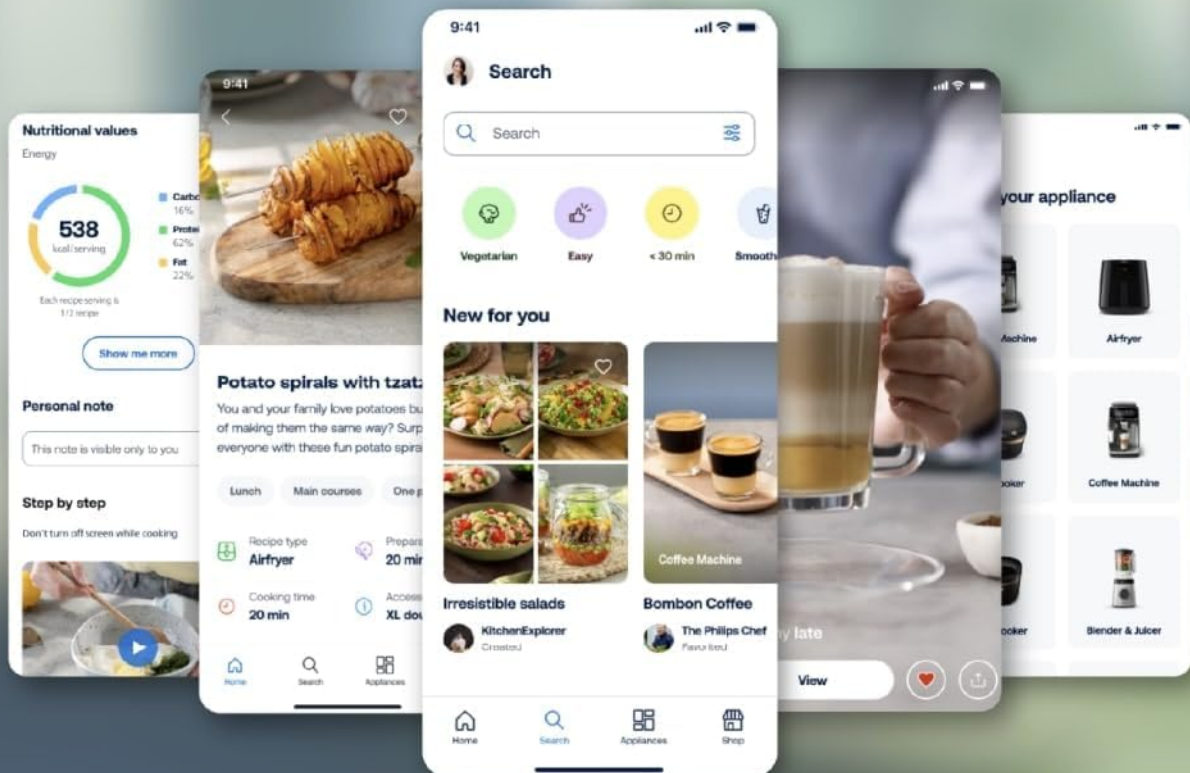

The HomeID app offers a wide range of recipes and cooking guidance.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Philips Airfryer.

Cleaning

Clean the Airfryer after every use. Always unplug the appliance and allow it to cool down completely before cleaning.

- **Basket and Pan:** The basket and pan are dishwasher safe. For manual cleaning, use hot water, dish soap, and a non-abrasive sponge. The non-stick coating allows for easy food release and cleaning.
- **Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a soft brush.
- **Exterior:** Clean the exterior with a damp cloth. Do not use abrasive cleaning agents or scouring pads.
- **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.

La variété au bout des doigts

Choisissez parmi 16 fonctions de cuisson : cuisson au four, grillade, rôtissage, décongélation, réchauffage, fermentation et bien plus encore.

16
façons de cuisiner

variété

The basket and pan are designed for easy cleaning and are dishwasher safe.

TROUBLESHOOTING

If you encounter issues with your Airfryer, consult the table below for common problems and solutions.

| Problem | Possible Cause | Solution |
|---------------------------------------|------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Airfryer does not turn on. | Appliance not plugged in; power outlet not working. | Ensure the plug is securely inserted into a working power outlet. Check your circuit breaker. |
| Food is not cooked evenly. | Basket is overloaded; food not shaken/flipped. | Reduce the amount of food per batch. Shake or flip ingredients halfway through cooking. |
| White smoke comes from the appliance. | Grease residue from previous use; fatty ingredients. | Clean the pan and basket thoroughly after each use. For fatty ingredients, place a piece of aluminum foil at the bottom of the pan to catch excess fat. |
| Fresh fries are not crispy. | Not enough oil; incorrect potato type; not soaked. | Use fresh potatoes suitable for frying. Soak potato sticks in water for 30 minutes, then dry thoroughly before adding a small amount of oil. |

SPECIFICATIONS

Detailed technical specifications for the Philips Airfryer Series 3000 (NA340/00).

Brand: Philips Domestic Appliances

Model Number: NA340/00

Color: Black

Capacity: 7.2 Liters

Power: 2000 Watts

Voltage: 230 Volts

Product Dimensions (L x W x H): 33 x 45 x 31 cm (13 x 17.7 x 12.2 inches)

Item Weight: 5.9 Kilograms (13 lbs)

Special Features: Cooking Window, 16 Cooking Methods

Control Method: Touch

Recommended Uses: Bake, Roast, Defrost, Reheat, Dehydrate

Country of Origin: China



Key dimensions of the Philips Airfryer Series 3000.

WARRANTY AND SUPPORT

Philips products are designed and manufactured to the highest standards. For information regarding your product's warranty, please refer to the warranty card included in your product packaging or visit the official Philips Domestic Appliances website.

For technical support, troubleshooting assistance, or to inquire about spare parts, please contact Philips Customer Service. Contact details can typically be found on the Philips Domestic Appliances website or in your product's documentation.

Online Support: Visit the official Philips Domestic Appliances website for FAQs, product registration, and support resources: [Philips Domestic Appliances Store](#)



© 2025 Philips Domestic Appliances. All rights reserved.