



[Manuals.plus](#) /

› [KRPTQJoo](#) /

› KRPTQJoo Replacement Remote Control User Manual for Denon AV Surround Receivers (Models RC-1075 to RC-1118)

KRPTQJoo RC-1075 (Compatible with RC-1075 to RC-1118 series)

KRPTQJoo Replacement Remote Control User Manual

For Denon AV Surround Receivers (Models RC-1075 to RC-1118)

INTRODUCTION

This manual provides instructions for the KRPTQJoo replacement remote control, designed for use with various Denon AV Surround Receiver models, including RC-1075, RC-1077, RC-1079, RC-1080, RC-1084, RC-1085, RC-1098, RC-1099, RC-1104, RC-1105, RC-1024, RC-1108, RC-1107, RC-1117, and RC-1118. This remote serves as a direct replacement and does not require programming. Please note that some buttons may not function if your specific Denon receiver model does not support the corresponding feature. Refer to your original receiver's manual for detailed functionality.



Figure 1: Front view of the KRPTQJoo replacement remote control, model RC-1115. This image displays the layout of all buttons, including power, input selection, number pad, volume, channel, and navigation controls.

SETUP

Battery Installation

The remote control requires two (2) AA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Back view of the remote control with the battery compartment open. This image shows the correct orientation for inserting two AA batteries.

OPERATING INSTRUCTIONS

This replacement remote control is designed to function immediately with compatible Denon AV Surround Receivers without any programming. Point the remote directly at your receiver and ensure there are no obstructions between the remote and the receiver's infrared sensor.

Basic Functions

- **Power (ON/OFF):** Use the **OFF** and **ON** buttons to power your Denon receiver on or off.
- **Input Selection:** Buttons such as **DVD**, **VCR(iPod)**, **V.AUX**, **EXT.IN**, **CD**, **CD-R/TAPE**, **AUX**, **BAND**, and **TUNER** allow you to select different audio/video sources connected to your receiver.
- **Volume Control:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the sound level.
- **Mute:** Press the **MUTE** button to temporarily silence the audio output. Press again to restore sound.
- **Navigation:** The central directional pad (up, down, left, right) and **MENU/ENTER** button are used for navigating menus on your receiver's display.
- **Number Pad:** Use the numeric buttons (0-9) for direct input, such as selecting radio presets or track numbers.

For specific functions related to your Denon receiver model, please consult the original Denon user manual.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AA alkaline batteries.
 - Ensure there is a clear line of sight between the remote's infrared emitter and the receiver's sensor.
 - Verify that the remote is compatible with your specific Denon receiver model.
- **Some buttons do not work:**
 - This remote is a replacement and may have buttons for features not present on all compatible Denon receiver models. Refer to your original Denon receiver manual to confirm supported functions.
- **Short operating range:**
 - Replace the batteries. Low battery power can reduce the remote's effective range.
 - Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the receiver's IR sensor.

SPECIFICATIONS

Brand	KRPTQJoo
Model Compatibility	Denon AV Surround Receivers (RC-1075, RC-1077, RC-1079, RC-1080, RC-1084, RC-1085, RC-1098, RC-1099, RC-1104, RC-1105, RC-1024, RC-1108, RC-1107, RC-1117, RC-1118)
Connectivity Technology	Infrared (IR)
Maximum Range	8 Meters (approximately 26 feet)
Power Source	2 x AA Alkaline Batteries (not included)
Color	Black
Item Weight	1.6 ounces

SUPPORT

For any issues or questions regarding your KRPTQJoo replacement remote control, please contact the seller directly. The seller aims to provide a quick response within 12 hours to assist with any problems you may encounter.