

[Manuals.plus](#) /

› [SOS ACCESSOIRE](#) /

› SOS Accessoire Washing Machine Door Lock Instruction Manual - Model 814490983

SOS ACCESSOIRE 814490983

SOS Accessoire Washing Machine Door Lock Instruction Manual

Model: 814490983

1. PRODUCT OVERVIEW

This document provides essential information for the installation, operation, and maintenance of the SOS Accessoire Washing Machine Door Lock, Model 814490983. This component is a critical safety device designed to secure the washing machine door during operation, preventing accidental opening and ensuring proper functioning of the appliance.

The door lock is a replacement part intended for specific washing machine models from various manufacturers. Always ensure compatibility before attempting installation.

2. PRODUCT SPECIFICATIONS

- **Brand:** SOS ACCESSOIRE
- **Model Number:** 814490983
- **Type:** Washing Machine Door Lock / Interlock
- **Part Reference:** 814490983
- **Batteries Required:** No

3. COMPATIBILITY

This door lock is compatible with various washing machine models from the following brands:

- BALAY
- BOSCH
- INDESIT
- PRIVILEG
- SIEMENS
- SMEG
- WHIRLPOOL

It is also compatible with washing machines using the following reference numbers:

- 814490983
- 00627556
- 1330187774
- C00311261
- C003130338
- 480113100189
- 484000000687
- 627556

Always verify the part number on your existing door lock or consult your appliance's service manual to confirm compatibility before purchase and installation.

4. INSTALLATION AND SETUP

Installation of a washing machine door lock requires technical knowledge and should be performed with caution. If you are not confident in your ability to perform this repair, it is recommended to seek assistance from a qualified appliance technician.

Safety Precautions:

- **Disconnect Power:** Always unplug the washing machine from the electrical outlet before beginning any repair work.
- **Water Supply:** Turn off the water supply to the washing machine.
- **Protective Gear:** Wear appropriate protective gear, such as gloves, if necessary.

General Installation Steps:

1. **Access the Door Lock:** Depending on your washing machine model, you may need to remove the top panel, front panel, or the door seal to access the existing door lock.
2. **Disconnect Wiring:** Carefully disconnect the electrical wiring harness from the old door lock. Note the position of each wire if they are not color-coded or keyed.
3. **Remove Old Lock:** Unscrew or unclip the old door lock from its mounting position.
4. **Install New Lock:** Position the new SOS Accessoire door lock (Model 814490983) in place and secure it with screws or clips.
5. **Reconnect Wiring:** Reconnect the electrical wiring harness to the new door lock, ensuring all connections are secure.
6. **Reassemble Appliance:** Reattach any panels or the door seal that were removed.
7. **Test Functionality:** Plug the washing machine back into the electrical outlet and turn on the water supply. Perform a test cycle to ensure the door locks and unlocks correctly.

Refer to your specific washing machine's service manual for detailed, model-specific instructions.

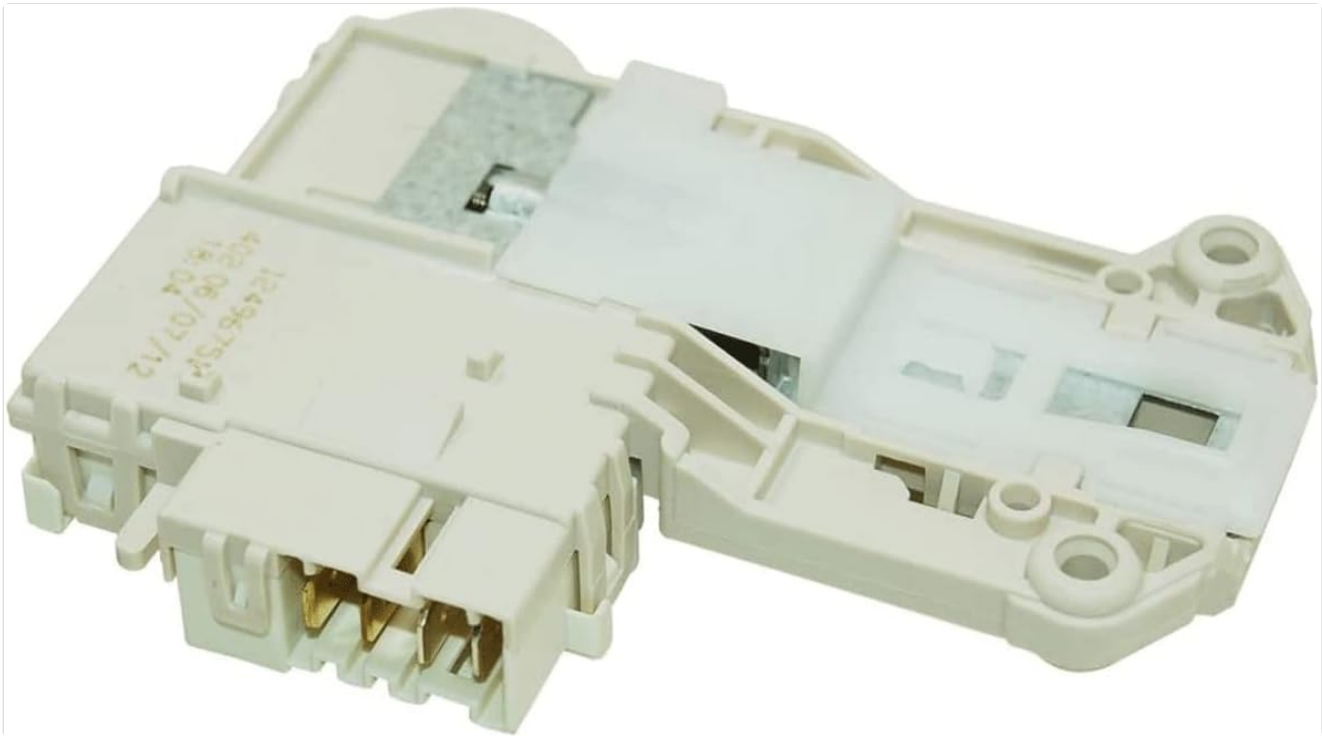


Image 1: SOS Accessoire Washing Machine Door Lock, Model 814490983. This image displays the beige-colored plastic housing of the door lock mechanism, featuring electrical connectors on one side and the locking mechanism on the other. Visible markings on the plastic indicate part numbers and manufacturing dates.

5. OPERATION

The door lock operates automatically as part of the washing machine's cycle. Once a wash program is selected and started, the door lock engages to prevent the door from being opened during operation. This is a safety feature to prevent water leaks and injury.

- Ensure the washing machine door is fully closed before starting a cycle.
- The door will remain locked until the wash cycle is complete and the machine has signaled it is safe to open.
- Do not attempt to force the door open while the lock is engaged.

6. MAINTENANCE

The SOS Accessoire door lock itself requires minimal maintenance. However, regular inspection of the surrounding area can help ensure its longevity and proper function:

- **Clean Door Seal:** Periodically clean the washing machine's door seal (gasket) to prevent buildup of dirt, mold, or detergent residue that could interfere with the door closing properly and thus the lock engaging.
- **Inspect for Damage:** Occasionally inspect the door lock mechanism and the door strike for any visible signs of wear, cracks, or damage.
- **Avoid Overloading:** Overloading the washing machine can put stress on the door and its locking mechanism.

7. TROUBLESHOOTING

If you experience issues with your washing machine's door lock, consider the following:

- **Door Not Locking:**
 - Ensure the door is fully closed and latched.

- Check for any obstructions (e.g., clothing) preventing the door from closing completely.
- Verify that the washing machine is receiving power.

- **Door Not Unlocking:**

- Ensure the wash cycle has completed. Some machines have a delay before unlocking.
- Try unplugging the machine for a few minutes and then plugging it back in (a 'hard reset').
- Check if there is still water in the drum, which might prevent unlocking for safety.

- **Error Codes:** Consult your washing machine's user manual for specific error codes related to the door lock.

If troubleshooting steps do not resolve the issue, it may indicate a faulty door lock or another component. Professional diagnosis and repair are recommended.

8. WARRANTY AND SUPPORT

For information regarding the warranty of your SOS Accessoire door lock, please refer to the purchase documentation or contact the seller directly. SOS Accessoire specializes in spare parts for small and large household appliances.

For technical support or further inquiries, please contact SOS Accessoire through their official channels or the retailer from whom the product was purchased.

SOS ACCESSOIRE Contact Information: Please visit the official SOS ACCESSOIRE website or your point of purchase for current contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9T326GH>

More documents and user manuals: <https://manuals.plus/>