

Haroar TOB-825

Haroar Universal TV Remote Control TOB-825 Instruction Manual

Model: TOB-825

INTRODUCTION

This manual provides detailed instructions for the Haroar Universal TV Remote Control, model TOB-825. This remote is designed as a replacement for various Toshiba TV models, including CT-884, CT-859, CT-9507, CT-9840, CT-90125, RC211, LA-54, and 911V3. Please read this manual carefully to ensure proper use and to maximize the functionality of your remote control.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

2. Initial Use

The Haroar TOB-825 remote control is pre-programmed for the specified Toshiba TV models. In most cases, it should function immediately after battery installation without additional setup. Point the remote directly at your TV and test basic functions like Power, Volume, and Channel.

If the remote does not respond, ensure the batteries are correctly inserted and have sufficient charge. For some specific TV models or if the remote does not respond, refer to your TV's original manual for any specific remote control pairing instructions, though this is generally not required for direct replacement remotes.

OPERATING INSTRUCTIONS

Below is an overview of the remote control's buttons and their primary functions. Refer to the image for visual

identification.



Figure 1: Haroar Universal TV Remote Control TOB-825. This image displays the front face of the black remote control, showing all buttons and their labels.

Button Functions:

- **Power Button** (⏻): Turns the TV on or off.
- **TEXT**: Activates or deactivates Teletext mode.
- **SUBTITLE**: Toggles subtitles on or off.
- **CD I/II**: Likely for audio language selection or dual audio modes.
- **Number Buttons (0-9)**: Used to directly enter channel numbers.
- **AD**: Audio Description button, for visually impaired users.
- **ATV/DTV**: Switches between Analog TV (ATV) and Digital TV (DTV) modes.
- **i+**: Information button, displays program information.
- **Volume Up/Down (+/-)**: Adjusts the sound volume.
- **Mute** (🔇): Mutes or unmutes the TV sound.
- **Channel Up/Down (↗ P ×)**: Changes the TV channel.
- **QUICK**: Likely for quick access to a frequently used function or menu.
- **GUIDE**: Opens the Electronic Program Guide (EPG).
- **EXIT**: Exits the current menu or function.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and confirm selections.
- **MENU**: Opens the TV's main menu.
- **RETURN**: Goes back to the previous screen or menu.
- **Colored Buttons (Red, Green, Yellow, Blue)**: These buttons typically correspond to specific functions displayed on-screen, often in smart TV interfaces or teletext.
- **Additional Buttons (e.g., 📶)**: The four buttons at the bottom, below the colored buttons, often control specific input sources or advanced features. Their exact function may vary by TV model.

MAINTENANCE

Cleaning the Remote Control

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface and buttons.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries or different types of batteries.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not work.	- Dead or incorrectly inserted batteries. - Obstruction between remote and TV. - Remote is out of range.	- Replace batteries with new AAA batteries, ensuring correct polarity. - Remove any objects blocking the line of sight to the TV's IR receiver. - Move closer to the TV (within 7 meters / 23 feet).
Some buttons do not respond.	- Button stuck or dirty. - Specific function not supported by TV model.	- Clean the remote control, paying attention to the unresponsive buttons. - Consult your TV's original manual to confirm if the function is available.
TV responds intermittently.	- Weak batteries. - Interference from other electronic devices.	- Replace batteries. - Ensure no other devices are emitting strong infrared signals towards the TV.

SPECIFICATIONS

- Model:** TOB-825
- Brand:** Haroar
- Compatibility:** Universal replacement for Toshiba TV models CT-884, CT-859, CT-9507, CT-9840, CT-90125, RC211, LA-54, 911V3.
- Power Source:** 2 x AAA Batteries (not included)
- Dimensions:** Approximately 1 x 1 x 1 cm
- Weight:** Approximately 50 g
- Material:** ABS Plastic

WARRANTY AND SUPPORT

For any questions, issues, or support regarding your Haroar Universal TV Remote Control TOB-825, please contact the seller or manufacturer through the platform where the product was purchased. Please retain your proof

of purchase for any warranty claims.