

## HOMELYLIFE D101

# HOMELYLIFE Kids Instant Print Camera D101 User Manual

Model: D101

## 1. INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your HOMELYLIFE Kids Instant Print Camera D101. Please read this manual thoroughly before operating the camera and retain it for future reference.

## 2. SAFETY INFORMATION

---

- This product is intended for children aged 3 and above. Adult supervision is recommended.
- Do not disassemble or attempt to repair the camera yourself.
- Keep the camera away from water and extreme temperatures.
- Use only the provided charging cable and accessories.
- Small parts, such as the SD card, can be a choking hazard. Keep out of reach of very young children.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in your package:

- 1 x HOMELYLIFE Instant Print Camera D101
- 1 x 32GB SD Card
- 3 x Rolls of Printing Paper
- 5 x Color Pens
- 1 x Sticker Sheet
- 1 x USB Type-C Charging Cable
- 1 x Lanyard

- 1 x Instruction Manual (this document)



Image 3.1: The HOMELYLIFE Kids Instant Print Camera D101 shown with its complete set of accessories, including the camera itself, USB cable, SD card, printing paper rolls, color pens, and stickers.

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your camera.



Image 4.1: Front view of the camera, highlighting the lens, flash, and paper output slot.

# MULTIFUNCTIONAL INSTANT PRINT CAMERA



Image 4.2: Back view of the camera, showing the 2.4-inch IPS screen and control buttons for navigation and function selection.

## 5. SETUP

### 5.1 Charging the Camera

Before first use, fully charge the camera. Connect the provided USB Type-C cable to the camera's charging port and to a compatible USB power source. The built-in 1200mAh battery provides approximately 3 hours of continuous photo taking or 2 hours of video recording on a full charge. The included cable is for charging only; use a card reader or your own data cable to transfer files.

### 5.2 Inserting the SD Card

Locate the SD card slot on the side of the camera. Insert the provided 32GB SD card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation. This card stores thousands of photos and videos.

### 5.3 Loading Printing Paper

Follow these steps to load the thermal printing paper:

1. Open the paper slot cover on the front of the camera.
2. Insert a roll of printing paper correctly, ensuring the paper feeds out from the top. Leave

approximately 1-2 inches of paper extending from the slot.

3. Close the paper slot cover securely.



Image 5.1: Visual guide demonstrating the three steps for correctly opening the paper slot, inserting the print paper, and closing the slot.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off

Press and hold the power button (usually marked with a power symbol) to turn the camera on or off.

### 6.2 Taking Photos

- The camera features 3600W HD dual lenses for both front and rear photography.
- Use the flip lens design for easy selfies.
- Press the shutter button to capture a photo.
- The camera supports 10x digital zoom. Adjust zoom using the designated buttons.
- Activate the flash for improved lighting in low-light conditions.

### 6.3 Recording Videos

Switch to video mode using the mode selection button. Press the shutter button to start and stop 1080P video recording.

## 6.4 Instant Printing

The camera prints photos instantly in black and white. You can select from 3 print densities in the settings menu to adjust the darkness of your prints. Note that prints are automatic in print mode; there is no option to cancel a print once taken.

## 6.5 Creative Features

Enhance your photos with various built-in options:

- **Filters:** Choose from 8 scene filters to change the look of your photos.
- **Frames & Stickers:** Apply 19 different photo frames and stickers to add fun elements.
- **Jigsaw Puzzles:** Engage with 7 built-in jigsaw puzzles.



Image 6.1: Examples of photos taken with the camera, showcasing the variety of stickers and filters available to enhance creativity.

# DIY INSTANT PHOTOS WITH COLOURED PENS



Image 6.2: A child engaging in a DIY activity, coloring a black and white instant print photo using the included color pens.

## 6.6 Special Modes

- **Time-Lapse:** Set the camera to capture photos at intervals (e.g., 3s, 5s, 10s).
- **Continuous Shooting (Burst Mode):** Take multiple photos in quick succession.
- **Playback:** Review captured photos and videos on the 2.4-inch IPS screen.
- **Music:** The camera includes a music playback function.

# 36MP HD DUAL LENS

3.35in/8.5cm



3.7in/9.4cm

2.17in/5.5cm



 Others



 Ours



Image 6.3: Visual representation of the camera's flash capability, burst shooting mode, time-lapse options (3s, 5s, 10s), and 10x zoom function.

## 7. MAINTENANCE

### 7.1 Cleaning

Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth. Do not use liquid cleaners or abrasive materials.

### 7.2 Storage

When not in use, store the camera in a cool, dry place, away from direct sunlight and moisture. Remove the SD card if storing for extended periods.

## 8. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a power source and try again.
- **Cannot take photos/videos:** Check if the SD card is inserted correctly and has sufficient storage space.
- **Poor print quality:** Verify that the printing paper is loaded correctly. Adjust the print density setting in

the camera menu. Ensure the paper is not expired or damaged.

- **Camera frozen:** Press and hold the power button for 10 seconds to force a restart.
- **No sound:** Check the volume settings in the camera menu.

## 9. SPECIFICATIONS

---

<b>Model Name</b>	D101
<b>Brand</b>	HOMELYLIFE
<b>Product Dimensions</b>	3.7 x 2.17 x 3.35 inches (9.4 x 5.5 x 8.5 cm)
<b>Item Weight</b>	15.5 ounces
<b>Battery</b>	1200mAh Lithium Polymer (included)
<b>Photo Sensor Technology</b>	CMOS
<b>Supported File Format</b>	JPEG
<b>Image Stabilization</b>	Digital
<b>Optical Zoom</b>	3x
<b>Maximum Webcam Image Resolution</b>	1.3 MP
<b>Screen Size</b>	2.4-inch IPS

# 1200mAh LARGE CAPACITY BATTERY

≈3 hours photo taking    ≈2 hours video recording



**WARM TIP: To protect the battery, it can not be used when charging!**

**1** Open the paper slot.



**2** Insert the print paper correctly and leave about 1-2 inches.



**3** Close the paper slot.



Image 9.1: Diagram illustrating the physical dimensions of the camera: 3.7 inches (9.4 cm) in width, 2.17 inches (5.5 cm) in depth, and 3.35 inches (8.5 cm) in height.

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official HOMELYLIFE website. Please have your model number (D101) and purchase date available when contacting support.