

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [GEARDON](#) /
- › [GEARDON Karaoke Machine User Manual](#)

## GEARDON GD-SG01

# GEARDON Karaoke Machine User Manual

Model: GD-SG01

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your GEARDON Karaoke Machine, Model GD-SG01. Please read this manual thoroughly before using the product to ensure proper function and longevity.





Image: The GEARDON Karaoke Machine, featuring a 15-inch touchscreen tablet, dual microphone holders, and a vibrant LED light display on the front speaker grille. The machine is black with a retractable handle and wheels for portability.


## PACKAGE CONTENTS

---

Upon unpacking, please verify that all items listed below are present and in good condition:

- Karaoke Machine Unit (Model: GD-SG01)
- UHF Rechargeable Microphones (x2)
- AC Adapter (x1)
- AAA Batteries (x2) - for remote control
- USB-C Charging Cable (x1)
- User Manual (this document)

# MUTIPLE KINDS OF LIGHT KARAOKE MACHINE

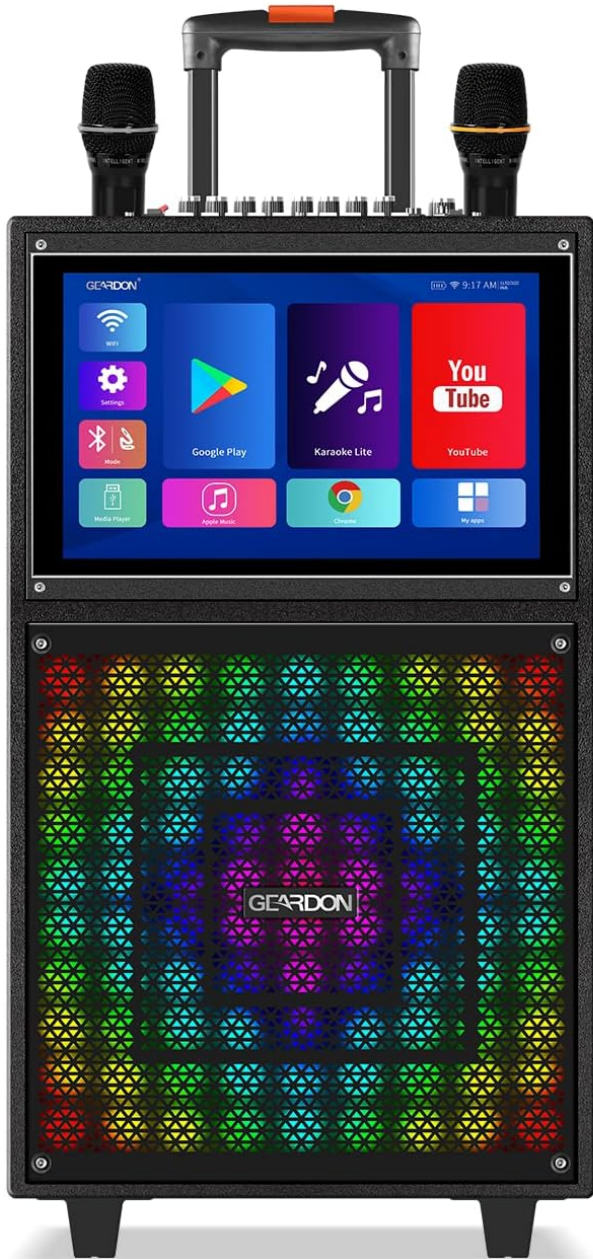

Remote control



Microphone charger



Adapters



User manuals

Image: A visual representation of the accessories included with the GEARDON Karaoke Machine, showing the remote control, microphone charging cable, AC power adapters, and the user manual.

## SETUP

- Unpacking and Placement:** Carefully remove all components from the packaging. Place the karaoke machine on a stable, flat surface. The unit features durable swivel wheels and a pull rod for easy transportation.
- Power Connection:** Connect the AC adapter to the machine's power input and then to a standard electrical outlet. Ensure the unit is fully charged before initial use for optimal battery performance.
- Microphone Setup:** Insert the provided AAA batteries into the remote control. The two UHF rechargeable microphones automatically connect to the machine upon power-on. Ensure microphones are charged using the USB-C cable if needed.

4. **Initial System Registration:** Upon first power-on, the 15-inch touchscreen tablet will guide you through a registration process. Follow the on-screen prompts to complete this step. This may include connecting to a Wi-Fi network and linking a YouTube/Gmail account for app access.
5. **Network Connection:** Connect the machine to your Wi-Fi network as prompted during initial setup. A stable internet connection is required for accessing online content and applications.



Image: A detailed view of the G10 tablet interface, highlighting its key features: Wi-Fi connectivity, 15-inch touch screen, Android 12.1 operating system, and 32GB of internal storage.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Locate the power button, typically on the control panel. Press and hold to power on or off the unit.

### 2. Using the Touch Screen Tablet

The integrated 15-inch touchscreen tablet provides access to various applications and settings. Navigate through menus, select songs, and follow lyrics directly on the screen. The tablet runs on Android 12 and includes 32GB of storage for downloaded content.

### 3. Playback Options

The GEARDON Karaoke Machine supports multiple playback modes:

- **Tablet:** Utilize pre-installed apps or download new ones from the Google Play Store.
- **Bluetooth:** Connect your smartphone, tablet, or other Bluetooth-enabled devices wirelessly.
- **USB:** Play audio files from a USB flash drive.
- **AUX-out:** Connect external audio devices via a 3.5mm jack.
- **Micro-SD:** Insert a Micro-SD card to play media files.
- **HDMI:** Connect to an external display (e.g., television) or a PC for video output.
- **Guitar Input:** Connect a guitar for accompaniment.



Image: The control panel located on the top of the karaoke machine, displaying various ports and knobs for adjusting sound and selecting

input sources such as guitar, Bluetooth, AUX, Micro-SD, USB, and HDMI.

## 4. Audio Adjustments

The control panel allows for fine-tuning of audio output. Adjust volume levels for music and microphones independently. You can also modify sound effects such as bass, treble, and echo. Six EQ sound effects are available: Normal, Jazz, Rock, Classical, Pop, and Country.

## 5. Microphone Usage

The two included UHF rechargeable microphones are designed for clear vocal pickup. For optimal sound, speak directly into the top of the microphone. Ensure microphones are charged for uninterrupted use. Each microphone features an LED screen displaying frequency and battery status.



Image: A close-up of the two UHF rechargeable cordless microphones, highlighting their high-quality metal woven mesh cover, integrated LED screen for status display, and design for easy storage.

## 6. LED Light Display

The machine features a dynamic LED light display on the front grille. These lights can change colors and patterns to match the beat of the music, enhancing the atmosphere. Control the LED mode via the control panel.

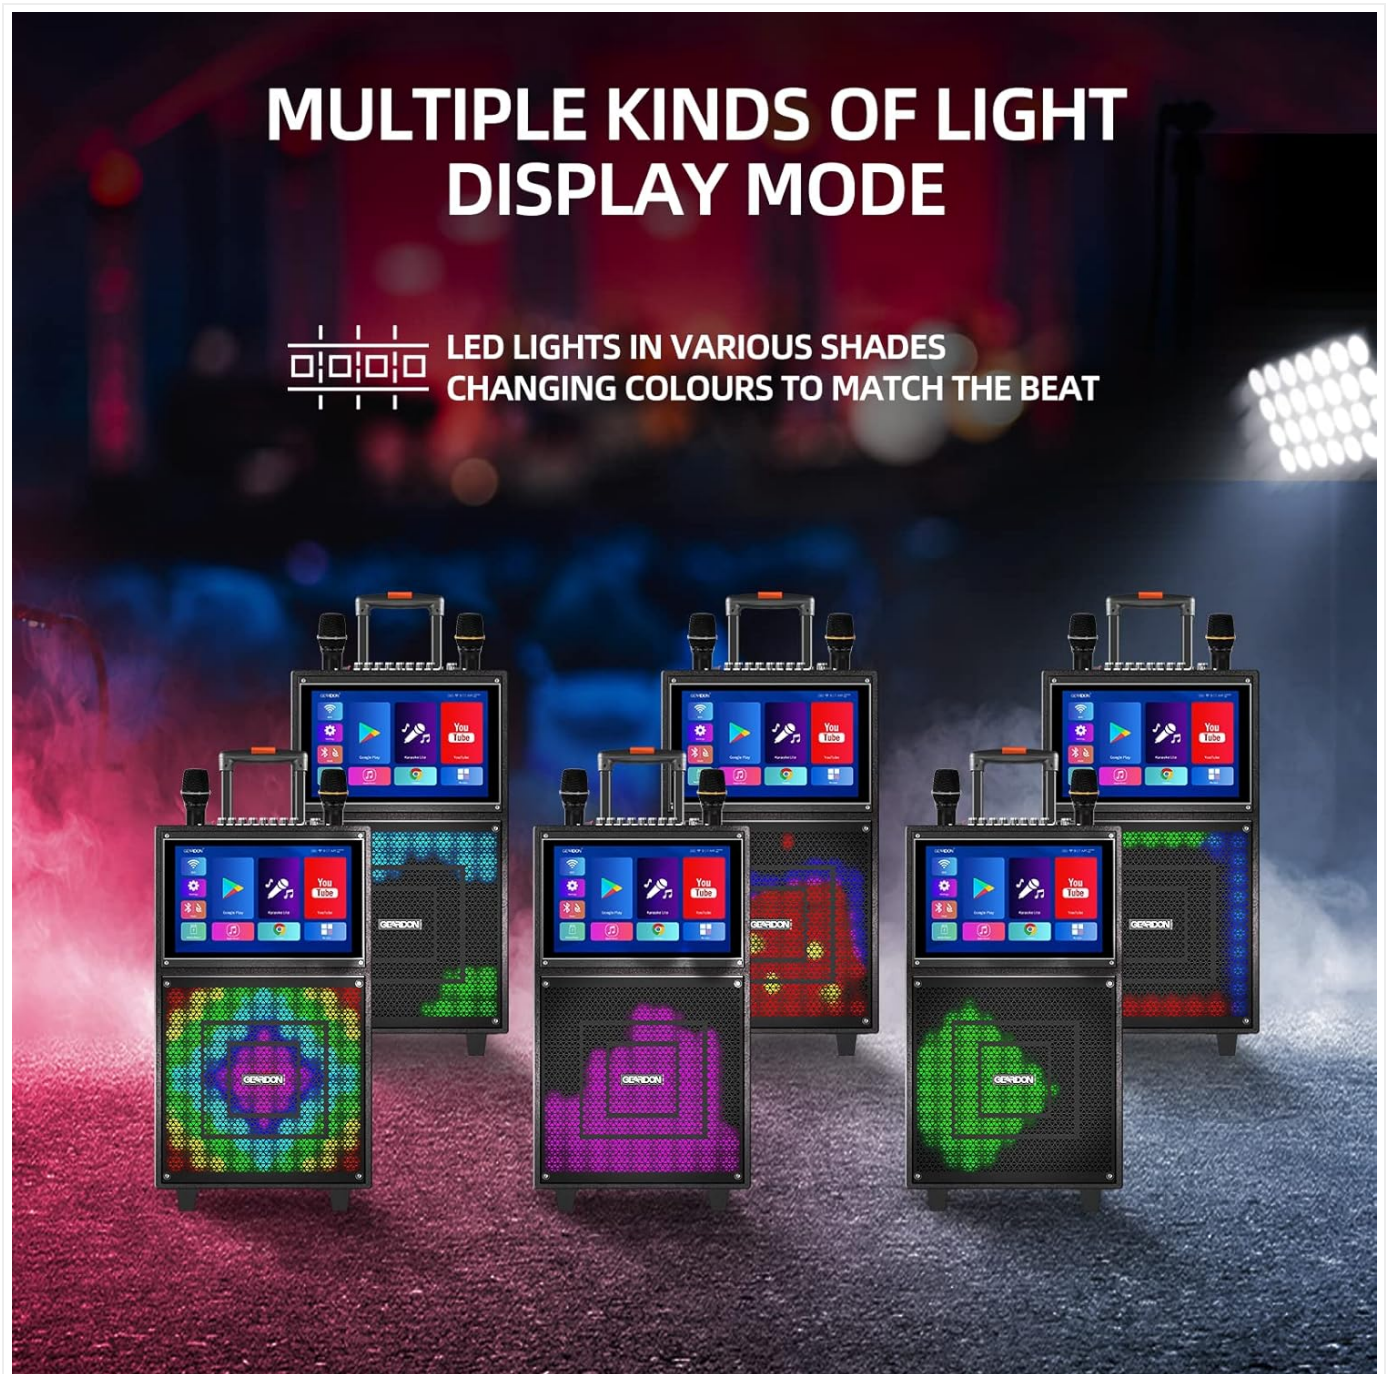


Image: An illustration showcasing several GEARDON Karaoke Machines, each demonstrating a different LED light display mode with various color combinations and patterns, indicating the customizable lighting effects.

## 7. Portability and Battery Life

Designed for portability, the unit includes integrated wheels and a retractable handle. The built-in rechargeable Lithium Polymer battery provides approximately 6 hours of operation with lights and video running, and up to 10 hours with audio only. This allows for use in various indoor and outdoor settings.

# HAVE A GREAT TIME WITH YOUR FAMILY



BATTERY LIFE UP TO 4~5 HOURS



WITH LYRICS DISPLAY SCREEN  
SUITABLE FOR ADULTS AND KIDS

Image: A woman and a child are shown singing into microphones with the GEARDON Karaoke Machine in a home living room, illustrating the product's suitability for family entertainment and its lyrics display screen.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the machine and the tablet screen. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the unit regularly, even when not in use for extended periods. Store in a cool, dry place.
- **Storage:** When storing the machine, ensure microphones and cables are neatly organized. The microphone holders on top of the unit are convenient for storage, but for transport, consider a separate protective case for microphones and the remote control to prevent damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not power on.	Battery is depleted or AC adapter is not connected properly.	Connect the AC adapter and allow the unit to charge. Ensure the power button is pressed correctly.
Microphones are not producing sound or are too quiet.	Microphones are not charged, not powered on, or microphone volume is too low. Speaking position.	Ensure microphones are charged and powered on. Adjust microphone volume on the control panel. Speak directly into the top of the microphone for best pickup.
Difficulty connecting to Wi-Fi.	Incompatibility with network device or incorrect Wi-Fi password.	Double-check Wi-Fi password. If issues persist, contact customer support as there might be an incompatibility issue with your network device.
No sound from speakers.	Master volume is too low, or incorrect input source selected.	Increase the master volume. Verify that the correct playback mode (Bluetooth, USB, AUX, etc.) is selected on the control panel.

## SPECIFICATIONS

---

**Model Number:** GD-SG01

**Dimensions (L x W x H):** 10.6 x 14.5 x 25.9 inches

**Weight:** 35.6 pounds

**Tablet Display:** 15-inch Touch Screen, Android 12

**Internal Storage:** 32 GB

**Battery Type:** Lithium Polymer (included)

**Voltage:** 3.7 Volts

**Speaker Count:** 3

**Connectivity:** Bluetooth 5.0, USB, Micro-SD, AUX-out (3.5mm Jack), HDMI, Wi-Fi

**Microphones:** 2 x UHF Rechargeable Cordless Mics

**Power Source:** Battery Powered / AC Adapter

**Special Features:** Lyric Display, Portable Design (with wheels and pull rod), DJ Lights, EQ Sound Effects

**Recommended Uses:** Home parties, gym, backyard, swimming pool, beach gatherings, camping, outdoor & indoor activities.

## WARRANTY AND SUPPORT

---

GEARDON is committed to providing high-quality products. For any product-related inquiries, technical support, or warranty claims, please contact our customer service team.

- **Return Policy:** This product is eligible for a 30-day return period from the date of purchase, subject to the retailer's return policy.
- **Customer Support:** If you encounter any issues, particularly with Wi-Fi connectivity or product defects, please contact GEARDON customer support promptly for assistance or product replacement.
- **Online Resources:** For additional information and support, visit the official GEARDON store on Amazon: [GEARDON Store](#)

© 2024 GEARDON. All rights reserved.  
This manual is subject to change without notice.