

Homemory HBKZDTYKCDGL-LST6

Homemory Rechargeable Flameless Taper Candles Instruction Manual

Model: HBKZDTYKCDGL-LST6

INTRODUCTION

Thank you for choosing Homemory Rechargeable Flameless Taper Candles. These LED candlesticks are designed to provide the ambiance of real candles without the hazards of open flames, smoke, or melted wax. Made from real wax with flickering 3D flames, they offer a realistic and safe lighting solution for various indoor settings. This manual will guide you through the setup, operation, and care of your new flameless candles.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 6 x Rechargeable Electronic Taper Candles
- 1 x Charging Station
- 1 x USB-C Cable
- 1 x Remote Control
- 1 x User Manual (this document)

PRODUCT FEATURES

- **Rechargeable Convenience:** Equipped with a charging station and USB-C cable for easy recharging. A 2-hour charge provides 60-200 hours of illumination.
- **Real Wax Construction:** Crafted from real wax with melted edges and black wicks for an authentic candle appearance.
- **Realistic 3D Flame:** Features a flickering warm yellow 3D flame design that mimics a real candle flame, ensuring safety for children and pets.
- **Remote Control with Timer:** Includes a remote control for convenient operation, offering:

- 2 Light Modes: Flickering flame or steady light.
 - Timer Function: 2, 4, 6, or 8-hour automatic shut-off.
 - Adjustable Brightness: Dimmer control to set desired ambiance.
- **Indoor Use:** Designed for indoor decoration in various rooms such as bedrooms, dining rooms, and living rooms.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the candles.
 - Connect the USB-C cable to the charging station and a compatible USB power adapter (not included).
 - Insert the bottom of each taper candle into the designated slots on the charging station.
 - The indicator light on the charging station will show red while charging and turn green when fully charged.
 - A full charge typically takes approximately 2 hours.



Image: Homemory Flameless Taper Candles placed on the charging station. Red lights indicate charging, green lights indicate fully charged.

3. **Remote Control Battery:** Ensure the remote control has a working battery. If not, replace it with a CR2025 coin cell battery.

OPERATING INSTRUCTIONS

Your Homemory flameless taper candles are operated using the included remote control.

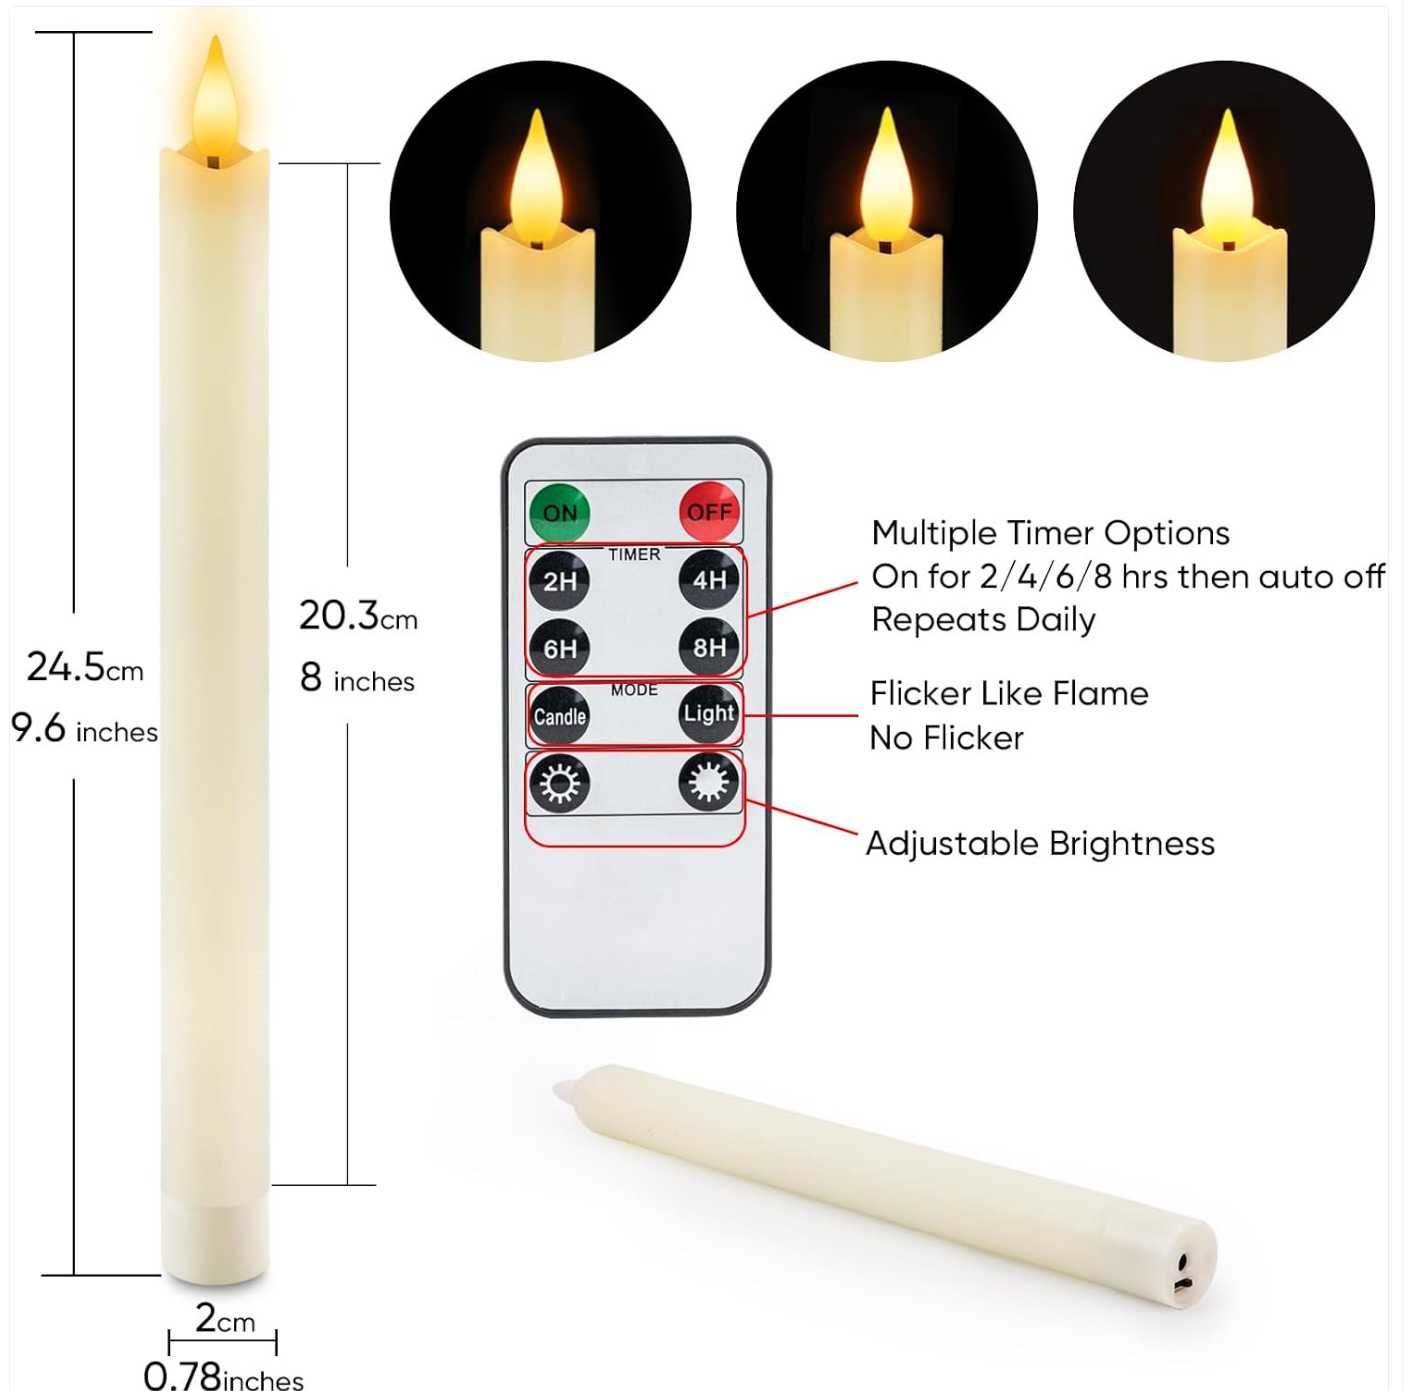


Image: Diagram of the remote control showing buttons for ON/OFF, Timer (2H, 4H, 6H, 8H), Mode (Candle/Light), and Brightness adjustment.

1. Power ON/OFF:

- Press the **ON** button to turn the candles on.
- Press the **OFF** button to turn the candles off.

2. Set Timer:

Select a timer setting (2H, 4H, 6H, 8H) to have the candles automatically turn off after the selected duration. The

timer will activate from the moment you press the button and repeat daily.

- Press **2H** for 2 hours.
- Press **4H** for 4 hours.
- Press **6H** for 6 hours.
- Press **8H** for 8 hours.

3. Change Light Mode:

- Press **Candle** for a realistic flickering flame effect.
- Press **Light** for a steady, non-flickering illumination.

4. Adjust Brightness:

- Press **+** to increase brightness.
- Press **-** to decrease brightness.



Image: A hand operating the remote control with the flameless taper candles illuminated in the background.

MAINTENANCE

- **Cleaning:** Wipe the candles gently with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** When not in use for extended periods, store the candles and remote control in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care (Remote):** If the remote control's range decreases or it stops responding, replace its CR2025 coin cell battery.
- **Recharging:** Recharge candles when their light dims significantly or they stop illuminating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Candles do not turn on.	Low battery or remote control issue.	Ensure candles are fully charged. Check remote control battery and replace if necessary. Point remote directly at candles.
Remote control is not working.	Remote battery is dead or remote is too far.	Replace the CR2025 battery in the remote. Ensure you are within effective range (approx. 10-16 feet) and there are no obstructions.
Candles flicker irregularly or dim.	Low battery.	Recharge the candles using the charging station.
Candles do not charge.	Improper connection or faulty cable/adaptor.	Ensure the USB-C cable is securely connected to both the charging station and a working power adapter. Verify candles are correctly seated in the charging slots. Try a different USB-C cable or power adapter.

SPECIFICATIONS

Feature	Detail
Brand	Homemory
Model Number	HBKZDTYKCDGL-LST6
Product Dimensions	0.78"D x 0.78"W x 9.6"H
Base Material	Wax
Light Source Type	LED
Power Source	Battery Powered (Rechargeable)
Voltage	5 Volts
Control Method	Remote
Indoor/Outdoor Usage	Indoor

Feature	Detail
Number of Items	6

Safety Information

- These candles are designed for **indoor use only**. Do not use outdoors or in wet environments.
- Avoid placing candles in direct sunlight or near heat sources (e.g., fireplaces, heaters) as this may cause the wax to melt or deform.
- Keep out of reach of children and pets.
- Do not attempt to disassemble or modify the candles or charging station.
- Use only the provided USB-C cable and a compatible USB power adapter for charging.
- Do not mix old and new batteries in the remote control.

Warranty and Support

Homemory products are thoroughly tested before sale. If you encounter any issues or have questions regarding your Rechargeable Flameless Taper Candles, please contact our customer support team. We are committed to providing assistance and ensuring your satisfaction.

For support, please refer to the contact information provided with your purchase or visit the official Homemory website.

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

