

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Eufy](#) /

› [Anker Eufy Security Motion Sensor T8910 Instruction Manual](#)

Eufy T8910

Anker Eufy Security Motion Sensor T8910 Instruction Manual

Model: T8910

1. PRODUCT OVERVIEW

The Eufy Security Motion Sensor is designed to detect movement within its coverage area, providing enhanced security for your home. This device integrates with your Eufy Security HomeBase system to alert you to detected activity.

広い動作検知範囲

100°の視野で最大9m先までの動きを検知する
ことができ、不審者の侵入検知や徘徊防止など
に役立ちます。



※ 本製品を使用するには、Eufy Security HomeBase 2 または HomeBase S380
と接続する必要があります。

Image: The Eufy Security Motion Sensor detecting a person entering a room, highlighting its wide detection range.

2. PACKAGE CONTENTS

- Motion Sensor Body
- Mounting Screws (x3)
- CR123A Lithium Battery
- Anti-theft Sticker
- 3M Double-Sided Tape
- Mounting Bracket
- Quick Start Guide
- Customer Support Card

3. SETUP AND INSTALLATION

Important Note: HomeBase Connection Required

To use this product, it must be connected to a separately sold Eufy Security HomeBase 2 or HomeBase S380. The motion sensor cannot function independently.

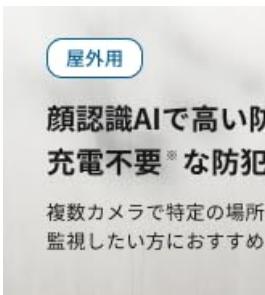


Image: The Eufy Security Motion Sensor shown next to a Eufy HomeBase, illustrating the required connection.

Easy Installation

The motion sensor is designed for simple, tool-free installation. Attach the included double-sided tape to the back of the mounting bracket and place it in your desired location. Alternatively, use the provided screws for a more permanent fixture.

Warning: This product is not waterproof. Please use it indoors only.

ご注意

1. 本製品を使用するには、Eufy Security HomeBase 2 またはHomeBase S380 と接続する必要があります。
2. Eufy Securityアプリのセキュリティモードの設定から、在宅・外出モード時の通知と警報のオンオフ設定ができます。



※ Eufy Security HomeBase 2 またはHomeBase S380 は別売りです。

Image: A user applying double-sided tape to the mounting bracket and then installing the sensor on a wall, demonstrating easy setup.

4. OPERATING INSTRUCTIONS

Wide Motion Detection Range

The sensor offers a 100° field of view and can detect movement up to 9 meters away. This wide coverage is effective for detecting intruders and preventing unauthorized access.

工事なしで簡単設置

取り付けマウントの裏に付属の両面テープを貼り付けて、お好きな場所に簡単に設置できます。



Image: A visual representation of the motion sensor's wide detection range, covering a 100-degree angle up to 9 meters.

Adjustable Detection Sensitivity

You can adjust the detection sensitivity of the sensor through the Eufy Security app to suit your specific environment and needs.

調整可能な検知感度

Eufy Securityアプリで、ご使用の環境に合わせてセンサーの検知感度を調整することができます。



Image: A close-up of the Eufy Security Motion Sensor, highlighting its compact design and indicating adjustable sensitivity.

Alarm Function

When motion is detected, the connected HomeBase will sound an alarm of up to 100dB, and you will receive notifications via the Eufy Security app. You can configure notification and alarm settings for 'Home' and 'Away' modes within the app's security mode settings.

アラート機能

動作を検知するとHomeBaseが最大100dBの警報を鳴らし、Eufy Securityアプリの通知機能でお知らせします。



※ Eufy Securityアプリのセキュリティモードの設定から、在宅・外出モード時の通知と警報のオンオフ設定ができます。

Image: The Eufy HomeBase emitting an alarm sound, with a smartphone showing a notification for motion detection, demonstrating the alarm feature.

5. BATTERY LIFE AND REPLACEMENT

The included CR123A lithium battery provides up to 2 years of battery life. Battery life may vary depending on usage environment and methods.

To replace the battery, carefully open the sensor casing, remove the old CR123A battery, and insert a new one, ensuring correct polarity. Close the casing securely.

6. TROUBLESHOOTING

- Sensor not detecting motion:** Check battery level in the Eufy Security app. Ensure the sensor is placed within its effective detection range and not obstructed. Adjust sensitivity settings if necessary.
- No notifications:** Verify the sensor is connected to the HomeBase and the HomeBase is online. Check app notification settings and your smartphone's notification permissions for the Eufy Security app.
- False alarms:** Adjust the detection sensitivity in the Eufy Security app. Ensure the sensor is not placed in an area with frequent environmental changes (e.g., direct sunlight, drafts, moving curtains).
- Connection issues:** Ensure the HomeBase is powered on and connected to your network. Try restarting both the sensor and the HomeBase. If issues persist, re-pair the sensor with the HomeBase via the Eufy Security app.

7. SPECIFICATIONS

Brand	Eufy
Model Number	T8910
Product Dimensions	5.5 x 2 x 5.5 cm
Item Weight	32 g
Color	White
Battery Type	CR123A Lithium
Max Detection Range	9 meters (30 feet)
Field of View	100°
Mounting Type	Wall Mount

8. WARRANTY AND SUPPORT

This product comes with a 12-month warranty from the date of purchase. For technical support, warranty claims, or further assistance, please contact Eufy customer support through the Eufy Security app or visit the official Eufy website.

Please retain your proof of purchase for warranty purposes.

