



Manuals.plus /

› **INFANS** /

› INFANS Wooden Kids Play Kitchen Playset - Instruction Manual (Model TP10225WH)

## INFANS TP10225WH

# INFANS Wooden Kids Play Kitchen Playset

MODEL: TP10225WH - INSTRUCTION MANUAL

## 1. Introduction

---

Thank you for choosing the INFANS Wooden Kids Play Kitchen Playset. This manual provides essential information for the safe assembly, operation, and maintenance of your new play kitchen. Designed to inspire imaginative play, this playset offers a realistic cooking experience for children aged 3-7 years. Please read these instructions carefully before assembly and retain them for future reference.



Image 1.1: Front view of the INFANS Wooden Kids Play Kitchen Playset.

## 2. Safety Information

Your child's safety is our top priority. This play kitchen is manufactured with high-quality, non-toxic materials and is compliant with U.S. CPSIA & ASTM safety standards.

- **Material Safety:** Made from premium wood and water-based paints, free from BPA, PVC, Phthalates, Lead, Latex, and Formaldehyde.
- **Design Safety:** Features smooth rounded corners to prevent scratches and bumps.
- **Supervision:** Adult supervision is recommended during play to ensure safe use.
- **Age Recommendation:** Suitable for children aged 36 months to 8 years.
- **Stability:** Ensure the playset is assembled correctly and placed on a stable, flat surface to prevent tipping.

## 3. Package Contents

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- 1 x INFANS Wooden Kids Play Kitchen Playset (main unit)
- Multiple Kitchen Accessories (pots, pans, utensils)
- 1 x Instruction Manual
- Assembly Hardware (screws, connectors, etc.)



## KITCHEN UTENSILS INCLUDED

*Image 3.1: Included kitchen utensils and cookware.*

### 4. Assembly Instructions

Assembly is required for this play kitchen. Detailed, step-by-step instructions are included in the package to guide you through the process. While assembly can take approximately 2 hours, following the instructions carefully will ensure a smooth setup.

1. Unpack all components and verify against the package contents list.
2. Organize hardware and panels according to the instruction manual.
3. Follow the numbered steps in the provided instruction booklet. A Phillips screwdriver is typically required.
4. Ensure all screws and connections are securely tightened for stability.

- Optional: The playset includes adjustable leg risers to modify the height as your child grows. Install or remove these as desired during assembly.

## 5. Operating Instructions

The INFANS Play Kitchen offers various interactive features for an engaging play experience.

- **Stove with Lights & Sounds:** Place a pot or pan on the stove burners to activate realistic cooking sounds and red lights, simulating a hot stovetop.
- **Interactive Knobs:** Turn the knobs on the stove and oven for clicking sounds, enhancing the realistic feel.
- **Ice Dispenser:** Press the button on the refrigerator's ice dispenser to activate sounds and lights.
- **Detachable Sink:** The stainless steel sink can be removed for easy cleaning.
- **Storage Areas:** Utilize the refrigerator, microwave, oven, open shelves, and hanging hooks for organizing play food and accessories.



# AUTHENTIC COOKING EXPERIENCE



# INTERACTIVE KNOBS



Image 5.1: Detail of the stove with authentic cooking lights and interactive knobs.



## **WATER DISPENSER WITH INDICATOR LIGHTS**

*Image 5.2: Water dispenser with indicator lights.*



Image 5.3: Various storage options within the play kitchen.

## 6. Maintenance

Regular maintenance will help prolong the life of your play kitchen.

- **Cleaning:** Wipe down all surfaces with a damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Sink:** The detachable sink can be washed with mild soap and water. Ensure it is dry before placing it back into the playset.
- **Hardware:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or damage to the wood.

## 7. Troubleshooting

If you encounter any issues with your play kitchen, please refer to the following common solutions:

Problem	Possible Cause	Solution
Stove lights/sounds not working	Batteries are low or incorrectly installed.	Check and replace batteries. Ensure they are inserted with correct polarity.
Ice dispenser not making sound/light	Batteries are low or connection issue.	Check and replace batteries. Ensure the button mechanism is not obstructed.
Doors or drawers do not close properly	Hinges or latches are misaligned or damaged.	Inspect hinges and latches. Adjust or re-secure if loose. Contact support if damaged.
Playset feels wobbly	Loose connections or uneven surface.	Re-tighten all assembly screws. Ensure the playset is on a flat, level surface.

## 8. Specifications

- **Model Number:** TP10225WH
- **Product Dimensions:** 40" (L) x 14" (W) x 43.5" (H)
- **Item Weight:** 8.8 pounds
- **Material:** MDF + PP + Stainless Steel
- **Recommended Age:** 36 months - 8 years
- **Manufacturer:** INFANS

## RECOMMENDED AGE

3+



## PRODUCT SIZE

Image 8.1: Detailed product dimensions.

### 9. Warranty and Support

For warranty information, product support, or to order replacement parts, please contact INFANS customer service. Refer to the contact details provided on the product packaging or the official INFANS website. Please have your model number (TP10225WH) and purchase date available when contacting support.