

[Manuals.plus](#) /

› [TOPELOTEK](#) /

› TOPELOTEK KC6 Kids Instant Print Camera Instruction Manual

TOPELOTEK KC6

TOPELOTEK KC6 Kids Instant Print Camera Instruction Manual

Model: KC6 | Brand: TOPELOTEK

INTRODUCTION

The TOPELOTEK KC6 Kids Instant Print Camera is designed to provide an engaging and creative photographic experience for children aged 3-12. This digital camera captures photos and videos, offering instant black and white prints, along with various fun features like digital zoom, special effects, and games. Its user-friendly design and durable construction make it suitable for young photographers.

WHAT'S IN THE BOX

- TOPELOTEK KC6 Instant Print Camera x 1
- USB Type-C Charging Cable x 1
- Instant Print Paper Rolls x 3
- Lanyard x 1
- User Manual x 1



Image: The TOPELOTEK KC6 Kids Instant Print Camera in pink, shown with its accessories: three rolls of print paper, a USB-C charging cable, and a colorful lanyard.

SETUP

1. Charging the Camera

Before first use, fully charge the camera using the provided USB Type-C cable. Connect the cable to the camera's charging port and a compatible USB power source. The charging indicator light will show the charging status.

2. Installing Print Paper

1. Open the paper slot cover on the side of the camera.
2. Insert a roll of thermal print paper into the compartment, ensuring the paper feeds out from the top.

3. Pull a small amount of paper out, extending it slightly beyond the slot.
4. Close the paper slot cover securely.

Easy to Use & Install

1

Open the paper slot



2



Ready to load print paper

3



Put print paper into slot

4



Ready for printing

Image: A visual guide demonstrating how to open the paper slot, load the thermal paper roll, and close the cover for printing.

3. Attaching the Lanyard

Thread the lanyard through the designated loop on the camera. This helps prevent accidental drops and makes the camera easy to carry for children.

Your browser does not support the video tag.

Video: This video demonstrates the easy process of loading print paper and attaching the lanyard to the camera, ensuring it's ready for use.

1. Power On/Off

Press and hold the power button (usually located on the top or side) to turn the camera on or off. A welcome screen will appear upon startup.

2. Navigation and Menu

Use the directional buttons (up, down, left, right) and the 'OK' button to navigate through the camera's menu options displayed on the 2.4-inch IPS screen. The menu typically includes Photo, Video, MP3, Playback, Games, and Settings.

Your browser does not support the video tag.

Video: This video provides a quick overview of the camera's interface, showing how to navigate through the main menu and access different functions.

3. Taking Photos

1. Select the 'Photo' mode from the main menu.
2. Frame your shot using the screen.
3. Press the shutter button (usually on top) to capture the image.
4. The camera supports 16x digital zoom, adjustable via the directional buttons.

4. Instant Printing

After taking a photo, you can choose to print it instantly. The camera produces black and white thermal prints. You can also select a previously taken photo from the 'Playback' menu and initiate printing.

Your browser does not support the video tag.

Video: This video demonstrates how to take a photo and instantly print it in grayscale, highlighting the quick printing process.

5. Recording Videos

Switch to 'Video' mode from the main menu. Press the shutter button to start and stop recording. The camera supports 1080p video recording.

6. Special Effects, Stickers, and Frames

Enhance your photos with various built-in special effects, stickers, and frames. These options can be applied before taking a photo or during the editing process in 'Playback' mode.



Image: The camera screen displaying various special effects that can be applied to photos.



Image: The camera screen showing options for adding funny stickers and frames to pictures.

7. Games

The camera includes several pre-installed games for entertainment. Navigate to the 'Games' icon in the main menu to access them.



Image: The camera screen showing a selection of multiple games available for play.

MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures or direct sunlight.
- Ensure the paper compartment is free of debris to prevent paper jams.
- Store the camera in a cool, dry place when not in use.

TROUBLESHOOTING

1. Camera Not Turning On

- Ensure the battery is charged. Connect the camera to a charger and wait a few minutes before attempting to power it on again.

2. Printing Issues

- Check if the paper roll is correctly installed and not jammed.
- Ensure there is enough paper left on the roll.
- Verify print density settings in the camera menu if prints are too light or dark.

3. Poor Image Quality

- Ensure the camera lens is clean and free from smudges.
- Check lighting conditions; optimal lighting improves photo clarity.

SPECIFICATIONS

- **Product Dimensions:** 3.77 x 3.18 x 2.2 inches
- **Item Weight:** 10.4 ounces
- **Model Name:** KC6
- **Battery:** 1 Lithium Polymer battery (included)
- **Screen:** 2.4-inch IPS screen
- **Digital Zoom:** 16x
- **Video Resolution:** 1080p
- **Print Type:** Black and White Thermal Print
- **Storage:** 8GB SD card (included)

WARRANTY AND SUPPORT

For any questions or support regarding your TOPELOTEK KC6 Kids Instant Print Camera, please contact TOPELOTEK customer service. Refer to the packaging or the official TOPELOTEK website for specific warranty details and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question