



[Manuals.plus](#) /

› [Simple Trending](#) /

› Simple Trending Dish Rack Model 59018 Instruction Manual

Simple Trending 59018

Simple Trending Dish Rack Model 59018 Instruction Manual

Model: 59018

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Simple Trending Dish Rack, Model 59018. Please read this manual thoroughly before use to ensure proper functionality and longevity of your product.



Figure 1: Simple Trending Dish Rack, Model 59018, showcasing its capacity with various kitchen items.

2. PRODUCT FEATURES

- **Large Capacity:** Designed to hold multiple plates, bowls, cups, and cutlery, optimizing kitchen counter space. Dimensions: 11.7"D x 16.5"W x 6"H.
- **Durable Construction:** Made from selected steel materials with a high-quality electroplating baking paint process for superior waterproof and rustproof characteristics, ensuring stable storage.
- **Multi-functional Design:** Features integrated storage for cutlery, dishes, and cup holders, accommodating various kitchen utensils including knives, forks, baking molds, and large pots.
- **Upgraded Drainage System:** Includes a taller and longer drain design with 360° rotating drainage, facilitating clean and thorough water channeling directly into the sink, keeping countertops dry.
- **Easy Assembly:** Comes with detailed instructions for straightforward installation.



Figure 2: The multi-functional design allows for organized drying of various kitchenware.

 
3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Main Dish Rack Frame (Steel)
- Drainboard with Adjustable Spout (Plastic)
- Cutlery Holder with Knife Slots (Plastic)
- Cup Holders (Wire, detachable)
- Assembly Instructions



Drainboard

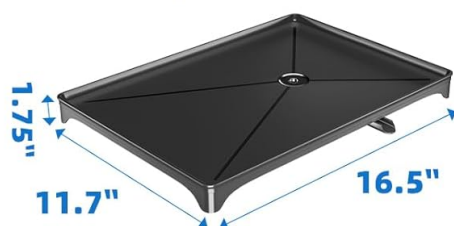

Drain Rack



Figure 3: All components of the Simple Trending Dish Rack, Model 59018.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your dish rack:

1. Place the plastic drainboard on a flat, stable surface.
2. Insert the main steel dish rack frame into the drainboard, ensuring it sits securely.
3. Attach the cutlery holder to the side of the main frame. It can be placed on either side for convenience. The knife block can be inserted into the cutlery holder.

4. Attach the cup holders to the desired side of the main frame.
5. Adjust the drain spout on the underside of the drainboard to direct water flow towards your sink. The spout can rotate 360 degrees.

Your browser does not support the video tag.

Video 1: Assembly demonstration of the Simple Trending Dish Rack, showing how to attach components and adjust the drain spout.

5. OPERATING INSTRUCTIONS

To effectively use your Simple Trending Dish Rack:

- Place plates vertically in the designated slots for optimal drying and stability.
- Bowls and larger items can be placed on the flat sections of the rack.
- Utilize the cutlery holder for forks, spoons, and knives. The knife slots provide secure storage for blades.
- Hang cups on the external cup holders to allow for air circulation and quick drying.
- Ensure the adjustable drain spout is positioned over your sink to allow water to drain directly, preventing countertop puddles.

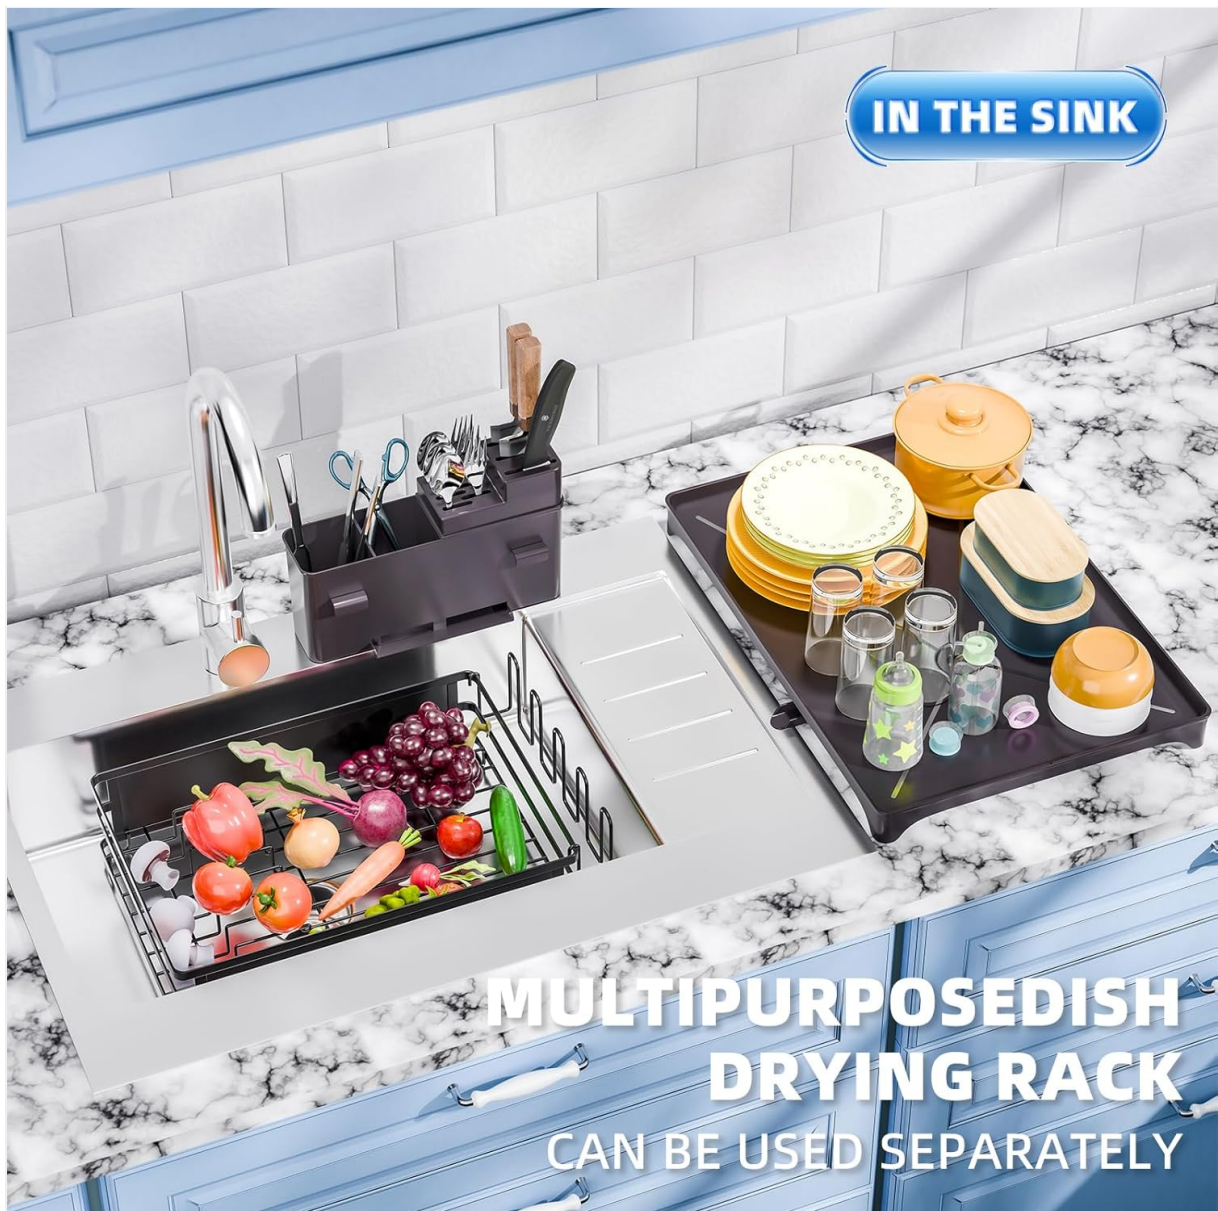 


Figure 4: Example of the dish rack's flexible placement for efficient drainage.

Your browser does not support the video tag.

Video 2: Demonstration of the automatic drainage feature, showing water flowing directly into the sink.

6. MAINTENANCE

Regular cleaning will maintain the appearance and hygiene of your dish rack:

- **Daily Cleaning:** After each use, ensure all water has drained. Wipe down the drainboard and rack with a soft cloth to prevent water spots and mineral buildup.
- **Weekly Cleaning:** Disassemble the rack components (main frame, drainboard, cutlery holder, cup holders). Wash all parts with warm, soapy water. Rinse thoroughly and dry completely before reassembling.
- **Deep Cleaning:** For stubborn stains or mineral deposits, use a mild descaling solution or a mixture of vinegar and water. Avoid abrasive cleaners or scouring pads, as these can damage the finish.



Fast Automatic Drainage

Wide water outlet
won't leak

360° Rotatable

Can be turned in
3 directions

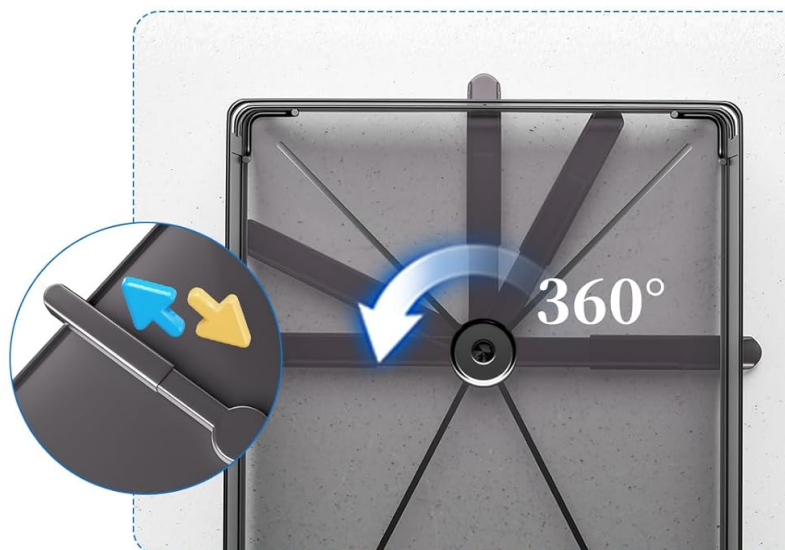 


Figure 5: The 360° rotatable drain spout simplifies maintenance and ensures efficient water removal.

7. TROUBLESHOOTING

If you encounter any issues with your dish rack, refer to the following common solutions:

- **Water not draining properly:**

- Ensure the drain spout is correctly positioned over the sink and not obstructed.
- Check for any debris or food particles blocking the drain hole on the drainboard.
- Verify that the drainboard is level or slightly angled towards the spout for optimal flow.

- **Rack feels unstable:**

- Ensure all components are securely assembled and seated correctly in the drainboard.
- Distribute dishes evenly across the rack to maintain balance.

- **Rust or discoloration:**

- While the rack is rust-resistant, prolonged exposure to standing water or harsh chemicals can affect the finish. Follow weekly and deep cleaning instructions.
- Avoid using abrasive materials that can scratch the protective coating.

8. SPECIFICATIONS

Attribute	Detail
Brand	Simple Trending
Model Number	59018
Material	Plastic, Stainless Steel
Color	Black
Product Dimensions	11.7"D x 16.5"W x 6"H
Item Weight	16 ounces (1 pound)
Mounting Type	Countertop Mount
Special Feature	Adjustable Drain Spout

9. WARRANTY AND SUPPORT

The Simple Trending Dish Rack comes with a one-year warranty. If you encounter any problems or require assistance, please contact Simple Trending customer support via email. Detailed contact information can be found on the product packaging or the official Simple Trending website.

For additional support and product information, visit the [Simple Trending Store](#).