

NOOX NOOX-Keyboard-1

NOOX Bluetooth Keyboard User Manual

Model: NOOX-Keyboard-1

INTRODUCTION

This user manual provides detailed instructions for the NOOX Bluetooth Keyboard, Model NOOX-Keyboard-1. Please read this manual thoroughly before using the product to ensure proper operation and to maximize its lifespan. This keyboard is designed for seamless wireless connectivity with a wide range of devices, offering a comfortable and efficient typing experience.

PRODUCT OVERVIEW

Key Features

- **Excellent Compatibility:** Supports iOS, Android, and Windows systems, making it suitable for Apple iPhone, iPad, iPad Mini, iPad Pro, iPad Air, Samsung, LG, Windows tablets, and smartphones.
- **Lightweight and Portable:** Designed to be lighter and smaller than traditional wireless keyboards, facilitating easy transport without occupying excessive space. Dimensions: 25 x 15 x 0.6 cm; Weight: 180g.
- **Long-lasting Use:** Equipped with a built-in rechargeable lithium battery, allowing for continuous use for over 20 days after a full charge (based on 2 hours of daily use). Features an automatic sleep mode after 10 minutes of inactivity to conserve power; press any key to reactivate.
- **Comfortable Typing:** Utilizes scissor-structure keys and chocolate keycaps for an ergonomic design, providing a quiet and comfortable typing experience across various devices.
- **Stable Bluetooth Connection:** Incorporates Bluetooth 3.0 technology, ensuring a working distance of up to 10 meters. Features a US QWERTY layout with integrated hotkeys for volume control, play/pause, and track navigation. The design includes a brushed front and an ultra-thin, smooth aluminum alloy back.

Package Contents

- NOOX Bluetooth Keyboard
- USB Cable
- User Manual (This Document)

Specifications

Attribute	Value
Product Dimensions	9.84 x 5.91 x 0.24 inches
Item Weight	7.7 ounces
Manufacturer	NOOX
Item Model Number	NOOX-Keyboard-1
Batteries	1 Lithium Polymer batteries required (included)
Connectivity Technology	Bluetooth
Keyboard Description	Multimedia
Special Feature	Ergonomic
Color	Black
Number of Keys	78
Style	Modern

SETUP

Charging the Keyboard

Before initial use, fully charge the keyboard. Connect the provided USB cable to the keyboard's charging port and the other end to a USB power source (e.g., computer, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes 2-3 hours.

Rechargeable Keyboard

Intelligent energy saving, long battery life



2-3 Hours Charge

Built-in rechargeable Li-ion Battery



1 Months standby

168 hours Uninterrupted Work



Image: The keyboard's charging port and indicators for battery life, showing 2-3 hours for a full charge and 1 month standby time.

Bluetooth Pairing Instructions

1. **Power On:** Locate the ON/OFF switch on the keyboard and slide it to the "ON" position. The power indicator light will illuminate briefly.

Bluetooth Connection Steps



Image: Close-up of the keyboard's top right corner, showing the ON/OFF switch and the "Connect" button.

- 2. Activate Pairing Mode:** Press the "Connect" button on the keyboard. The Bluetooth indicator light will begin to flash, indicating that the keyboard is in pairing mode.
- 3. Enable Bluetooth on Your Device:** On your tablet, smartphone, or computer, go to the Bluetooth settings.
- 4. Search and Connect:** In your device's Bluetooth settings, search for available devices. Select "Bluetooth Keyboard" from the list to initiate the connection.
- 5. Confirm Connection:** Once connected, the Bluetooth indicator light on the keyboard will stop flashing and remain solid or turn off, depending on the model. Your device should also confirm the successful pairing.

OPERATING INSTRUCTIONS

Key Functions and Layout

The NOOX Bluetooth Keyboard features a standard US QWERTY layout with additional function keys (hotkeys) for enhanced productivity.



Image: Full view of the NOOX Bluetooth Keyboard, showcasing its compact design and key layout.

- **Function (Fn) Key:** Used in combination with other keys to access multimedia controls and system-specific functions.
- **Multimedia Hotkeys:** Keys such as F7 (Previous Song), F8 (Play/Pause), F9 (Next Song), F10 (Volume Down), F11 (Volume Up) are accessible by pressing Fn + the respective F-key.
- **System-Specific Hotkeys:** Includes keys for Home, Search, Select All, Copy, Cut, and Paste, designed for quick navigation and text manipulation.

Switching Between Operating Systems

The keyboard supports quick switching between iOS, Android, and Windows systems using the Fn key combinations:

- Press **Fn + Q** for Android system.
- Press **Fn + W** for Windows system.
- Press **Fn + E** for iOS system.

Compatible with multiple systems

Quickly switch using Fn+Q/W/E



Image: The keyboard displaying the Fn+Q, Fn+W, and Fn+E key combinations for Android, Windows, and iOS system switching.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the keyboard surface. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Storage:** When not in use for extended periods, store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the keyboard frequently. Charge it when the low battery indicator appears.
- **Avoid Liquids:** Do not expose the keyboard to liquids, as this can cause internal damage.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Keyboard does not power on.	Ensure the ON/OFF switch is in the "ON" position. Charge the keyboard for at least 30 minutes.
Keyboard does not connect via Bluetooth.	◦ Ensure Bluetooth is enabled on your device. ◦ Make sure the keyboard is in pairing mode (Bluetooth indicator flashing). Press the "Connect" button if it's not. ◦ Delete previous "Bluetooth Keyboard" connections from your device's Bluetooth list and try pairing again. ◦ Ensure the keyboard is within the 10-meter operating range. ◦ Recharge the keyboard.
Keys are not responding or typing incorrectly.	◦ Ensure the keyboard is fully charged. ◦ Verify that the correct operating system mode (Fn+Q/W/E) is selected for your device. ◦ Reconnect the Bluetooth connection. ◦ Restart your device and the keyboard.
Keyboard frequently disconnects.	◦ Ensure the keyboard is fully charged. ◦ Move the keyboard closer to your device to reduce interference. ◦ Avoid placing other wireless devices or large metal objects between the keyboard and your device.

WARRANTY AND SUPPORT

NOOX products are manufactured to high quality standards. For any issues or support inquiries, please contact NOOX customer service through the retailer where the product was purchased or visit the official NOOX brand store on Amazon for further assistance.

Please retain your proof of purchase for warranty claims.

Note: Specific warranty terms and conditions may vary by region and retailer.