

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kikka Boo](#) /

› [KikkaBoo Flip 5-in-1 Baby Tricycle User Manual](#)

Kikka Boo 31006020152

KikkaBoo Flip 5-in-1 Baby Tricycle User Manual

Model: 31006020152

INTRODUCTION

The KikkaBoo Flip 5-in-1 Baby Tricycle is designed to adapt to your child's growth from 1 to 5 years old. This versatile product transforms through five distinct modes: Push Mode, Tricycle, Tricycle without pedals, Balance Bike, and Bike. This manual provides essential information for assembly, operation, maintenance, and safety to ensure a secure and enjoyable experience for your child.

SAFETY INFORMATION

Adult supervision is always required when the KikkaBoo Flip 5-in-1 Baby Tricycle is in use.

- Always ensure the 2-point harness system is securely fastened when your child is seated, especially in Push Mode or Tricycle mode.
- Regularly inspect all parts for wear, damage, or loose connections before each use.
- Ensure all locking mechanisms are engaged when adjusting the tricycle's configuration.
- Do not use the tricycle on public roads, near motor vehicles, or on steep inclines.
- The maximum recommended weight for this product is 25 kilograms.

SETUP AND ASSEMBLY

The KikkaBoo Flip tricycle requires assembly. Please follow these steps carefully. Assembly typically takes approximately 10 minutes.

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all parts are present according to the packing list (not provided in this document, refer to product packaging).
2. **Frame Assembly:** Connect the main frame components. Ensure all connections click into place or are securely tightened with the provided tools (if applicable).
3. **Wheel Attachment:** Attach the front and rear wheels. The front wheel is rubber, and the rear wheels are polyurethane, designed for stability and smooth rides.
4. **Handlebar Installation:** Install the front handlebar. It is adjustable to accommodate your child's growth.
5. **Seat Installation:** Install the seat. The seat height is adjustable.

6. **Pedal Attachment (for Tricycle Mode):** If using in Tricycle mode, attach the pedals to the front wheel. These pedals are removable for other modes.
7. **Rear Handlebar (for Push Mode):** For Push Mode, attach the 3-position adjustable rear handlebar. This allows parents to control the tricycle.
8. **Safety Harness:** Ensure the 2-point harness system is correctly installed and functional.



Image: The KikkaBoo Flip 5-in-1 Baby Tricycle shown in its assembled form, including the push mode, and its packaging. This illustrates the product's versatility and initial appearance.



5IN1 MULTI-PURPOSE KID TRICYCLE



For kids from
1 to **5** years

Image: A visual representation of the five transformation modes: Push Mode, two Tricycle configurations, Balance Bike, and Bike. This diagram helps in understanding the product's multi-purpose design.

OPERATING MODES AND ADJUSTMENTS

The KikkaBoo Flip is designed for various stages of your child's development.

1. Push Mode (Approx. 12 months+)

In this mode, the child is secured with the harness, and the parent controls direction and movement using the adjustable rear handlebar. Pedals are typically removed or disengaged, and the child's feet can rest on footrests (if available, refer to product design).



Image: A parent guiding a child in the Push Mode configuration of the tricycle, demonstrating parental control and child safety.

2. Tricycle Mode (With Pedals)

Once your child is ready to pedal, attach the pedals. The rear handlebar can remain attached for parental assistance or removed for independent riding. Ensure the child can comfortably reach the pedals and the ground.

3. Tricycle Mode (Without Pedals)

This mode allows the child to propel themselves using their feet, similar to a balance bike, but with three wheels for added stability. Remove the pedals for this configuration.

4. Balance Bike Mode

Transform the tricycle into a balance bike by removing the pedals and adjusting the rear wheels closer together (if applicable to the model's transformation). This mode helps children develop balance and coordination before transitioning to a two-wheeled bicycle.

A TRICYCLE THAT **NEVER DISAPPOINTS**



Modern
design



Durable
construction



Removable
pedals



Adjustable
handlebar



Image: The tricycle shown in a state of transformation, illustrating how it converts from a three-wheeled setup to a two-wheeled balance bike, highlighting its smart design.

5. Bike Mode

This is the final stage, where the product functions as a two-wheeled bicycle, typically without the parental push handle. Ensure the child has mastered balancing and pedaling.

Adjustments

- **Front Handlebar:** The front handlebar is adjustable in height. Loosen the locking mechanism, adjust to the desired height for your child's comfort and control, and then securely tighten.
- **Seat Height:** The seat height can be adjusted to ensure your child's feet can comfortably touch the ground in balance bike or bike modes, or reach the pedals in tricycle mode. Loosen the seat clamp, adjust, and re-tighten.
- **Rear Handlebar:** The parental rear handlebar has 3 adjustable positions for comfortable pushing. Adjust by pressing

the release button and sliding to the desired height.

ASIENTO Y ASA AJUSTABLE

Para vivir cómodamente
tus aventuras diarias



Image: The KikkaBoo Flip tricycle with visual cues showing the adjustability of both the seat and the handlebars, ensuring comfort for daily adventures.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your KikkaBoo Flip tricycle.

- **Cleaning:** Wipe down the frame and components with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners. Dry thoroughly after cleaning.
- **Inspection:** Periodically check all bolts, screws, and fasteners to ensure they are tight. Inspect wheels for wear and tear. Ensure the harness system is intact and functional.
- **Storage:** Store the tricycle in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.

TROUBLESHOOTING

If you encounter any issues with your KikkaBoo Flip tricycle, please refer to the following common solutions:

- **Difficulty Adjusting Components:** Ensure all locking mechanisms are fully disengaged before attempting to adjust

the seat, handlebars, or parental handle. Do not force adjustments.

- **Wobbly Wheels:** Check that all wheel axles are securely fastened. If a wheel is damaged, contact customer support for replacement parts.
- **Harness Issues:** Ensure the harness straps are not twisted and the buckle engages correctly. Adjust strap length for a snug fit.

For issues not covered here, or if problems persist, please contact KikkaBoo customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	70 x 45 x 91 cm
Product Weight	5.7 kg
Recommended Age	12 months - 5 years
Maximum Weight Capacity	25 Kilograms
Model Number	31006020152
Material Type(s)	Alloy Steel, Polyurethane
Assembly Required	Yes
Batteries Required	No

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact KikkaBoo customer service through their official website or the retailer from whom the product was purchased. Please have your model number (31006020152) and proof of purchase available when contacting support.

