

Eurolux ELCJ-4400

Eurolux ELCJ-4400 Hands-Free Electric Citrus Juicer Instruction Manual

Model: ELCJ-4400

1. INTRODUCTION

Thank you for choosing the Eurolux ELCJ-4400 Hands-Free Electric Citrus Juicer. This appliance is designed to provide fresh, delicious citrus juice with minimal effort. To ensure safe and efficient operation, please read this instruction manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the juicer.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always ensure the juicer is properly assembled before operation.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Eurolux Electric Citrus Juicer:



Image 1: The Eurolux ELCJ-4400 Electric Citrus Juicer in operation, showing an orange on the reamer and a glass of freshly squeezed juice.

Components:

1. **Dust Cover:** Protects the reamer when not in use.
2. **Large Reamer:** For larger citrus fruits like oranges and grapefruits.
3. **Small Reamer:** For smaller citrus fruits like lemons and limes.
4. **Pulp Filter:** Separates pulp and seeds from the juice.
5. **Juice Collector:** Gathers the extracted juice.
6. **Spout with Drip-Stop:** For dispensing juice and preventing drips.
7. **Motor Base:** Contains the motor and control button.
8. **Power Cord:** For connecting to an electrical outlet.



Image 2: Detailed view of key features including the versatile cone design, large juice reservoir, heavy-duty motor, durable pulp filter, and hands-free operation.

4. SETUP AND ASSEMBLY

Before first use, wash all removable parts (reamers, pulp filter, juice collector, dust cover) in warm soapy water, rinse thoroughly, and dry. The motor base should only be wiped with a damp cloth.

1. Place the motor base on a stable, flat, and dry surface.
2. Insert the juice collector onto the motor base, ensuring it is seated correctly.
3. Place the pulp filter into the juice collector.
4. Select the appropriate reamer size for your citrus fruit. For smaller fruits like lemons and limes, use the small reamer. For larger fruits like oranges and grapefruits, use the large reamer. Place the chosen reamer onto the shaft in the center of the pulp filter.
5. Ensure the spout is in the open position if you wish to dispense juice directly, or closed if you want to collect it in the reservoir.
6. Plug the power cord into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

The Eurolux ELCJ-4400 is designed for hands-free, effortless juicing.



Image 3: A visual guide demonstrating the simple three-step process of slicing citrus, placing it on the reamer, and enjoying the juice.

1. **Prepare the Fruit:** Wash your citrus fruit thoroughly. Cut the fruit in half across the middle.
2. **Place the Fruit:** Place one half of the citrus fruit, cut-side down, onto the reamer.
3. **Start Juicing:** Gently press the fruit down onto the reamer. The juicer will automatically start when pressure is applied and stop when pressure is released. For continuous juicing, press the power button on the motor base.
4. **Collect Juice:** Ensure the spout is open to allow juice to flow directly into a glass or container. If the spout is closed, juice will collect in the juice collector.
5. **Adjust Pulp:** The single pulp filter allows for some control over pulp. For less pulp, ensure the filter is clean. For more pulp, some pulp may pass through.
6. **Finish Juicing:** Once all juice is extracted from one half, remove it and repeat with the remaining fruit halves.

Hands free
**PRESS ONE
BUTTON**

Experience pure
flavour instantly

Effortless Fresh Juice
Every Time



Image 4: The juicer operating with a single button press, illustrating the hands-free functionality and juice extraction.

The heavy-duty motor ensures efficient extraction, maximizing juice yield from each fruit.

Maximize Every Drop

ZERO MESS ZERO STRESS

No citrus wasted. Get
all the juice, no mess,
no stress



Image 5: Demonstrates efficient juice extraction with minimal mess, showing the juicer dispensing juice into a glass.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your juicer. Always unplug the appliance before cleaning.

Zero Cleanup Hassle

EASY CLEANUP EVERY TIME

Dishwasher-safe parts. Clean in a snap, more time to enjoy.



**Dishwasher
safe**



Image 6: Illustrates the ease of cleaning, showing disassembled juicer parts being rinsed and highlighting that parts are dishwasher safe.

Cleaning Steps:

1. Unplug the juicer from the power outlet.
2. Disassemble all removable parts: dust cover, reamers, pulp filter, and juice collector.
3. Rinse all removable parts under running water to remove any large pulp or seed residue.
4. The removable parts are dishwasher safe. Alternatively, wash them by hand using warm soapy water and a soft brush or sponge. Rinse thoroughly and dry completely before reassembling or storing.
5. Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
6. Ensure all parts are dry before storing the juicer.

7. TROUBLESHOOTING

If you encounter issues with your Eurolux ELCJ-4400 juicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Juicer does not start	Not plugged in; Power outage; Incorrect assembly; Insufficient pressure on fruit.	Check power connection; Verify power supply; Ensure all parts are correctly assembled; Apply gentle but firm pressure on the fruit.
Low juice yield	Fruit not fresh; Fruit too hard; Reamer not suitable for fruit size; Not enough pressure.	Use fresh, ripe citrus; Ensure fruit is at room temperature; Use the correct reamer size; Apply consistent pressure.
Excessive pulp in juice	Pulp filter clogged; Fruit pressed too hard.	Clean the pulp filter thoroughly; Apply moderate pressure.
Juicer stops during operation	Overload protection activated; Overheating.	Remove fruit, unplug, and let the unit cool down for 15-20 minutes before restarting. Reduce load.

If the problem persists after attempting these solutions, please contact Eurolux customer support.

8. SPECIFICATIONS

- **Brand:** Eurolux
- **Model Name:** ELCJ-4400
- **Color:** Gray
- **Product Dimensions:** 6"D x 7"W x 12"H
- **Item Weight:** 4.84 pounds
- **Power Source:** Corded Electric
- **Blade Material:** Stainless Steel
- **Special Features:** Hands Free, Overheat Protection, Powerful Motor, Pulp Control, Quiet Motor
- **Product Care Instructions:** Dishwasher Safe (removable parts), Hand Wash Only (motor base)
- **UPC:** 042796440028

9. WARRANTY AND SUPPORT

Eurolux is committed to providing quality products and customer satisfaction. This product is covered by a manufacturer's warranty against defects in material and workmanship under normal household use. Please refer to the warranty card included with your purchase for specific terms and conditions, or visit the official Eurolux website for detailed warranty information and customer support contact details.

For assistance, troubleshooting, or to inquire about replacement parts, please contact Eurolux customer service. Keep your purchase receipt as proof of purchase for warranty claims.

Eurolux Official Website: [Visit the Eurolux Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question