

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image LED Word Clock Pro User Manual

Sharper Image 1018476

Sharper Image® LED Word Clock Pro User Manual

Model: 1018476 | Brand: Sharper Image

INTRODUCTION

The Sharper Image® LED Word Clock Pro offers a unique and modern way to display time. Instead of traditional numbers, it spells out the time in words, making it a distinctive addition to any home or office. This manual provides detailed instructions for setting up, operating, and maintaining your new word clock.

PRODUCT FEATURES

- **Intuitive Word Display:** Tells time naturally using easy-to-read, intuitive wording.
- **Red 5-Minute Alerts:** Text turns red 5 minutes before each hour, providing a visual cue to stay on time.
- **Dimmable Light:** Adjustable illumination settings for optimal visibility in various lighting conditions.
- **Modern Design:** Sleek and sophisticated design that complements contemporary decor.
- **Versatile Display Options:** Suitable for desks, nightstands, or wall mounting using the built-in mount.

SHARPER IMAGE®



WORD CLOCK PRO



RED FIVE ALERT



DIMMABLE LEDS



WALL MOUNT



MOUNTABLE

Figure 1: Key features of the Sharper Image LED Word Clock Pro.

PACKAGE CONTENTS

Please ensure all items are present in the package:

- 1 x Sharper Image® LED Word Clock Pro
- 1 x USB-C Cable

Note: A USB power adapter (brick) is not included and must be supplied by the user (DC 5V 1A recommended).

SETUP

1. **Power Connection:** Connect the provided USB-C cable to the clock's power input port. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) and then into a wall outlet. The clock will illuminate.

2. **Battery Backup (Optional):** For time retention during power outages, insert 2 x AA batteries (not included) into the battery compartment located on the back of the clock. Note that the display will not illuminate when running on battery power alone.
3. **Placement:** Place the clock on a flat, stable surface such as a desk or nightstand. Alternatively, use the integrated keyhole slot on the back to mount the clock securely on a wall.

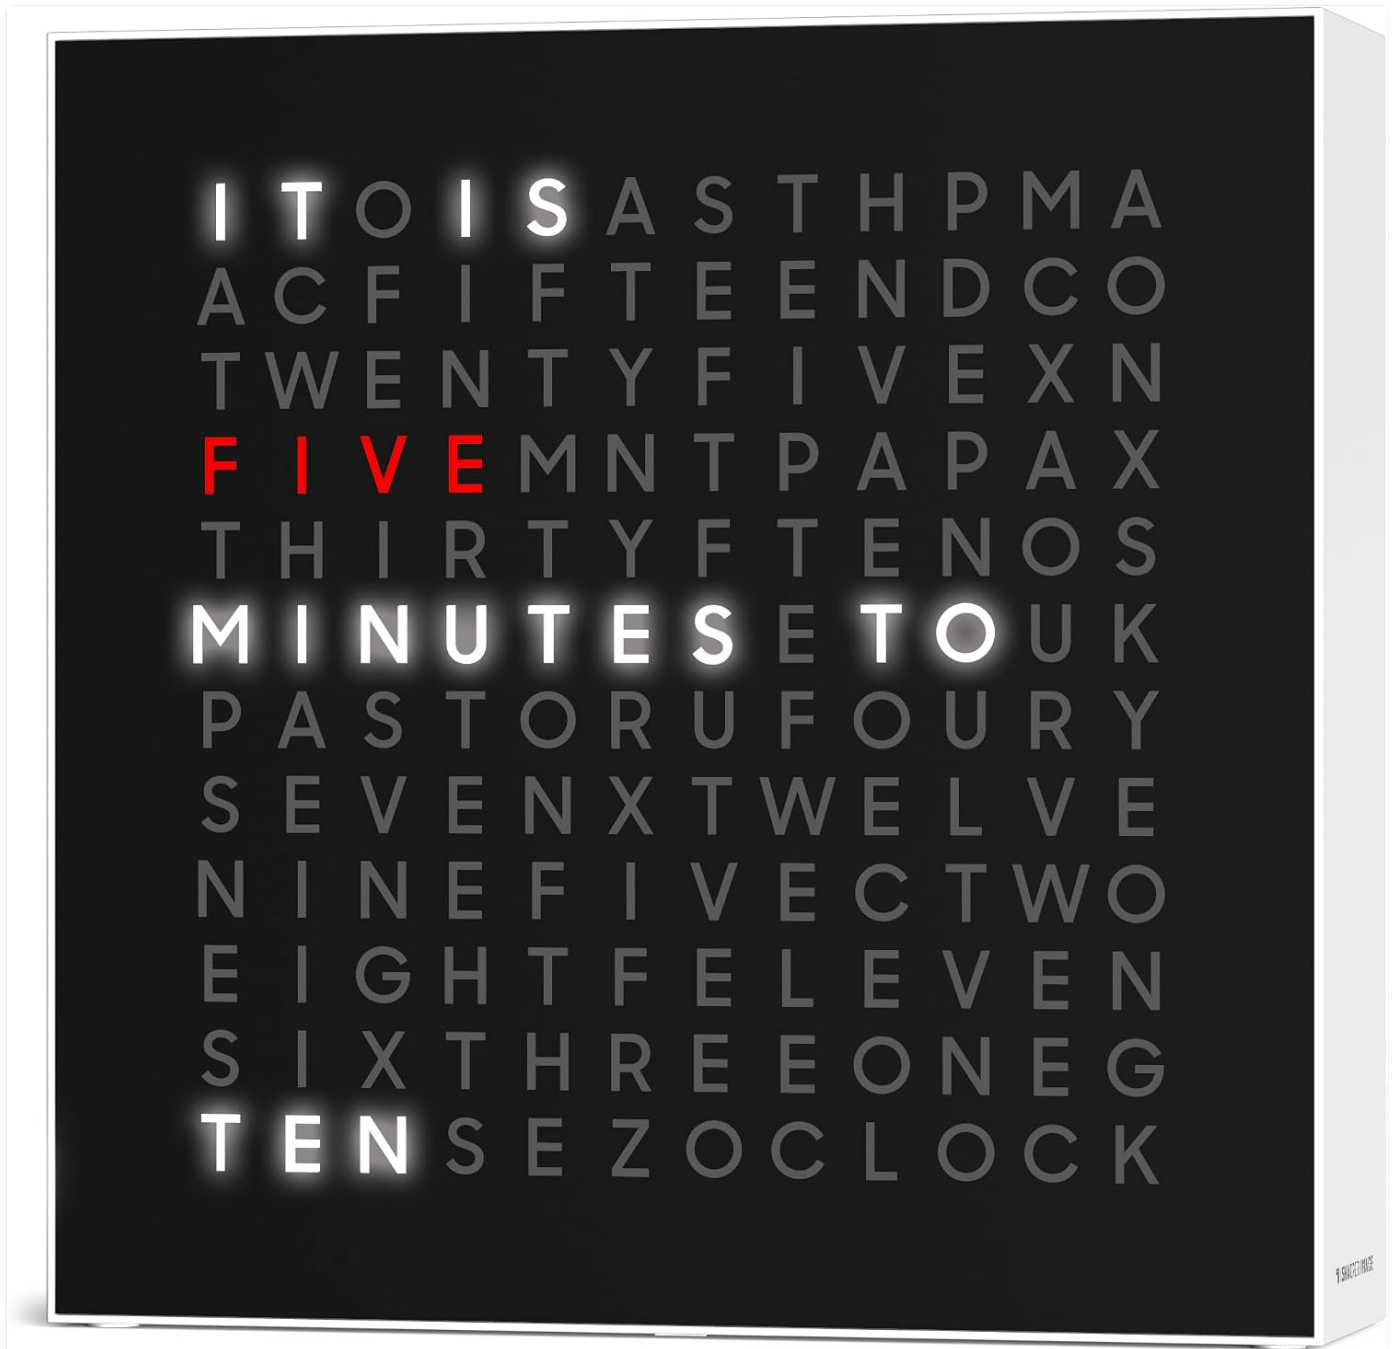


Figure 2: The LED Word Clock Pro in operation.

OPERATING INSTRUCTIONS

1. Setting the Time:

Locate the '+' and '-' buttons on the side or back of the clock. Press the '+' button to advance the time in 5-minute increments. Press the '-' button to decrease the time in 5-minute increments. Continue pressing until the correct time is displayed. The clock updates in 5-minute intervals.

2. Adjusting Brightness (Dimmable Light):

The clock features multiple brightness levels. The brightness adjustment button is typically located near the time

setting buttons, sometimes behind the battery door. Press this button repeatedly to cycle through the available brightness settings until your desired illumination is achieved.

3. Red 5-Minute Alert:

Five minutes before each hour, the words indicating the time will illuminate in red to provide an advanced alert. For example, at 5:55, the clock will display "IT IS FIVE MINUTES TO SIX" with "FIVE MINUTES" in red.



Figure 3: Red 5-Minute Alert in action.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe the surface of the clock. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Storage:** If storing the clock for an extended period, disconnect it from the power source and remove any batteries. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not light up.	No power, loose connection, faulty adapter.	Ensure the USB-C cable is securely connected to both the clock and the power adapter. Verify the power adapter is plugged into a working outlet. Try a different USB power adapter.
Time is incorrect.	Time not set correctly, power interruption.	Adjust the time using the '+' and '-' buttons. If power was interrupted, ensure backup batteries are installed or reset the time.
Display is too bright/dim.	Brightness setting needs adjustment.	Press the brightness adjustment button to cycle through the dimmable light settings.
Clock updates only every 5 minutes.	This is normal operation.	The clock is designed to display time in 5-minute intervals, not second-by-second. This is not a malfunction.

SPECIFICATIONS

Brand	Sharper Image
Model Number	1018476
Color	Black
Display Type	LED
Product Dimensions	9.45"W x 9.45"H
Item Weight	1.87 pounds
Power Source	Corded Electric (USB-C)
Material	Plastic
Mounting Type	Wall Mount
Batteries Required	2 x AA (for backup, not included)
UPC	840397505425

WARRANTY AND SUPPORT

The Sharper Image® LED Word Clock Pro is backed by a**90-day manufacturer warranty**. For any questions, issues, or support inquiries, please contact the manufacturer or seller through the platform where the product was purchased for a quick resolution.

For further assistance, please refer to the official Sharper Image website or contact their customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9WRK1M8>

More documents and user manuals: <https://manuals.plus/>