

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LAREX](#) /

› [LAREX BB007H-D Electric Baby Swing Instruction Manual](#)

LAREX BB007H-D

LAREX BB007H-D Electric Baby Swing Instruction Manual

Model: BB007H-D | Brand: LAREX

IMPORTANT SAFETY WARNINGS

FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

- This product is not for sleep or unsupervised use. Stay near and watch baby during use.
- Never leave infant unattended.
- Never use on soft surfaces (bed, sofa, cushion), as the seat may tip over and cause suffocation.
- ALWAYS use restraints. Adjust to fit snugly.
- NEVER lift or carry baby in the product.
- STOP using the product when the baby starts trying to sit up or has reached 9KG (approximately 20 lbs), whichever comes first.
- The upright position is only for children who have developed enough upper body control to sit up without tipping forward.
- ALWAYS place the product on the floor. Never use on any elevated surface.
- If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

PRODUCT OVERVIEW

Key Features

- **5 Swing Speeds:** Emulates parents' natural side-to-side sway to comfort your baby.
- **Dual Control:** Operate easily with the integrated touch panel or the included remote control.
- **Timer Settings:** Choose from 8, 15, or 30-minute automatic shut-off options.
- **3-Point Safety Harness:** Ensures your baby is securely fastened.
- **1 Seat Position:** Designed for optimal infant comfort.
- **Power Source:** Operates via plug-in power (AC adapter included). Note: This swing is not battery-powered for its main functions.

- **Capacity:** Suitable for babies 0-6 months or up to 20 lbs.
- **Portability:** Easy to assemble, move, and compact for convenient carrying.
- **Comfort & Hygiene:** Features a soft, breathable, and machine-washable cushion.
- **Audio Options:** Includes 10 preset melodies and Bluetooth connectivity to play your own music.

Components

The LAREX BB007H-D Electric Baby Swing includes the main swing unit, a removable headrest, a soft cushion, a 3-point safety harness, and a remote control.



This image shows the complete LAREX BB007H-D Electric Baby Swing, highlighting its compact design and comfortable seating area.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Verify all parts are present according to the packing list.

2. **Base Assembly:** Place the base unit on a flat, stable surface.
3. **Seat Attachment:** Align the seat unit with the base and securely attach it. Ensure the locking mechanism is engaged by pushing the button down to lock.
4. **Power Connection:** Connect the power adapter to the swing's power port and then to a standard wall electrical outlet.
5. **Safety Check:** Before placing your baby in the swing, ensure all connections are secure and the swing operates correctly.

5 Speed Swing Modes



⚠ Push the button up to unlock before using the swing.



This product is not for sleep or unsupervised use.

This image illustrates the unlock (up) and lock (down) mechanism located at the base of the swing, essential for both operation and

disassembly.

This video demonstrates the assembly process and key features of the LAREX Baby Swing, including placing the baby, using the harness, and operating controls.

OPERATING INSTRUCTIONS

Placing Your Baby

1. Ensure the swing is on a flat, stable surface and the locking mechanism is engaged (button pushed down).
2. Gently place your baby in the seat.
3. Secure the 3-point safety harness snugly around your baby.

Panel & Remote Control



10 preset melodies
Bluetooth Enabled

0-6 Months | Up to 20 Pounds



Time Settings

8
min

15
min

30
min



This product is not for sleep or unsupervised use.

This image shows a baby secured in the swing, demonstrating the use of the remote control for convenient operation.

Using the Control Panel

The control panel is located on the base of the swing. Each button controls a specific function:

- **Power On/Off:** Press the power button to turn the swing on or off.
- **Swing Speed:** Adjust between 5 swing speeds using the dedicated speed control dial.
- **Timer:** Select a timer setting (8, 15, or 30 minutes) for automatic shut-off.

- **Volume Control:** Use the '+' and '-' buttons to adjust the volume for music or sounds.
- **Music/Sounds:** Cycle through 10 preset melodies or connect via Bluetooth to play your own audio.

Panel Features



This product is not for sleep or unsupervised use.

This image provides a detailed look at the swing's control panel, labeling each button for easy identification and use.

Using the Remote Control

The remote control offers convenient operation from a distance. All functions available on the control panel can be accessed via the remote control.

MAINTENANCE

Cleaning the Fabric

The soft cushion is machine washable for easy cleaning:

1. Detach the cushion from the swing frame.
2. Machine wash on a gentle cycle with mild detergent.
3. Air dry thoroughly before reattaching to the swing.

Easy to Take Off and Clean



Soft & Breathable
Cushion



Machine
Washable



This product is not for sleep or unsupervised use.

This image demonstrates the ease of cleaning the swing's cushion, highlighting its machine-washable feature.

Frame Cleaning

Wipe the frame and plastic components with a damp cloth and mild soap. Do not use abrasive cleaners.

Storage

For convenient storage or transport, the swing can be easily taken apart:

1. Disconnect the power adapter.
2. Unlock the seat from the base (push button up).
3. Store in a cool, dry place.

Easy Assembly and Storage



This product is not for sleep or unsupervised use.

This image shows how the swing can be quickly taken apart for convenient storage or transport.

TROUBLESHOOTING

Swing Not Operating

- Ensure the power adapter is securely plugged into both the swing and a working electrical outlet.
- Check if the swing's power button is pressed.
- Verify the seat is properly locked into the base.

No Sound/Music

- Check the volume level on both the control panel and the remote control.
- If using Bluetooth, ensure your device is properly paired and the volume is up on both the device and the swing.
- Cycle through the preset melodies to confirm functionality.

Swing Movement is Irregular

- Ensure the swing is placed on a completely flat and stable surface.
- Verify the baby's weight does not exceed the maximum limit (20 lbs).
- Check for any obstructions preventing smooth movement.

SPECIFICATIONS

Feature	Detail
Model Number	BB007H-D
Brand	LAREX
Color	Dark Gray
Product Dimensions	26.5"D x 24.5"W x 28"H
Frame Material	Aluminum
Item Weight	7 pounds
Power Source	Plug-in (AC Adapter)
Battery Requirement	1 Lithium Ion battery (for remote, included)
Recommended Age/Weight	0-6 months or up to 20 lbs
Assembly Required	Yes
Portability	Yes

WARRANTY AND SUPPORT

For warranty information or technical support, please contact LAREX customer service. Refer to the product packaging or the official LAREX website for specific contact details and warranty terms.

