

[Manuals.plus](#) /

› [WEEME](#) /

› WEEME Professional Hair Clippers and Trimmers Set User Manual

WEEME SZX3SET

WEEME Professional Hair Clippers and Trimmers Set User Manual

Model: SZX3SET

IMPORTANT SAFETY INFORMATION

Always unplug the device before cleaning. Do not use the product while sleeping or unconscious. Keep the product out of reach of children. Be cautious when handling the blades to avoid injury.

Actual product packaging and materials may contain more and different information than what is shown on our website.

We recommend that you do not rely solely on the information presented and that you always read labels, warnings, and directions before using or consuming a product.

PRODUCT OVERVIEW

The WEEME Professional Hair Clippers and Trimmers Set is a 3-in-1 cordless grooming kit designed for precision hair cutting and trimming. This set includes a main hair clipper, a detail trimmer, and a foil shaver, along with various accessories to achieve different hair lengths and styles.



Image: Complete WEEME grooming kit, including the main clipper, detail trimmer, foil shaver, various guide combs, charging cables, cleaning brush, barber cape, and scissors.

Package Contents:

- 1 x Main Hair Clipper
- 1 x Detail Trimmer
- 1 x Foil Shaver
- 11 x Limiting Guide Combs (various sizes)
- USB Charging Cables
- Cleaning Brush
- Barber Cape
- Scissors
- User Manual

SETUP AND CHARGING

Initial Charge:

Before first use, fully charge your WEEME grooming devices. The built-in rechargeable lithium-ion battery provides up to 5 hours of run time per charge, and a full charge typically takes about 2 hours.


1. Connect the USB charging cable to the charging port on the device.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. The LED display will indicate the battery power and charging status. When fully charged, the display will show 100% or a full battery icon.



Image: Close-up view of the WEEME hair clippers connected to a USB charging cable, with the LED display showing battery levels and charging progress. This illustrates the charging process and battery indicators.

Attaching Guide Combs:

1. Select the desired guide comb size. The set includes 11 different sizes.
2. Align the comb with the blade of the clipper/trimmer.
3. Gently push the comb onto the blade until it clicks securely into place.
4. To remove, gently pull the comb away from the blade.

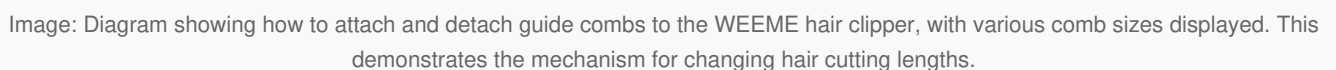

Press the power button located on the device to turn it on or off. The LED display will illuminate when the device is active.

Adjusting Blade Length (Main Clipper):

The main hair clipper features an adjustable taper lever for fine-tuning cutting lengths without changing guide combs. This allows for seamless blending and precise fading.

- Move the taper lever up for a shorter cut (e.g., 0.5mm).
- Move the taper lever down for a longer cut (e.g., 4.5mm).



Image: Illustration of the WEEME hair clipper's adjustable taper lever, demonstrating how to change the blade length from 1.5mm to 4.5mm for precise cutting and blending.

Using the Devices:


Ensure hair is clean and dry before use for optimal results. For best performance, move the clippers against the direction of hair growth.

- **Hair Clipper:** Use for general hair cutting and bulk removal. Attach guide combs for desired length.
- **Detail Trimmer:** Ideal for outlining, detailing, and creating sharp lines around the neckline, sideburns, and beard.

- **Foil Shaver:** Designed for a close, smooth shave on the face or body, achieving a bald look or cleaning up stubble.

Zum friseur gehen

Private nutzung.

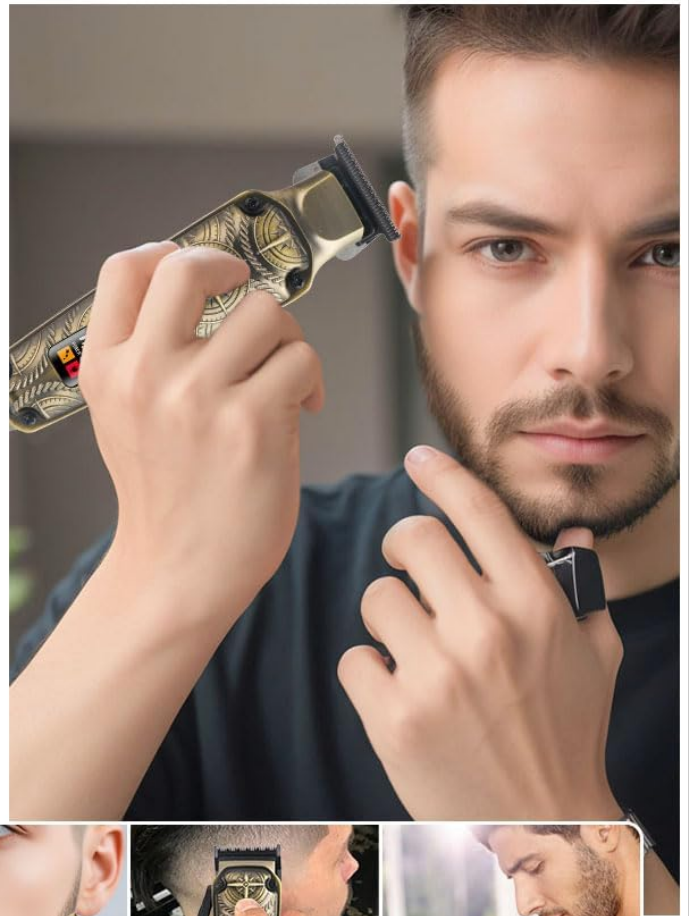

Rasieren.



**Der bart ist
glatt rasiert**



**Brusthaare.
Mähe!**

Image: Collage showing the WEEME hair clipper, trimmer, and shaver being used in different scenarios, including a barber cutting hair, a person trimming their beard, and another person shaving their chest hair. This illustrates the versatility of the 3-in-1 kit.

LED Display Information:

The ultra-high definition LED display provides real-time information:

- **Battery Power:** Indicates the remaining battery percentage.
- **Charging Reminder:** Alerts you when the battery is low and needs recharging.
- **Speed Setting:** (If applicable, not explicitly stated but common for professional clippers) Shows the current operating speed.



Image: Transparent view of the WEEME hair clipper revealing its internal motor and battery, alongside a clear depiction of the LED display showing battery percentage. This highlights the internal components and the digital display feature.

MAINTENANCE AND CARE

Cleaning the Blades:

Regular cleaning ensures optimal performance and extends the lifespan of your grooming tools.

1. Ensure the device is turned off and unplugged before cleaning.
2. Use the provided cleaning brush to remove loose hairs from the blades and guide combs.
3. For a more thorough clean, the blades can often be rinsed under running water (check specific model instructions for water resistance). Ensure blades are completely dry before reattaching or storing.
4. Apply a small amount of clipper oil (not included) to the blades regularly to keep them lubricated and sharp.

Storage:

Store the devices and accessories in a dry, cool place, away from direct sunlight and moisture. Use the provided storage bag to keep all components organized and protected.

TROUBLESHOOTING

If you encounter any issues with your WEEME grooming set, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Check the USB charging cable and power source for proper connection.
- **Poor cutting performance:** Clean the blades thoroughly to remove any trapped hairs. Apply clipper oil to lubricate the blades. Ensure the guide comb is correctly attached.
- **Excessive noise or vibration:** Clean and oil the blades. If the issue persists, contact customer support.

For further assistance, please refer to the warranty and support section.

SPECIFICATIONS

Feature	Detail
Brand	WEEME
Model Number	SZX3SET
Power Mode	USB Charging
Operating Voltage	≤36V
Battery Type	Rechargeable Lithium-Ion Battery
Run Time	Up to 5 hours
Charge Time	Approximately 2 hours
Blade Material	Ceramic
Included Components	Hair Clipper, Trimmer, Shaver, Guide Combs, USB Cables, Cleaning Brush, Cape, Scissors
Parcel Dimensions	30 x 19.51 x 8.51 cm
Weight	1.27 kg

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact WEEME customer service through the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do you change the guide comb attachments on the WEEME SZX3SET Professional Hair Clippers?

To change the guide comb attachments on your WEEME SZX3SET clippers or trimmers, follow these steps: To Attach: Select the desired guide comb size (the set includes 11 different sizes). Align the comb with the...

[Read full answer](#)