

LELO 9752

LELO Gigi 3 App-Controlled G-Spot Vibrator User Manual

Model: 9752

1. INTRODUCTION

The LELO Gigi 3 is an app-controlled G-spot vibrator designed for personal use. This manual provides essential information for the safe and effective operation, maintenance, and care of your device. Please read these instructions thoroughly before first use.



Image: The LELO Gigi 3 vibrator in plum and white, shown alongside its elegant black packaging and a smartphone displaying the LELO app, illustrating its app-controlled functionality.

2. WHAT'S INCLUDED

Your LELO Gigi 3 package contains the following items:

- LELO Gigi 3 App-Controlled G-Spot Vibrator
- USB Charging Cable
- Satin Storage Pouch
- Instruction Manual
- Warranty Registration Card
- Water-based Lubricant Sachet (5 ml / 0.17 fl. oz.)

GIGI™ 3

app-controlled g-spot vibrator



MANUAL

how to use guide



MOISTURIZER SACHET

water-based lubricant
5 ml / 0.17 fl. oz.



LELO

WARRANTY REGISTRATION CARD

WARRANTY CARD

verifies product authenticity



CHARGING CORD

USB cable



SATIN POUCH

for storage

Image: A flat lay of the LELO Gigi 3 package contents, clearly showing the vibrator, instruction manual, moisturizer sachet, warranty card, USB charging cable, and satin pouch.

3. PRODUCT FEATURES

The LELO Gigi 3 incorporates several design and functional features for an enhanced experience:

- **Flattened Tip:** Designed for focused G-spot or clitoral stimulation.
- **Ergonomic Shape:** Lightweight and comfortable fit for various body types.
- **Stable Handle:** Easy to grip and operate.
- **8 Pleasure Settings:** Offers a range of vibration patterns from gentle to intense.
- **App-Connected:** Connects via Bluetooth to a smartphone for additional control and modes.
- **Extra-Soft Silicone:** Ultra-smooth premium silicone material.
- **100% Waterproof:** IPX7 certified, suitable for use in bath or shower.
- **USB Rechargeable:** Convenient and fast charging.

**FLATTENED TIP FOR
FOCUSED G-SPOT OR
CLITORAL STIMULATION**

①

**A COMFORTABLE FIT
FOR EVERY BODY**

②

**LIGHTWEIGHT
& ERGONOMIC**

③

**STABLE
EASY-TO-OPERATE
HANDLE**


④

**APP-CONNECTED FOR
MORE PLEASURE**

⑤



 Image: A detailed diagram of the LELO Gigi 3, pointing out its flattened tip for focused stimulation, comfortable fit, lightweight ergonomic design, stable handle, and app-connected capability.

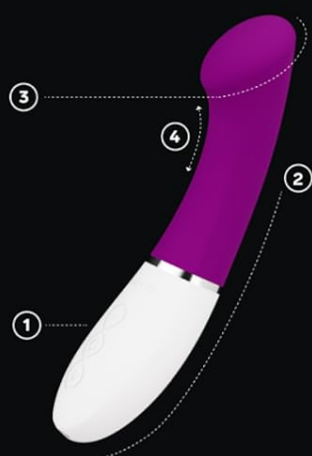

1 - EIGHT POWERFUL PLEASURE SETTINGS

Choose from eight vibration patterns, ranging from gentle murmurs to intense pulses



2 - APP-CONNECTED

Unlock two extra modes through the app for a customized pleasure experience



3 - MADE FOR DEEPLY PROFOUND PLEASURE

Smooth and slightly curved, designed for perfect Gspot stimulation



4 - TWO WAYS OF REACHING PLEASURE

GIGI 3 is not only the best Gspot vibrator available, but also an outer pleasure spot massager - just flip it over

Image: An infographic illustrating the LELO Gigi 3's key features, including its eight powerful pleasure settings, app-connectivity for additional modes, ergonomically shaped body for G-spot stimulation, and the versatility of two ways to use the device.

4. SETUP

4.1 Initial Charging


Before first use, fully charge your LELO Gigi 3. Connect the provided USB charging cable to the device's charging port and plug the other end into a USB power source. The indicator light will show charging status. A full charge takes approximately 2 hours.

4.2 Cleaning Before First Use

Clean the device thoroughly before its initial use. Refer to the "Cleaning and Maintenance" section for detailed instructions.

4.3 App Download and Activation

To unlock all features and additional modes, download the LELO app from your smartphone's app store. Follow the in-app instructions to connect your Gigi 3 via Bluetooth.

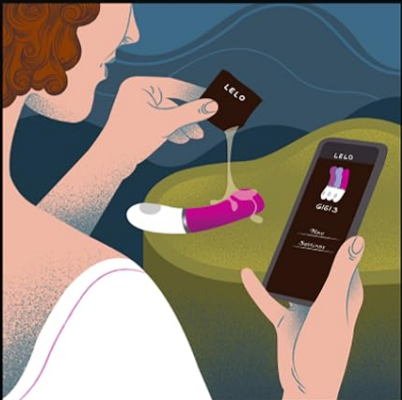

how to use?

STEP 1

Prep

First, download the LELO app to activate the exclusive modes. Then, apply LELO Personal Moisturizer to both your body and the toy for enhanced pleasure.

Image: An illustration depicting the first step of using the LELO Gigi 3, which involves downloading the LELO app to activate exclusive modes and applying LELO Personal Moisturizer to both the body and the device.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To turn the device on, press and hold the power button for 3 seconds. To turn it off, press and hold the power button for 3 seconds again.


5.2 Changing Vibration Settings

The Gigi 3 offers 8 built-in vibration settings. Press the '+' and '-' buttons on the device to cycle through the different patterns and intensities. For additional settings and customized control, use the LELO app.

5.3 Usage

Apply a water-based lubricant to the device and the desired area of the body. Turn on the device and gently explore the

various vibration settings to find what is most pleasurable. The flattened tip is designed for focused G-spot or clitoral stimulation. The device can also be flipped for external massage.

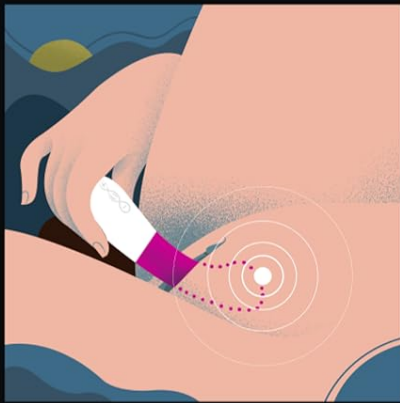

STEP 2

Engage

Turn it on, and listen to your body as you slowly approach your erogenous zone.

Image: An illustration demonstrating the second step of using the LELO Gigi 3, which involves turning on the device and slowly approaching an erogenous zone to engage with its sensations.



STEP 3

Indulge

Build anticipation by exploring different vibration modes, and tease yourself to a powerful climax.

Image: An illustration depicting the third step of using the LELO Gigi 3, encouraging users to explore different vibration modes and build anticipation, shown with the device being used in a shower.

6. APP CONNECTION

The LELO Gigi 3 can be connected to the LELO app via Bluetooth for enhanced control and additional features. Ensure your device is charged and turned on. Open the LELO app on your smartphone and follow the on-screen instructions to pair your Gigi 3. The app allows access to two additional modes: "Finish Me Off" and "Out Of Control," as well as customizable settings.

7. CHARGING AND BATTERY

The LELO Gigi 3 is equipped with a rechargeable Lithium Polymer battery. A full charge takes approximately 2 hours and provides up to 2 hours of continuous use. The device has a standby time of up to 90 days.

Explore the **LELOverse**

BILLY™ 2

HUGO™ 2

MONA™

SONA™ 2

SORAYA Beads™

Image: An infographic providing useful information about the LELO Gigi 3, covering its 2-hour charging and use time, travel lock function, USB rechargeable and waterproof design, and up to 90 days of standby time.

8. CLEANING AND MAINTENANCE

The LELO Gigi 3 is 100% waterproof (IPX7 certified), making it easy to clean. Wash the device thoroughly with warm water and a mild, antibacterial soap after each use. Rinse well and pat dry with a lint-free cloth. Avoid using cleaners containing alcohol, petroleum, or acetone, as these may damage the silicone. Store the device in its satin pouch in a clean, dry place.

Features



8 PLEASURE SETTINGS

eight different vibration patterns varying in intensity



APP - CONNECTED

unlock additional settings with the LELO app



ERGONOMICALLY SHAPED BODY

channeling deep and powerful vibrations



IMPROVED INTERFACE

for better control over intensities



EXTRA-SOFT SILICONE

ultra-smooth premium silicone that feels warm to the touch



Image: A hand holding the LELO Gigi 3 vibrator, partially submerged in clear water, illustrating its waterproof design and ease of cleaning.

9. TRAVEL LOCK

To prevent accidental activation during travel or storage, the LELO Gigi 3 features a travel lock. To activate the travel lock, press and hold the '+' and '-' buttons simultaneously for 3 seconds until the indicator light flashes. To deactivate, repeat the same action.

10. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. If the issue persists, try resetting by connecting it to the charger for a few minutes.
- **Not charging:** Check the USB cable and power source. Ensure the charging port is clean and free of debris.
- **App connectivity issues:** Ensure Bluetooth is enabled on your smartphone and the device is within range. Try

restarting both the device and the app.

- **Weak vibrations:** Ensure the device is fully charged. If vibrations remain weak, contact LELO customer support.

11. SPECIFICATIONS

Feature	Detail
Model Number	9752
Material	Acrylonitrile Butadiene Styrene (ABS), Silicone
Dimensions (L x W x H)	6.42 x 1.38 x 1.65 inches (163 x 35 x 42 mm)
Insertable Length	3.54 inches (90 mm)
Weight	7.76 ounces (87 g)
Battery	1 Lithium Polymer (included)
Charging Time	2 hours
Use Time	Up to 2 hours
Standby Time	Up to 90 days
Waterproof Rating	IPX7
Safety Standard	ISO 3533



APP-CONNECTED
connect your device to set up
your pleasure on the LELO app



CERTIFIED BODY-SAFE
the highest standard of safety and construction



8 SETTINGS
from a teasing murmur to a satisfying pulse



ISO 3533 SAFETY CERTIFIED
indulge in pleasure with toys made at the
highest possible safety standard



100% WATERPROOF
perfect for the bath and shower



EXTRA-SOFT SILICONE
premium silicone that feels silky
to the touch



SIZE AND WEIGHT
163 x 35 x 42 mm / 6.42 x 1.38 x 1.65 in
Insertable length: 90 mm / 3.54 in
Only product: 87 g / 3.07 oz

Image: An infographic titled 'ticking all the boxes', summarizing the LELO Gigi 3's features including app-connectivity, certified body-safe materials, 8 settings, ISO 3533 safety certification, 100% waterproof design, extra-soft silicone, and detailed size and weight specifications.

12. WARRANTY AND SUPPORT

Your LELO Gigi 3 comes with a warranty. Please refer to the included Warranty Registration Card for details on how to register your product and the terms of the warranty. For further assistance, product support, or to view the full warranty policy, please visit the official LELO website or contact LELO customer service.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

© 2025 LELO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question