

[Manuals.plus](#) /

› [iRobot](#) /

› iRobot Roomba Combo 10 Max Robot Vacuum and Mop + AutoWash Dock (x0850) User Manual

iRobot X085020

iRobot Roomba Combo 10 Max Robot Vacuum and Mop + AutoWash Dock (x0850) User Manual

Model: X085020

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your iRobot Roomba Combo 10 Max Robot Vacuum and Mop with AutoWash Dock. Please read all instructions carefully before using the product.



Figure 1: iRobot Roomba Combo 10 Max Robot Vacuum and Mop with AutoWash Dock.

2. SETUP

2.1 Unboxing and Initial Setup

Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present. Place the AutoWash Dock in a suitable location with good Wi-Fi coverage and near a power outlet. Ensure there is at least 1.5 feet (0.5 m) of clear space on both sides of the dock and 4 feet (1.2 m) in front of it, away from stairs or direct sunlight.

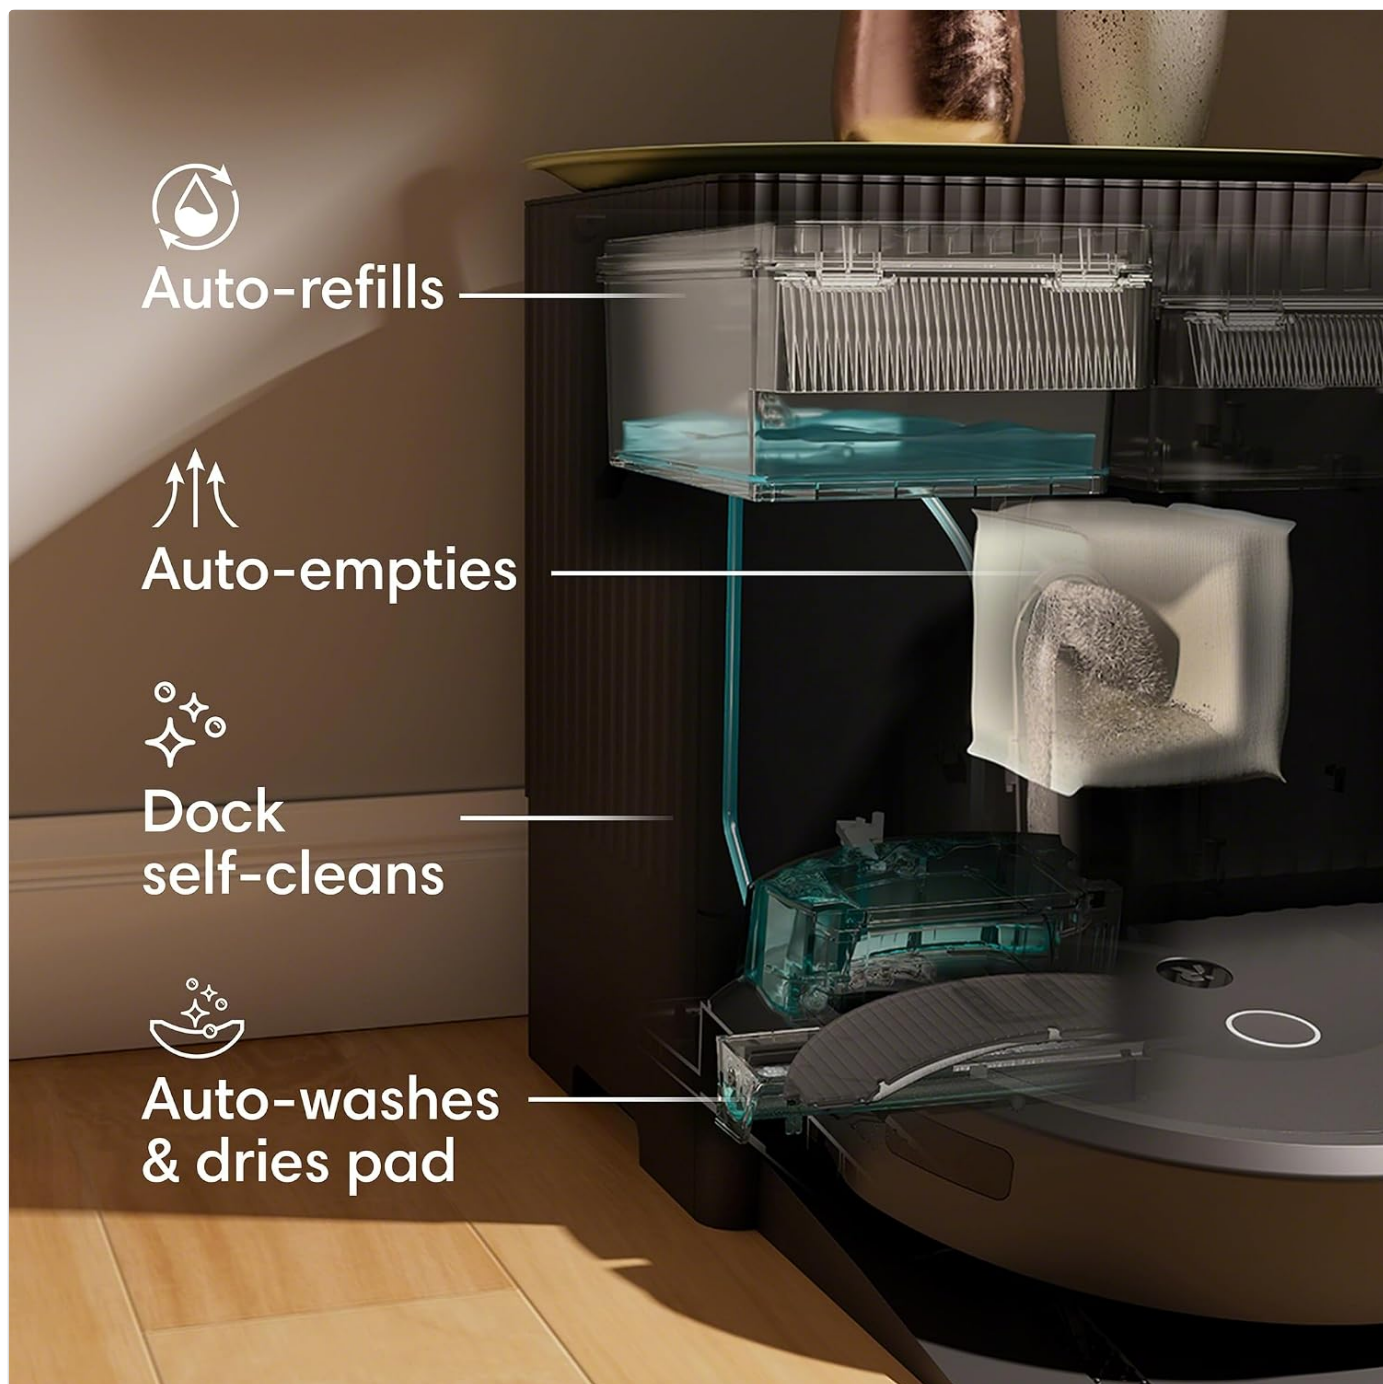


Figure 2: AutoWash Dock with auto-refill, auto-empty, self-clean, and auto-wash/dry pad features.

2.2 Connecting to Wi-Fi and App Setup

Download the iRobot Home App from your device's app store. Follow the in-app instructions to connect your Roomba Combo 10 Max to your home Wi-Fi network. This process involves pressing the robot's button to initiate pairing and selecting your Wi-Fi network within the app.

The app allows you to manage maps, set up cleaning schedules, define no-go zones, and monitor the robot's status and maintenance needs.

3. OPERATING INSTRUCTIONS

3.1 Cleaning Modes

- **Vacuum Only:** For dry debris on all floor types.
- **Mop Only:** For hard floors, using water and/or cleaning solution.

- **Vacuum and Mop:** Simultaneous cleaning for mixed floor types. The mop pad automatically retracts when carpets are detected.

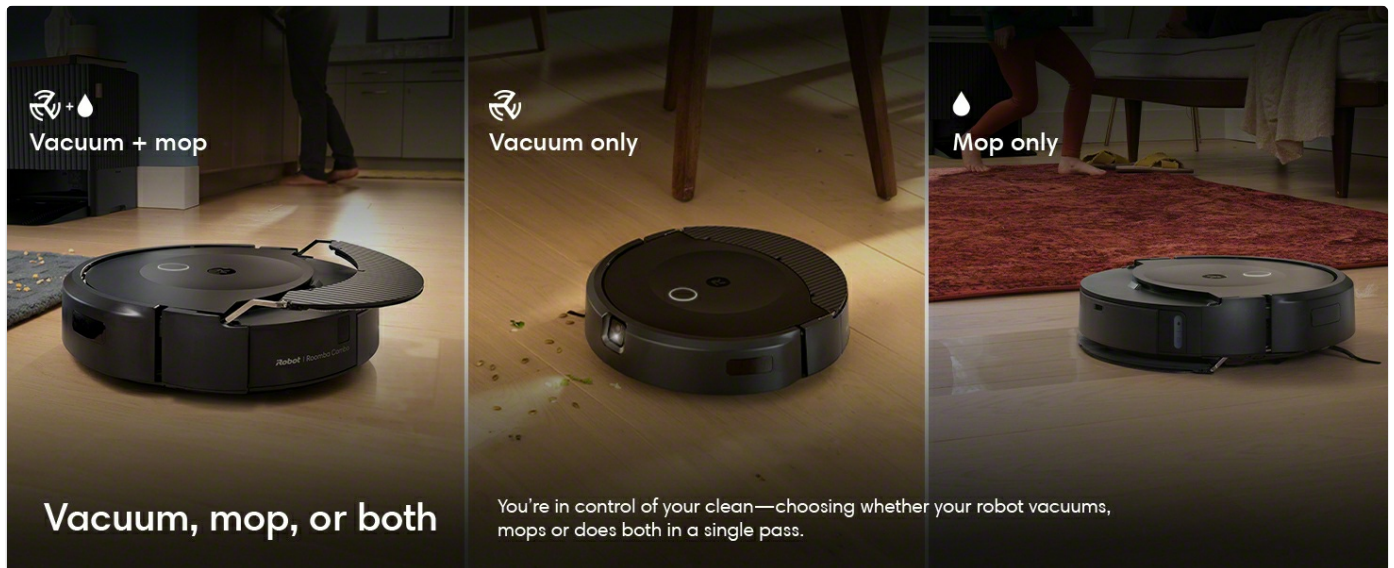


Figure 3: Different cleaning modes available for the Roomba Combo 10 Max.

3.2 SmartScrub Technology

For tougher messes, enable SmartScrub mode via the app. The robot will mop back-and-forth with consistent downward pressure, mimicking manual scrubbing.

Mop lifts fully away to prevent wet carpet messes



Figure 4: Roomba Combo 10 Max utilizing SmartScrub for deeper cleaning.

3.3 Obstacle Avoidance and Navigation

Equipped with PrecisionVision Navigation and a camera, the robot identifies and avoids obstacles such as pet waste, charging cords, and shoes. It learns your home layout and prioritizes dirtiest rooms using Dirt Detective technology.

Detects and avoids objects of all sizes



Figure 5: The robot's ability to detect and avoid objects of all sizes.

2x deeper scrubbing* eliminates stubborn messes



*Compared to standard vacuum & mop mode for coffee and grime.

Figure 6: Dirt Detective feature prioritizing cleaning in dirtier areas.

4. MAINTENANCE

4.1 AutoWash Dock Maintenance

The AutoWash Dock automatically empties the robot's bin, refills the mopping tank, and washes and dries the mop pad. It also performs a self-cleaning cycle to maintain its cleanliness. Regularly check the clean and dirty water tanks and the dust bag for optimal performance.

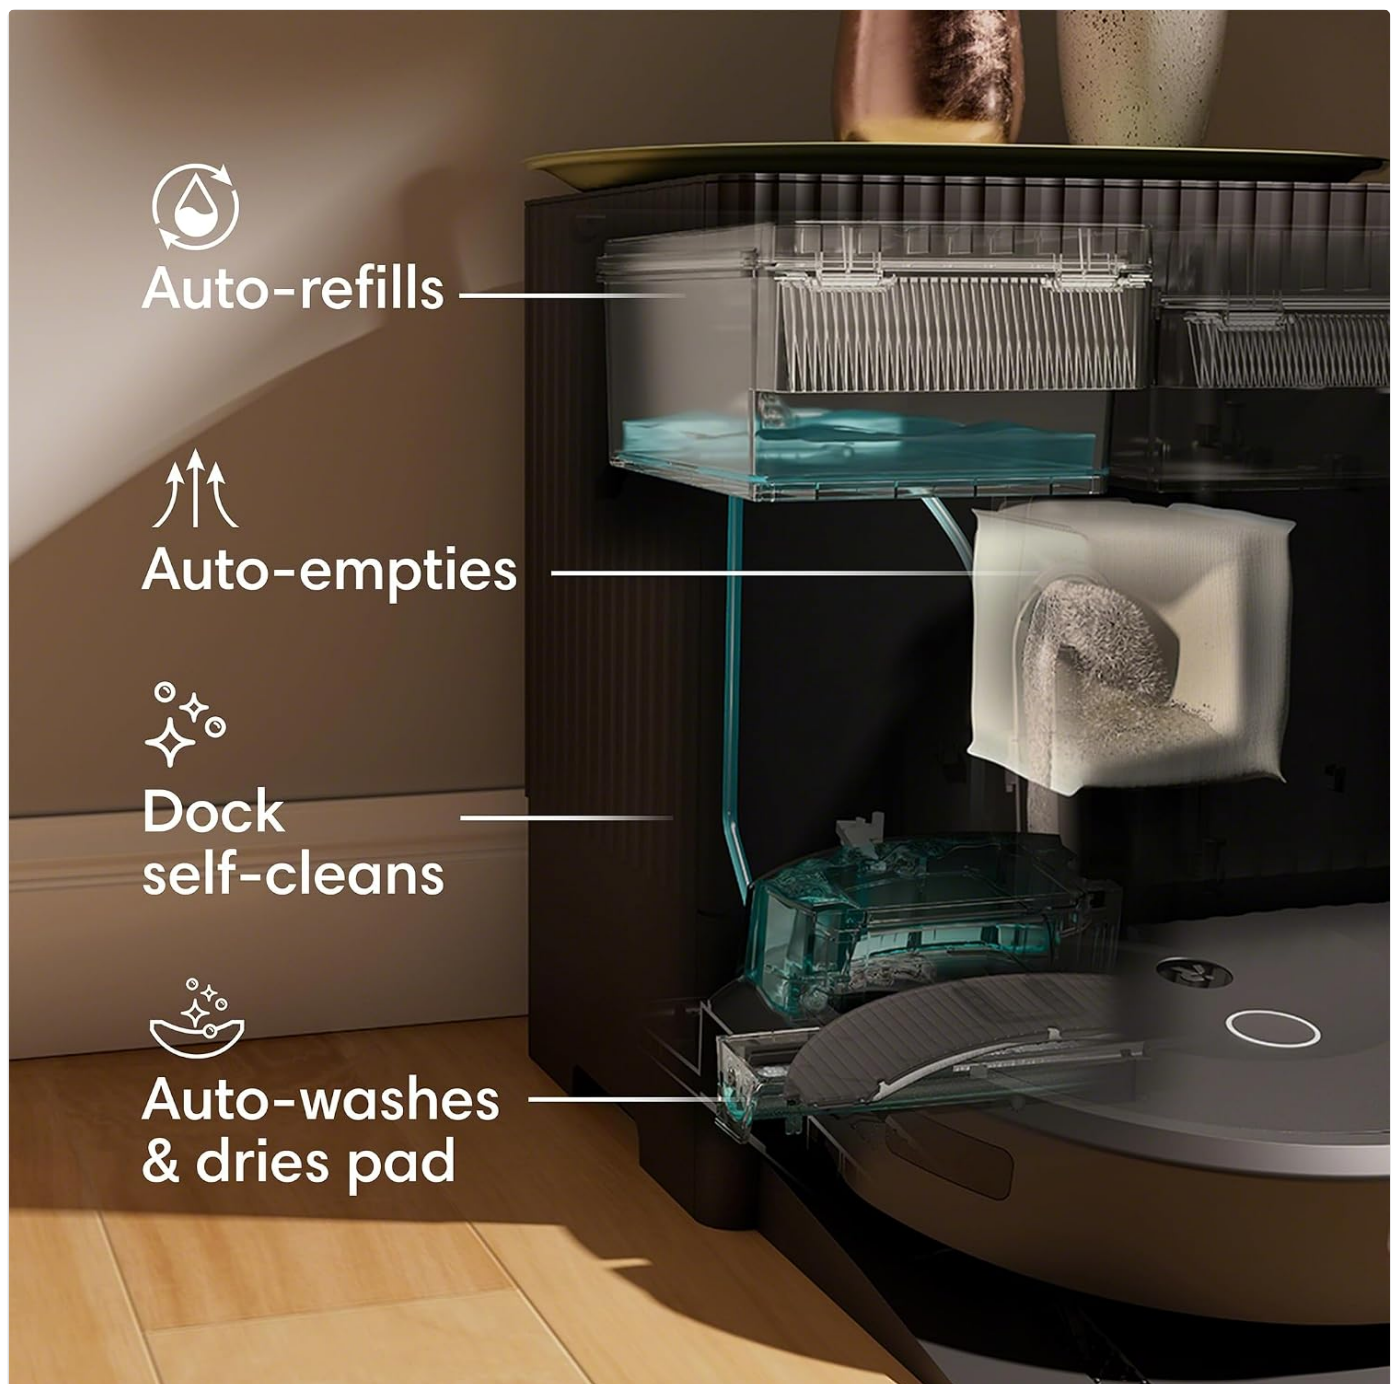


Figure 7: AutoWash Dock's self-maintenance features.

4.2 Robot Cleaning

Periodically clean the Edge-Sweeping Brush and Dual Rubber Brushes to prevent pet hair tangles and ensure thorough cleaning. The iRobot Home App provides a "Product Health" section to monitor the lifespan of consumable parts like filters and brushes, indicating when replacement is needed.

Advanced 4-stage cleaning system for barefoot-friendly floors

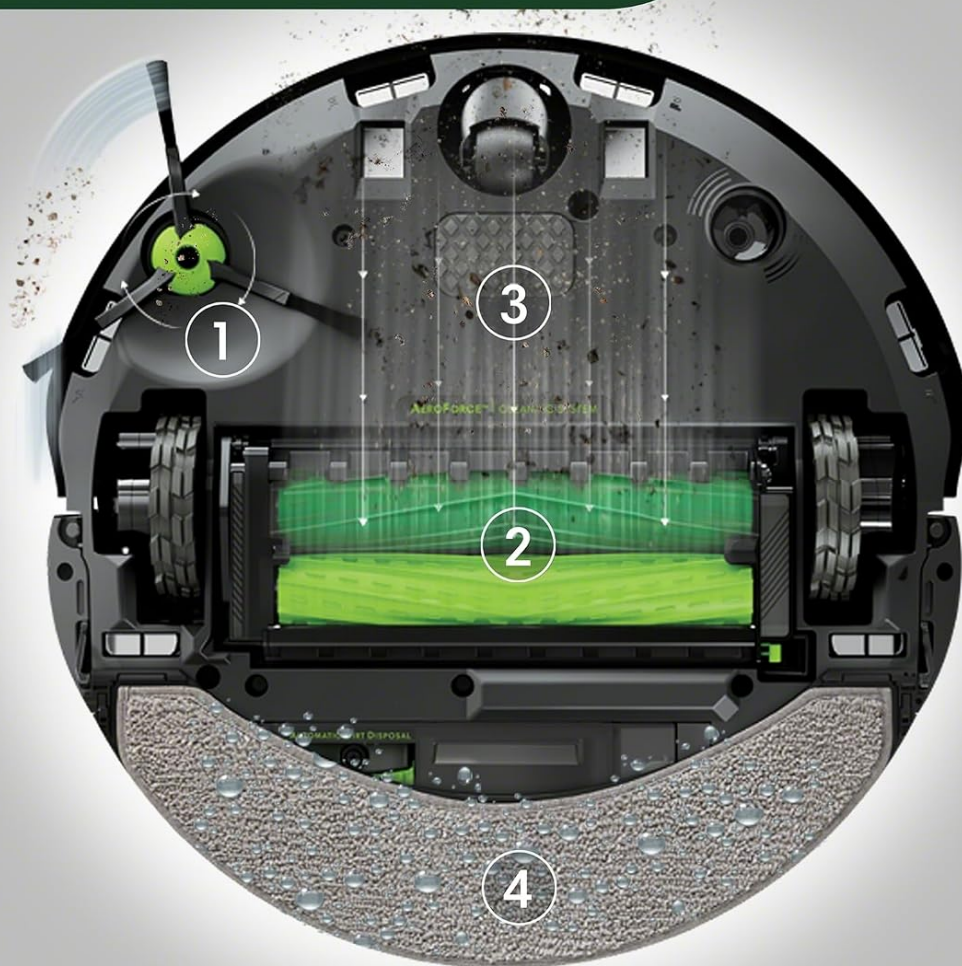 


Figure 8: Underside view of the robot, highlighting the brushes and cleaning system.

5. TROUBLESHOOTING

If your Roomba Combo 10 Max encounters an issue, refer to the iRobot Home App for specific error messages and troubleshooting steps. Common issues include:

- **Navigation Problems:** Ensure adequate lighting and clear obstacles from the robot's path.
- **Poor Cleaning Performance:** Check and clean brushes, filters, and ensure water tanks are filled correctly.
- **Docking Issues:** Verify the dock is properly positioned and free from obstructions.

For persistent problems, consult the Owner's Guide available in the app or contact iRobot Support directly.

6. SPECIFICATIONS

Feature	Specification
---------	---------------

Brand	iRobot
Model Name	Roomba Combo 10 Max Robot + AutoWash Dock
Model Number	X085020
Dimensions (L x W x H)	13.3"L x 13.3"W x 3.4"H
Item Weight	11 pounds
Battery Life	120 minutes
Filter Type	Cartridge
Compatible Devices	Alexa, Siri, Google Assistant-enabled devices

7. WARRANTY AND SUPPORT

iRobot does not certify the quality or authenticity of products purchased from non-authorized resellers on Amazon, and will only cover warranty claims, provide service or offer replacements for products purchased from authorized sellers. For warranty details and support, please refer to the official iRobot website or contact their customer service.

For additional support, you can access the "Help" section within the iRobot Home App, which includes FAQs, troubleshooting guides, and contact information for iRobot Support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question