

Whirlpool W11527432

Whirlpool W11527432 Refrigerator LED Light Assembly Instruction Manual

Model: W11527432

INTRODUCTION

This manual provides essential information for the safe and correct installation, operation, and maintenance of your Whirlpool W11527432 Refrigerator LED Light Assembly. This genuine OEM part is designed to illuminate the interior of your refrigerator. Please read all instructions carefully before proceeding with installation.

SAFETY INFORMATION

WARNING: Risk of Electric Shock

Before attempting any installation or repair, you must unplug the appliance or shut off the house circuit breaker for the appliance. Failure to do so can result in serious injury or death.

- Always disconnect power to the refrigerator before servicing.
- Wear appropriate personal protective equipment, such as gloves and safety glasses.
- If you are unsure about any step, consult a qualified appliance technician.

PRODUCT OVERVIEW

The Whirlpool W11527432 Refrigerator LED Light Assembly is a genuine OEM replacement part designed to restore proper interior lighting to your compatible Whirlpool or Maytag refrigerator. It replaces several previous part numbers, ensuring compatibility and optimal performance.

Compatible Models

This LED light assembly is compatible with multiple refrigerator models, including but not limited to:

- WRX735SDHZ
- WRF555SDFZ
- MFI2570FEZ
- WRF555SDHV
- WRX735SDHV

Replaces Part Numbers

This part replaces the following numbers:

- W11101384
- W11245960
- W11333374
- W11387579

WHAT'S IN THE BOX

Your package should contain the following item:

- 1 x Whirlpool W11527432 Refrigerator LED Light Assembly Replacement Part

INSTALLATION INSTRUCTIONS

Replacing this part requires basic hand tools, some disassembly of the refrigerator, and novice repair experience. Always prioritize safety by disconnecting power before starting.

1. **Disconnect Power:** Unplug the refrigerator from the electrical outlet or turn off the circuit breaker supplying power to the appliance.
2. **Access the Light Assembly:** Carefully locate the existing LED light assembly within your refrigerator. This may involve removing shelves, drawers, or a protective cover. Refer to your refrigerator's specific model manual for detailed access instructions.
3. **Remove Old Assembly:** Disconnect any wiring harnesses connected to the old LED light assembly. Unclip or unscrew the old assembly from its mounting location.
4. **Install New Assembly:** Connect the wiring harness to the new W11527432 LED Light Assembly. Secure the new assembly into its mounting location, ensuring it is firmly in place.
5. **Reassemble:** Replace any removed shelves, drawers, or protective covers.
6. **Restore Power:** Plug the refrigerator back into the electrical outlet or turn the circuit breaker back on.
7. **Test Functionality:** Open the refrigerator door to confirm the new LED light assembly illuminates correctly.

Visual Aid: Product Images

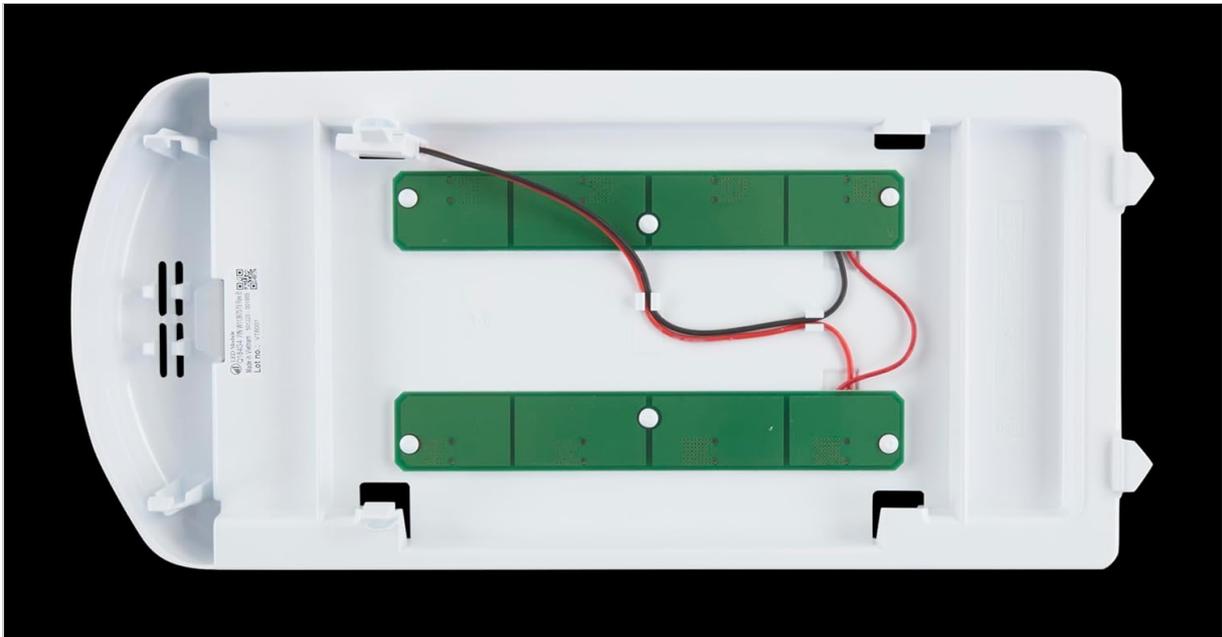


Image 1: Back view of the Whirlpool W11527432 Refrigerator LED Light Assembly, showing the circuit board and wiring connections.



Image 2: Front view of the Whirlpool W11527432 Refrigerator LED Light Assembly, featuring the translucent diffuser cover that spreads the light evenly.

OPERATING INSTRUCTIONS

Once installed and power is restored, the LED light assembly will operate automatically when the refrigerator door is opened, illuminating the interior. No further user interaction is typically required for its basic function.

MAINTENANCE

The LED light assembly is designed for long-term, maintenance-free operation. If the light output appears dim or inconsistent, ensure the power supply is stable and the connections are secure. Avoid using abrasive cleaners on the light diffuser.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED light does not turn on.	No power to the refrigerator. Loose electrical connection. Faulty LED assembly.	Check if the refrigerator is plugged in and the circuit breaker is on. Ensure all wiring connections are secure. If power is confirmed and connections are secure, the assembly may be faulty and require replacement.
Light is dim or flickers.	Unstable power supply. Loose connection.	Check household electrical supply. Verify all connections are tight.

SPECIFICATIONS

Feature	Detail
Model Number	W11527432
Item Weight	1.54 pounds
Product Dimensions	18.5 x 8.5 x 4 inches
Included Components	W11527432 Refrigerator LED Light Assembly Replacement Part
Batteries Required?	No

WARRANTY

This Whirlpool Genuine OEM part comes with a one-year warranty. For specific terms and conditions, please refer to the warranty documentation included with your purchase or contact Whirlpool customer support.

SUPPORT

For further assistance, technical support, or to inquire about other genuine Whirlpool parts, please visit the official Whirlpool website or contact their customer service department. When contacting support, please have your appliance model number and the part number (W11527432) readily available.

Official Whirlpool Genuine Parts Video

Your browser does not support the video tag.

Video: Learn more about the importance and quality of Whirlpool Genuine OEM Parts and Accessories. This video highlights the engineering standards and perfect fit of authentic replacement parts.