

## Syntecno P9-W

# Syntecno P9-W Cordless Vacuum Cleaner User Manual

Model: P9-W | Brand: Syntecno

## 1. INTRODUCTION

Thank you for choosing the Syntecno P9-W Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

## 2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:


- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.

- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the appliance indoors. Put away after use to prevent accidents.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

### 3. PACKAGE CONTENTS

Please check the contents of your package against the list below:

- Main Body (Vacuum Unit) x 1
- Electric Brush Head x 1
- Aluminum Telescopic Tube x 1
- Long Crevice Tool x 1
- 2-in-1 Combination Brush x 1
- Power Adapter x 1
- Storage Rack (Stand Base and Support Rods) x 1
- Replacement Filter Cotton x 1

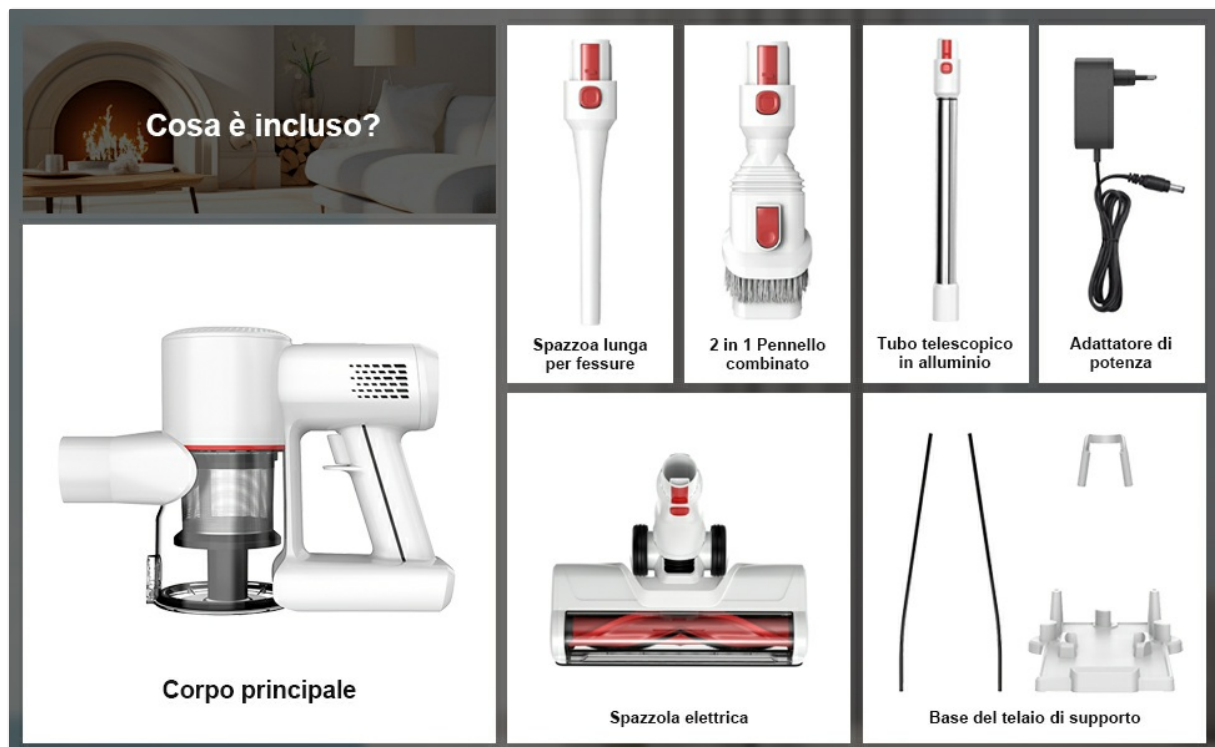

**Image 3.1:** All components included in the Syntecno P9-W package. This image displays the main vacuum body, electric brush head, telescopic tube, crevice tool, combination brush, power adapter, storage rack components, and a replacement filter.

### 4. PRODUCT OVERVIEW

The Syntecno P9-W is a versatile cordless vacuum cleaner designed for efficient cleaning across various surfaces. Key features include:

- **Powerful Suction:** Up to 23KPa for effective cleaning of stubborn dirt.

- **Two Speed Modes:** Standard for daily cleaning and a powerful mode for tougher tasks.
- **Intuitive Touch Screen:** Easily switch between modes and monitor battery status.
- **LED Illumination:** Lights on the brush head to illuminate dark areas and hidden dust.
- **Multi-surface Cleaning:** Suitable for floors, carpets, and pet hair.
- **Lightweight Design:** Weighs approximately 2.4 kg for easy maneuverability.
- **Washable HEPA Filter:** High filtration efficiency up to 99.99% for cleaner air.
- **Quick Charging:** Approximately 4.5 hours for a full charge.
- **Long Running Time:** Up to 40 minutes in standard mode.
- **Low Noise Operation:** Operates at approximately 60 dB.
- **One-Click Emptying:** Hygienic dustbin emptying.



**Image 4.1:** The Syntecno P9-W cordless vacuum cleaner with its various attachments, showcasing its modular design.

# Schermo LED touch

Può essere usata a mano



**Image 4.2:** Close-up of the intelligent LED touch screen, displaying power icon, standard mode (10kpa-40min), power mode (23kpa-20min), and selection button.

## 5. SETUP

### 5.1 Assembling the Storage Rack

The storage rack provides a convenient way to store and charge your vacuum cleaner. Follow these steps to assemble it:

1. Insert the two long support rods into the designated holes on the base plate. Ensure they are securely seated.
2. Attach the curved upper support piece to the top ends of the rods. Use the provided screws and a screwdriver to fasten them firmly.
3. Place the assembled rack on a flat, stable surface.

Your browser does not support the video tag.

**Video 5.1:** Demonstration of assembling the vacuum cleaner's storage stand. The video shows how to insert the support rods into the base and secure the upper curved holder with screws.

### 5.2 Assembling the Vacuum Cleaner

1. Attach the electric brush head to one end of the aluminum telescopic tube until it clicks into place.
2. Attach the main vacuum body to the other end of the aluminum telescopic tube until it clicks into place.
3. Alternatively, you can attach accessories like the long crevice tool or 2-in-1 combination brush directly to the main body for handheld use.



**Image 5.2:** Various accessories including the 2-in-1 wide mouth brush, long crevice tool, and electric brush, demonstrating their use for different cleaning tasks.

## 6. OPERATING INSTRUCTIONS

### 6.1 Charging the Battery

Before first use, fully charge the vacuum cleaner. Connect the power adapter to the charging port on the main body and plug it into a wall outlet. The battery indicator on the touch screen will show charging status. A full charge takes approximately 4.5 hours.



**Image 6.1:** The vacuum cleaner charging on its stand, highlighting its 23KPa suction power, fast 4.5-hour charge, low noise (<60dB), 500-hour lifespan, and 2.4 kg weight.

## 6.2 Powering On/Off and Mode Selection

Press the power button on the main body to turn the vacuum cleaner on or off. Use the intuitive touch screen to switch between the two suction modes:

- **Standard Mode:** Ideal for daily cleaning of dust and light debris. Provides up to 40 minutes of runtime.
- **Powerful Mode:** For stubborn dirt and deeper cleaning. Provides up to 20 minutes of runtime.



**Image 6.2:** The intelligent touchscreen interface, showing the fan icons for different power modes and the +/- button for selection.

## 6.3 Using the Vacuum Cleaner

**For Floor and Carpet Cleaning:** Attach the electric brush head and telescopic tube. The brush head features LED lights to illuminate the cleaning path, making hidden dust visible.



**Image 6.3:** Close-up of the electric brush head with its integrated LED lights, effectively illuminating dust on the floor.



**Image 6.4:** The vacuum cleaner effectively cleaning different floor types, including pavement, carpet, marble, and tiles, demonstrating its versatility.

**For Handheld Cleaning:** Detach the telescopic tube and attach the desired accessory (crevice tool or combination brush) directly to the main body. This is ideal for cleaning furniture, curtains, shelves, and car interiors.

Your browser does not support the video tag.

**Video 6.5:** A comprehensive demonstration of the Syntecno P9-W in action, showing its assembly, use on floors, under furniture, and with various attachments for handheld cleaning of curtains, shelves, and keyboards. It also highlights the one-click emptying and charging process.

## 7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 7.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the debris reaches the MAX fill line. To empty:

1. Hold the main body over a trash can.
2. Press the dustbin release button (usually located near the bottom of the dustbin) to open the flap and release the contents.
3. Close the flap securely after emptying.

**Svuotare con un solo clic**



**Image 7.1:** A visual guide demonstrating the one-click mechanism for emptying the dustbin, showing debris falling out.

## 7.2 Cleaning the Filters

The Syntecno P9-W features a washable HEPA filter. Clean the filter regularly (e.g., once a month or as needed) to maintain suction power.

1. Twist and pull to remove the dustbin from the main body.
2. Remove the HEPA filter and other filter components from the dustbin.
3. Tap off loose dirt. Rinse the filter under cold running water until the water runs clear.
4. Allow the filter to air dry completely for at least 24 hours before reassembling. Do not use a dryer or other heating methods.
5. Reassemble the filters and dustbin, then reattach to the main body.



**Image 7.2:** An exploded view of the vacuum cleaner's filtration system, illustrating its high efficiency up to 99.99% and showing the various filter components.

### 7.3 Cleaning the Brush Head

Periodically check the electric brush head for tangled hair or debris. Use scissors to cut away any tangled hair and remove it. Ensure the brush roll spins freely.

## 8. TROUBLESHOOTING

If you encounter any issues with your Syntecno P9-W, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Low suction power.	Dustbin is full.	Empty the dustbin.
	Filter is clogged.	Clean or replace the HEPA filter.
	Brush head is blocked or tangled.	Remove any debris or tangled hair from the brush roll.
	Attachments are not properly connected.	Ensure all attachments are securely clicked into place.
Brush head not spinning.	Brush roll is jammed.	Clear any obstructions from the brush roll.
	Connection issue with the main body.	Check the connection between the brush head and the telescopic tube/main body.
Short running time.	Battery not fully charged.	Ensure the battery is fully charged before use.
	Using powerful mode excessively.	Powerful mode consumes more battery. Use standard mode for longer runtime.

## 9. SPECIFICATIONS

Feature	Specification
Brand	Syntecno
Model	P9-W
Color	White
Product Dimensions	26 x 20 x 112 cm

Feature	Specification
Item Weight	2.4 kg
Wattage	250W
Number of Speeds	2
Noise Level	60 Decibels
Runtime	Up to 40 minutes
Special Features	Washable filter, Lightweight, Portable, Rechargeable, Cordless
Filter Type	HEPA Filter
Included Components	Main body, Electric brush, Telescopic tube, Crevice tool, Combination brush, Power adapter, Storage rack, Replacement filter cotton

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Syntecno customer service. Keep your proof of purchase for any warranty claims.