



Manuals.plus /

› KOHO /

› KOHO KR043B VHS to DVD Converter and Multi-Function Media Recorder Instruction Manual

## KOHO KR043B

# KOHO KR043B Multi-Function Media Recorder Instruction Manual

Model: KR043B

[Introduction](#)   [What's in the Box](#)   [Setup](#)   [Operating Instructions](#)   [App & WiFi](#)  
[Transfer](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

---

The KOHO KR043B Multi-Function Media Recorder is designed to convert and preserve your valuable video and audio memories from various analog and digital sources into modern digital formats. This device allows you to record content from VHS tapes, VCRs, camcorders, DVD players, and even smartphones directly to DVDs, USB drives, or SD cards without the need for a personal computer.

With its intuitive interface, 4.3-inch LCD preview screen, and versatile connectivity options, the KR043B simplifies the process of digitizing your media. It supports HD output for external display and offers convenient file copying between different storage devices. Additionally, a dedicated mobile application enables wireless transfer of photos, videos, and music from your smartphone to the recorder for archiving.

## 2. WHAT'S IN THE BOX

---

Upon opening your KOHO KR043B package, please ensure all the following items are present:

- DVD Recorder (Main Unit)
- AC Power Adapter
- AV Cable (RCA to 3.5mm jack)
- 10 Pcs Blank DVD-R
- Quick Start Guide
- User Manual

# Wireless App Transfer: Phone to DVD, USB, SD, HDD & Back

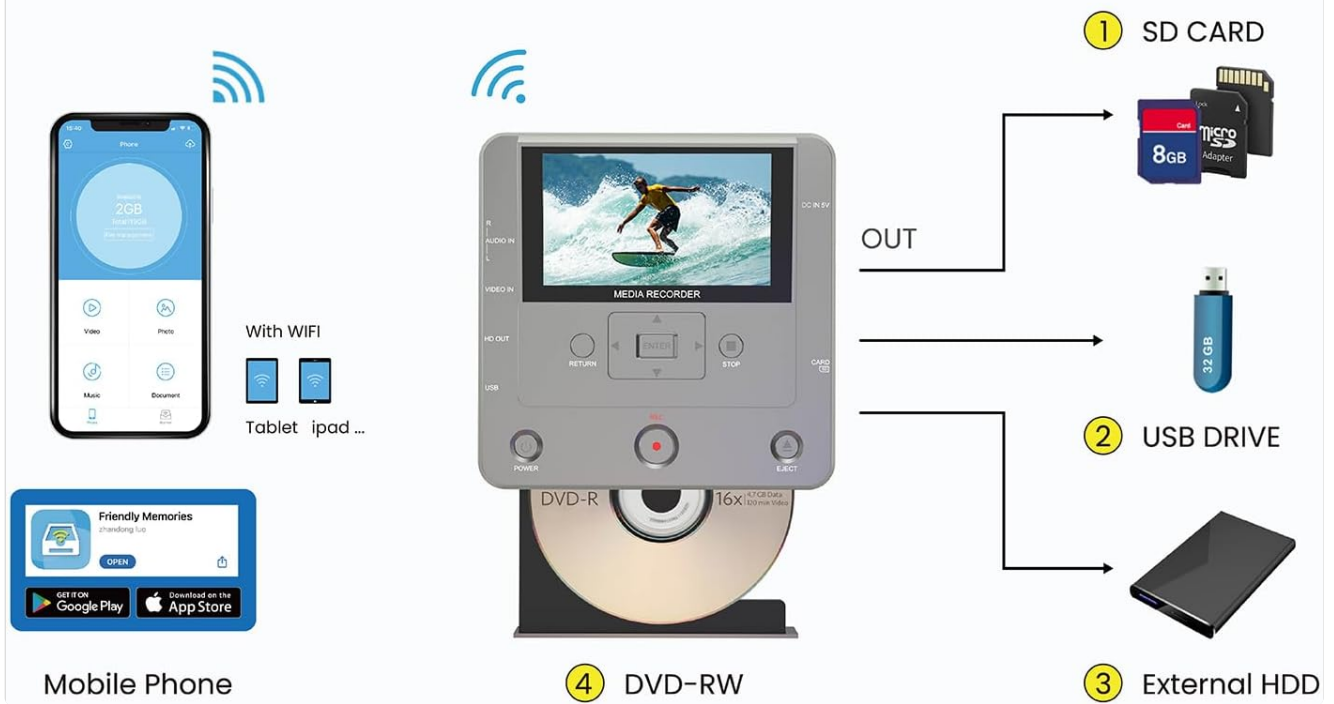


Image: The KOHO KR043B Multi-Function Media Recorder and its included accessories, such as the power adapter, AV cable, blank DVD-R discs, and user manuals, neatly arranged on a table.

Video: An unboxing and overview of the KOHO KR043B Media Recorder, highlighting the device and its included accessories like the AV cable and blank DVD-R discs.

## 3. SETUP

### 3.1 Power Connection

1. Connect the AC Power Adapter to the 'DC IN 5V' port on the side of the KOHO KR043B.
2. Plug the power adapter into a standard electrical outlet.
3. Press and hold the 'POWER' button on the front panel until the device powers on and the screen illuminates.

### 3.2 Connecting Source Devices (e.g., VCR, Camcorder)

The KR043B supports various input sources via RCA (AV) cables. Ensure your source device has RCA/AV output ports.

1. Connect the yellow RCA cable to the 'VIDEO IN' port on the recorder and the video output port of your source device.
2. Connect the white RCA cable to the 'AUDIO IN L' port on the recorder and the left audio output port of your source device.
3. Connect the red RCA cable to the 'AUDIO IN R' port on the recorder and the right audio output port of your source device.

# Easily Convert & Record Old Memories Into A DVD or USB Without A PC



Image: A visual guide illustrating how to connect a source device (like a DVD player) to the KOHO KR043B using RCA cables for video and audio input, and how the recorder can output to a TV or store to USB/SD/DVD.

# Multi-Function DVD Recorder

VHS/DVD/TV/USB/SD/HDD



Image: A detailed diagram demonstrating the connection of a VCR to the KOHO KR043B Media Recorder using RCA cables, with options to record to DVD or USB, and preview on a television.


### 3.3 Connecting to a TV for Preview (Optional)

For a larger viewing experience during recording or playback, connect the KR043B to a TV via HDMI.

1. Connect an HDMI cable (not included) from the 'HD OUT' port on the recorder to an HDMI input port on your television.
2. Select the corresponding HDMI input on your TV.

# Preview & Watch Video

Connect to TV or Display via HDMI to Preview & Watch Video

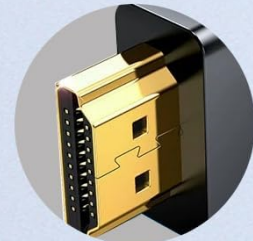

HDMI



Image: The KOHO KR043B Media Recorder displaying content on its screen and simultaneously connected to a larger television via an HDMI cable for an enhanced preview experience.

## 4. OPERATING INSTRUCTIONS

### 4.1 Recording from External Sources

The KR043B can record from various analog video sources such as VCRs, camcorders, and DVD players.

1. Ensure your source device is connected correctly via AV cables (see Section 3.2).
2. Insert a blank DVD-R/RW disc into the DVD tray, or connect a FAT32 formatted USB drive/SD card.
3. On the recorder's menu, navigate to 'Video/USB/Card -> DVD' or 'Video -> USB/Card' depending on your desired output.
4. Select 'Video' as the input source.
5. Start playback on your source device. The video should appear on the recorder's screen.
6. Press the 'REC' button (red circle) on the recorder to begin recording.
7. Press 'STOP' to end the recording.

Video: A demonstration of recording video from a VCR to the KOHO KR043B Media Recorder, showing the connection process and the recording interface.

Video: A detailed guide on using the KOHO DVD Recorder, demonstrating the on-screen menu for easy recording and navigation.

## Analog Video To Digital

Compatible With Most Camcorders, digital cameras & VCRs



VCR



DVR



DVD



VHS





Hi8



Film



Camcorders



Portable Player

Before purchasing, please make sure that your multimedia device has an AV video output interface

Image: An illustration of the KOHO KR043B's compatibility with a wide range of analog video sources, such as VCRs, DVRs, DVD players, VHS tapes, Hi8 cameras, film, camcorders, and portable players, emphasizing the need for AV output.

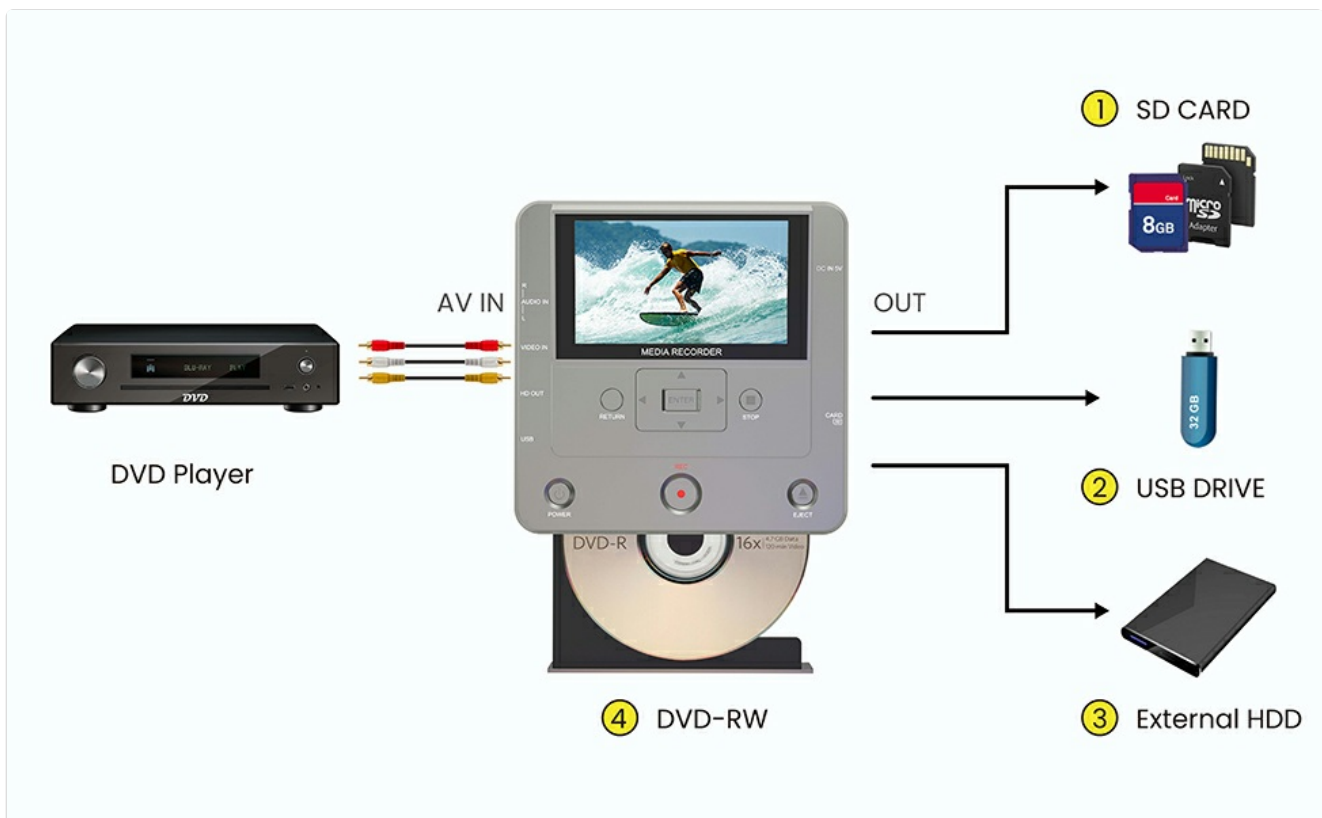


Image: A comprehensive diagram showcasing the multi-functional nature of the KOHO KR043B, illustrating its ability to record from various sources like VHS, TV, camcorders, and mobile phones to multiple storage options including portable HDDs, USB drives, SD cards, and DVD/CDs.

## 4.2 Playing Back Media

You can play back recorded videos or other media files directly on the device's screen or an external TV.

1. From the main menu, select 'Media Player'.
2. Choose the source for playback: 'USB', 'Card', or 'CD/DVD'.
3. Navigate through the folders and files using the arrow buttons and press 'ENTER' to select and play a file.

Video: A demonstration of the KOHO VHS to Digital Converter, showing its functionality as a DVD recorder for TV recording and media playback.



Image: A diagram illustrating how the KOHO KR043B can play back content from an SD card, USB drive, or external HDD directly to a television using its HDMI output port.

## 4.3 Copying Files Between Storage Devices

The KR043B allows for direct file transfer between different storage media.

1. From the main menu, select the desired copy option (e.g., 'USB/Card -> CD', 'CD -> USB/Card').
2. Follow the on-screen prompts to select the source and destination for the files.
3. Confirm the transfer to begin copying.

# Seamlessly Transfer Files Among USB, SD Card & DVD With Ease

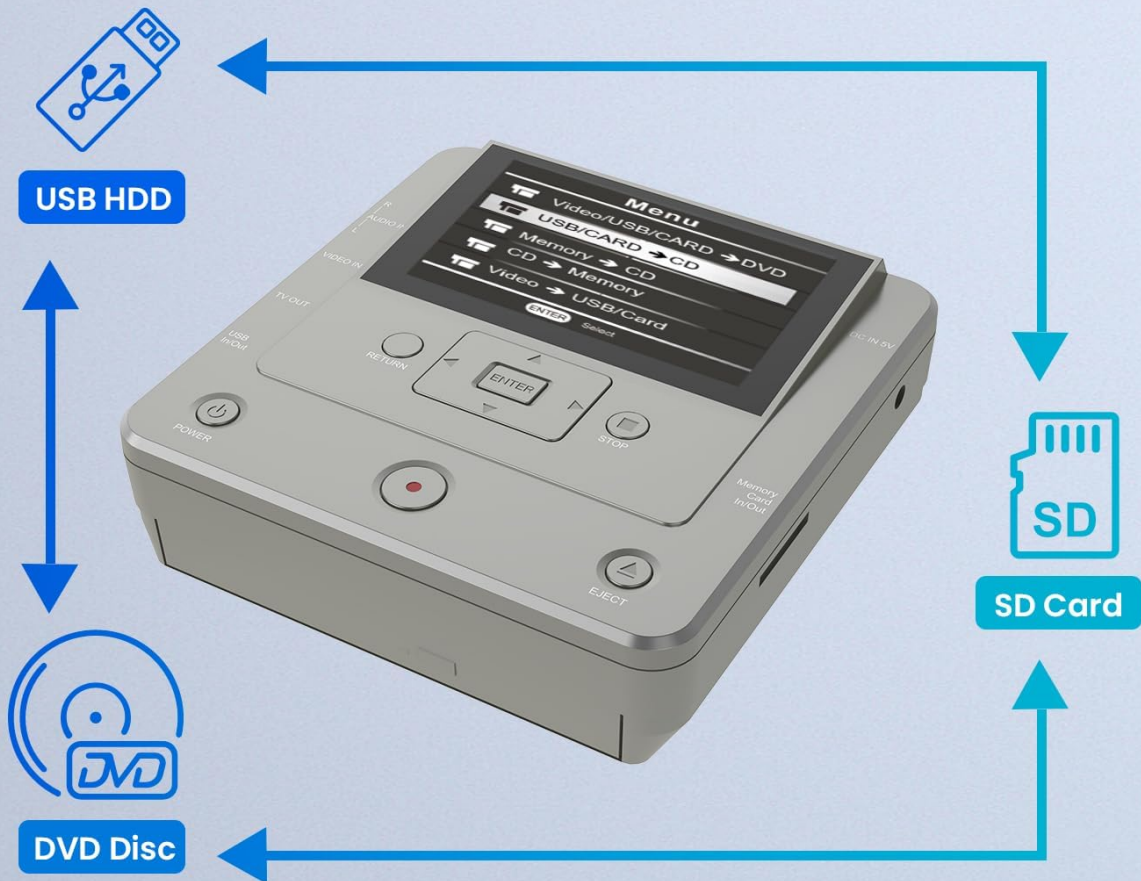


Image: The KOHO KR043B Media Recorder's screen showing a menu that facilitates seamless file transfers between various storage types, including USB HDDs, SD cards, and DVD discs.

# VHS Recorder

VHS to DVD-R/DVD-RW/USB/SD/HDD



Image: A diagram detailing the 'Cross-Format Clone' feature of the KOHO KR043B, which enables bidirectional copying of files between four different storage devices: SD card, USB drive, external HDD, and DVD-RW.



Image: A diagram illustrating the process of copying content from a DVD player to various digital storage formats, including SD card, USB drive, external HDD, or DVD-RW, using the KOHO KR043B Media Recorder.

# Smart Phone WIFI Copy

Smart Phone WIFI to DVD-R/DVD-RW/USB/SD/HDD Copy

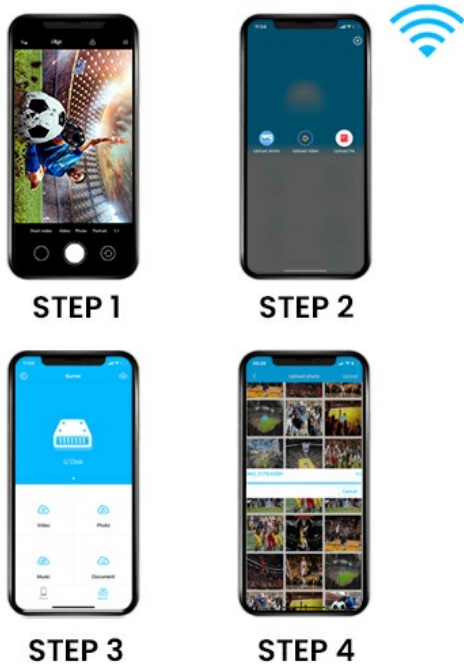 


Image: A diagram illustrating the process of converting VHS tapes to digital formats using the KOHO KR043B, showing output options to DVD/CD, portable HDD, USB drive, or SD card.

## 5. APP & WiFi TRANSFER

The KOHO KR043B features an exclusive app, "Friendly Memories," for wireless transfer of media from your smartphone.

1. Download the free "Friendly Memories" app from the iOS App Store or Google Play Store.
2. Connect your smartphone to the recorder's WiFi network (no internet required).
3. Within the app, select the pictures and video files you wish to transfer.
4. Transfer them directly to a DVD, USB flash drive, or SD card on the recorder.

**Upload Videos & Pictures wirelessly via FREE App,  
No Network Required**

The advertisement features a central image of the KOHO KR043B Media Recorder, a grey device with a screen and various buttons. To its left, a hand holds a smartphone displaying the 'Friendly Memories' app interface, which shows storage options (2GB available, 119GB total) and categories for Video, Photo, Music, and Document. To the right, another hand holds a smartphone displaying a video player interface with a play button and a progress bar. Above the recorder, a blue Wi-Fi symbol is shown. Below the main image, there are three promotional elements: a 'Download on the App Store' badge, a 'PRE-REGISTER ON Google Play' badge, and a 'Friendly Memories' app card with an 'OPEN' button. At the bottom, a blue banner contains the text: **With the "Friendly Memories" APP, the phone can play videos from DVD/USB/SD cards.**

Image: The KOHO KR043B Media Recorder shown alongside a smartphone running the 'Friendly Memories' app, demonstrating the wireless upload of videos and pictures from the phone to the recorder's storage options.

Video: A demonstration of the smartphone WiFi transfer feature of the KOHO VHS to DVD Recorder, showing how to copy media from a smartphone to DVD, USB, or SD/HDD.



Image: A step-by-step diagram illustrating the Smart Phone WiFi Copy function, detailing how to transfer content from a smartphone to DVD, USB, SD, or HDD using the KOHO KR043B Media Recorder.

## 6. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your KOHO KR043B Media Recorder.

- **Cleaning:** Regularly wipe the device with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. For the LCD screen, use a screen-specific cleaning solution and a microfiber cloth.
- **Disc Handling:** Always handle DVDs by their edges to prevent fingerprints and scratches. Store discs in their cases when not in use.
- **Storage:** Store the device in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Ventilation:** Ensure the device's ventilation openings are not blocked during operation to prevent overheating.

## 7. TROUBLESHOOTING

---

If you encounter issues with your KOHO KR043B, refer to the following common problems and solutions:

- **Device does not power on:** Ensure the AC power adapter is securely connected to both the device and a working electrical outlet. If the power button is unresponsive, try pressing it firmly or holding it for a few seconds.
- **No video/audio signal from source:** Verify that all RCA (AV) cables are correctly connected to the 'VIDEO IN' and 'AUDIO IN' ports on the recorder and the output ports of your source device. Ensure the source device is powered on and playing media. Check if your source device's output is compatible with RCA/AV.
- **"Disk not ready" error:** This usually indicates an issue with the inserted DVD. Ensure the disc is clean, unscratched, and inserted correctly. Verify that you are using a compatible DVD-R or DVD-RW disc. Try a different blank disc.
- **USB drive/SD card not recognized:** Ensure the USB drive or SD card is formatted to FAT32. Other formats may not be recognized by the device. Re-insert the storage device securely.
- **Recorded video quality is poor:** The recording quality is dependent on the quality of the original source material. Ensure your source device is providing the best possible signal. The device does not upscale video.
- **No audio during playback/recording preview:** While the device's screen shows video, audio may not be output through the internal speaker during preview. Connect the device to an external TV via HDMI for full audio-visual experience.

- **Files saved in multiple segments:** Some recordings, especially from longer tapes, may be automatically divided into multiple digital files. This is normal behavior and files can be combined using video editing software on a computer.

## 8. SPECIFICATIONS

---

Feature	Specification
Brand Name	KOHO
Model Name	KR043B
Item Weight	1.3 Pounds
Product Dimensions	6.1 x 6.1 x 1.91 inches
Color	Light Grey
Media Type	VHS to DVD Recorder
Resolution (HD Output)	1920x1080
Connector Type	RCA, USB, SD Card, HDMI
Connectivity Technology	Wi-Fi, USB, RCA
Audio Output Mode	Stereo, Surround Sound
Special Features	VHS, DVD, TV, USB, HDD, Mobile Phone, SD Card, Recorder, CDR, Copy

## 9. WARRANTY & SUPPORT

---

For warranty information and technical support, please refer to the documentation included in your product packaging or visit the official KOHO website. Keep your purchase receipt as proof of purchase for any warranty claims.

For direct assistance, you may contact KOHO customer service through their official channels. Details are typically provided in the user manual or on the product's Amazon listing page.